



**smorphi<sup>2</sup>**  
transforming learning with  
transformer robots

assembly & info



# ( contents )

<b>PART LIST</b>	-----	( 02 )
<b>BASIC ASSEMBLY TIPS</b>	-----	( 03 )
<b>SMORPHI ASSEMBLY</b>		
<b>A MECHANICAL</b>	-----	( 05 )
<b>B ELECTRONIC</b>	-----	( 22 )
<b>APP</b>	-----	( 41 )
<b>FURTHER EXPLORATION</b>	-----	( 44 )

# ( part list )

8 x Acrylic Base Plate



4 x Aluminium Base Plate



8 x Base Skirt Panel A



8 x Base Skirt Panel B



8 x Mecanum Wheel (Right)



8 x Mecanum Wheel (Left)



16 x Mecanum Motor



16 x Motor Shaft Sleeve



16 x Motor Mount



6 x Solenoid



6 x Solenoid Latch Mount



6 x Solenoid Latch Guide



6 x Solenoid Catch



All colors of parts are represented accurately here.  
In the assembly steps, colors of some parts will be changed for diagram clarity.

6 x Hinge Mount



28 x Hex F-F M3 Nylon 10mm



3 x Hinge Mechanism



200 x Cap Screw M3x5



1 x Battery



50 x Cap Screw M3x25



2 x Battery bracket



15 x Countersunk Screw M4x8



1 x Masterboard (ESP32)



2 x Wing Screw M3x5



4 x Slaveboard



1 x USB-C Cable



1 x Sound Sensor



8 x 4-pin Connector



1 x Temperature Sensor



4 x 8-pin Connector



4 x IR Sensor



1 x Battery Charger



1 x Pixy2 Camera



1 x Ceramic Screwdriver CD-25



1 x Pixy2 Mount



1 x HEX Key 1.5mm



10 x Sensor Lock




1 x Ribbon cable  
(included in pixycam package)




# ( basic assembly tips )

## Symbols Used


	Rotate Part
	Assembly Path
	Important Note
SA	Sub-Assembly

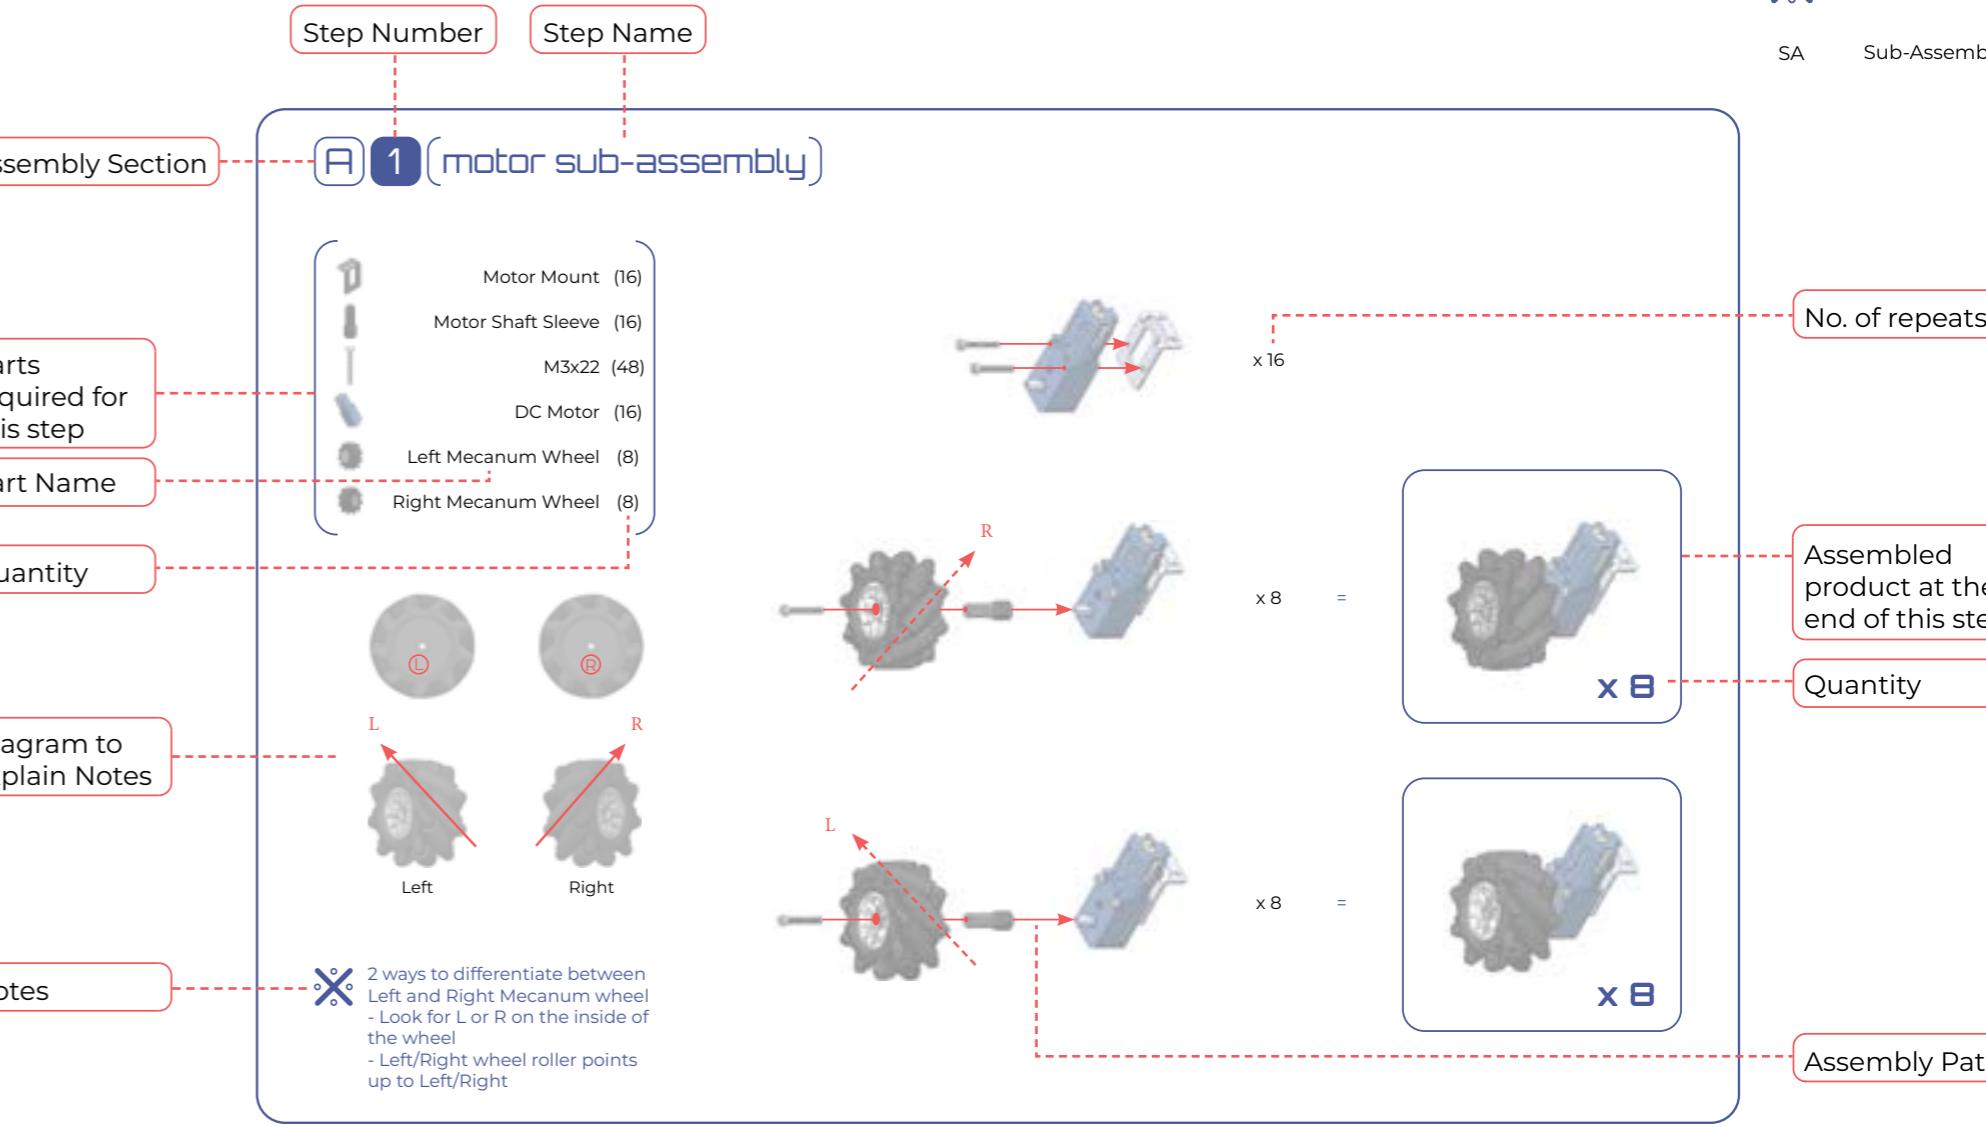


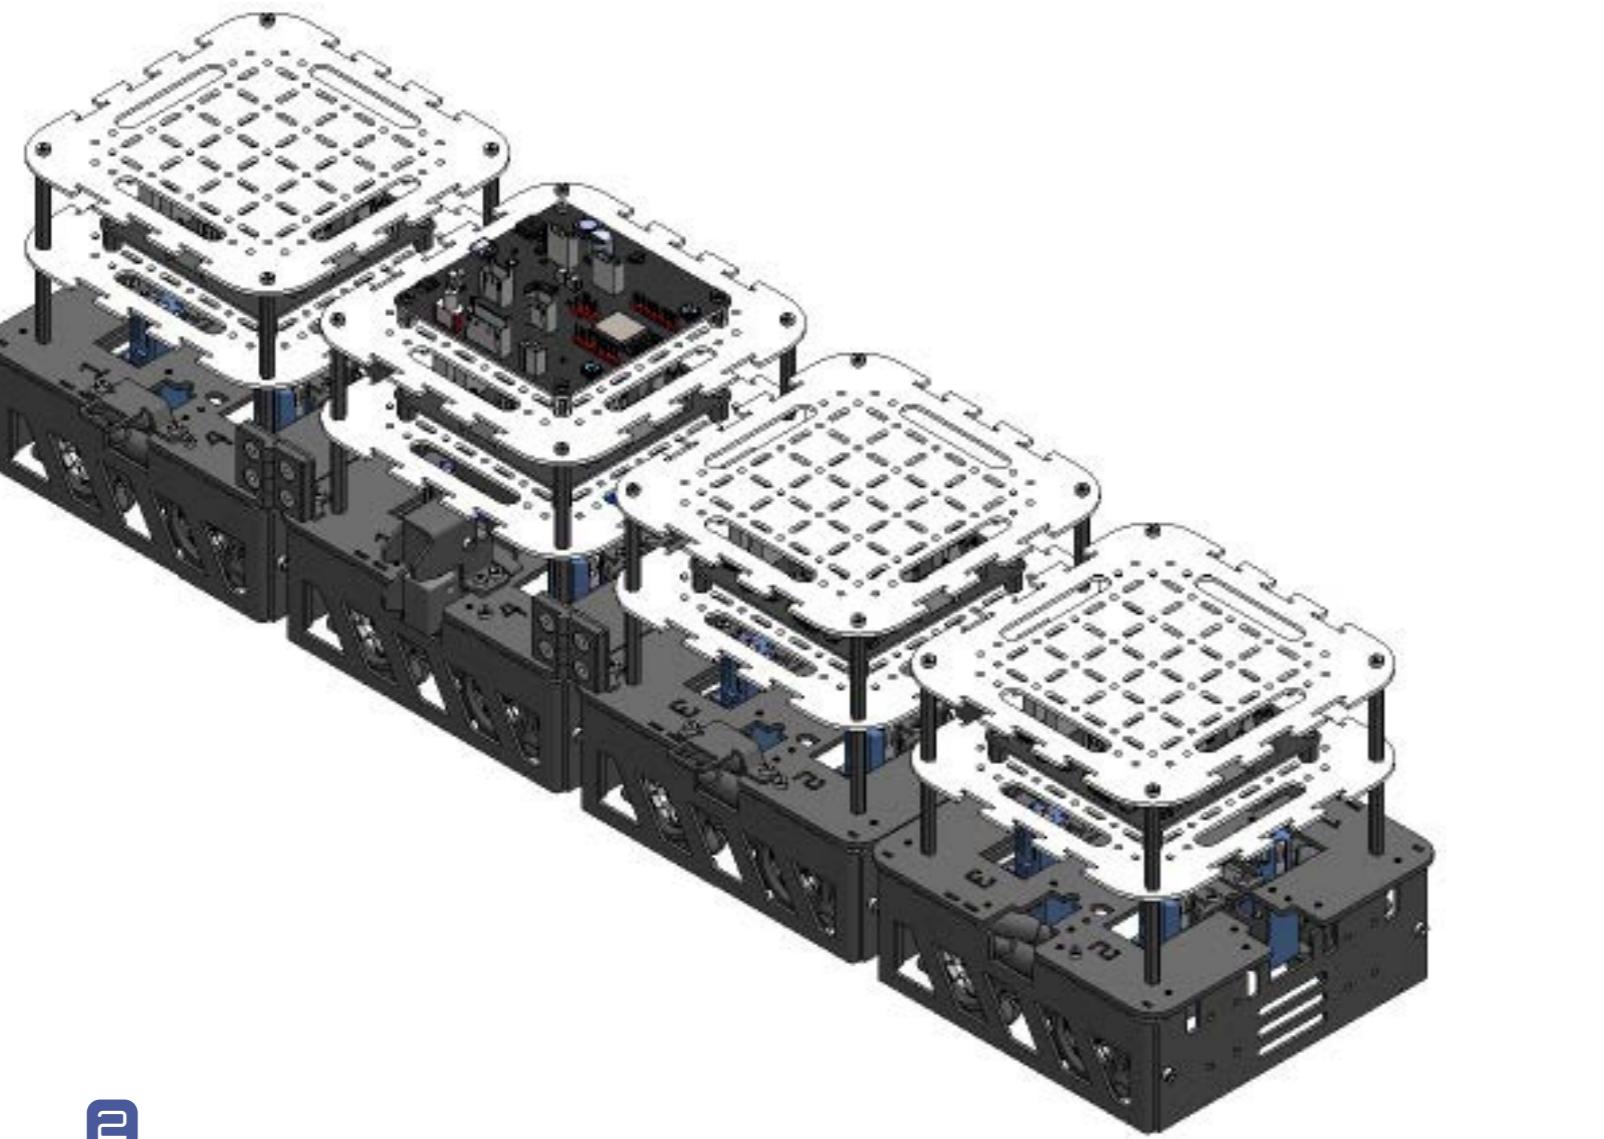


**A 1 (motor sub-assembly)**

	Motor Mount (16)
	Motor Shaft Sleeve (16)
	M3x22 (48)
	DC Motor (16)
	Left Mecanum Wheel (8)
	Right Mecanum Wheel (8)







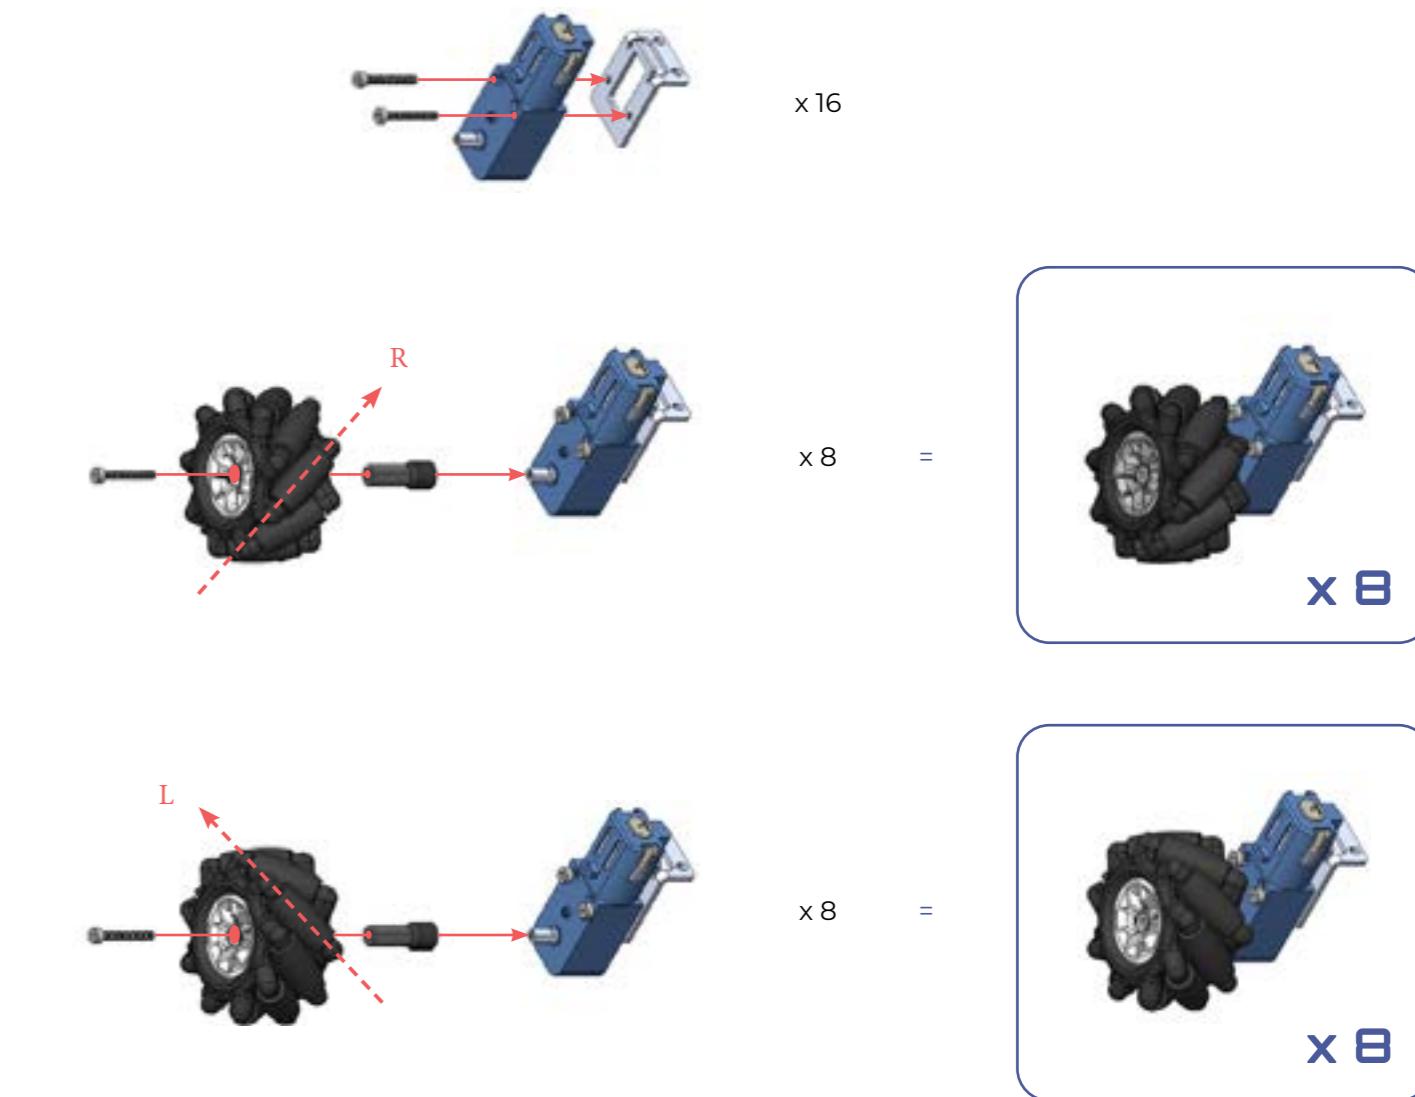


## A2 (base module sub-assembly)

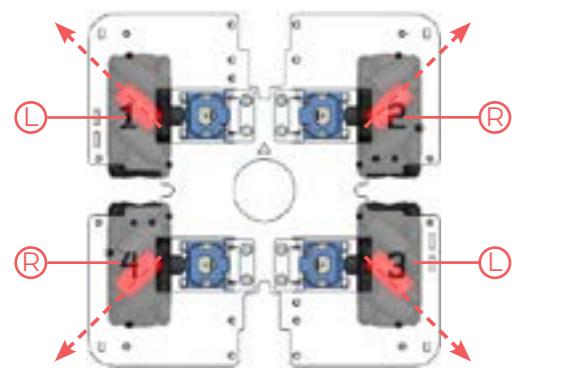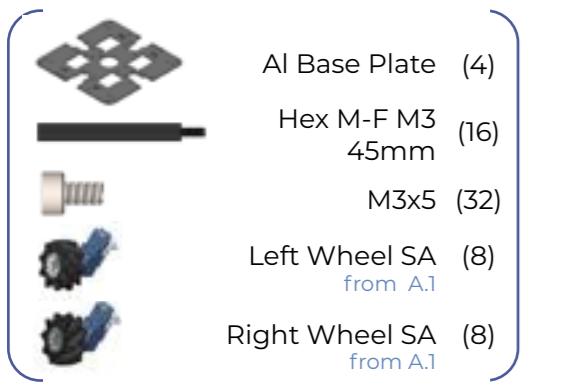

✖ Make sure that the numbers are facing the right way up as shown in the plan view above.

✖ Before attaching each wheel, check that the wheel is of the correct orientation for each numbered slot.

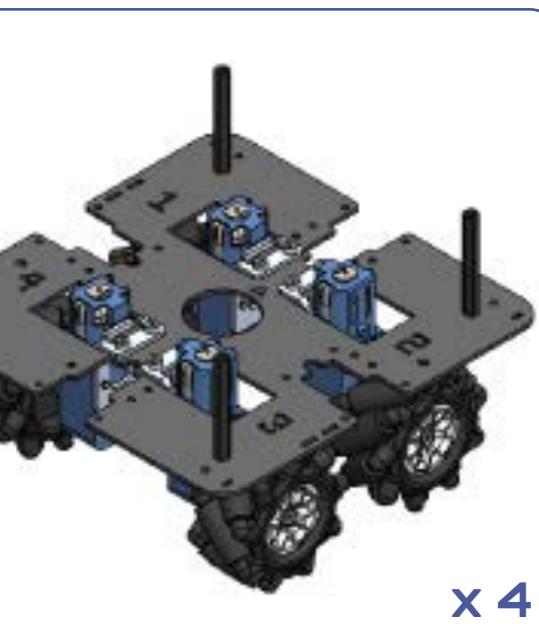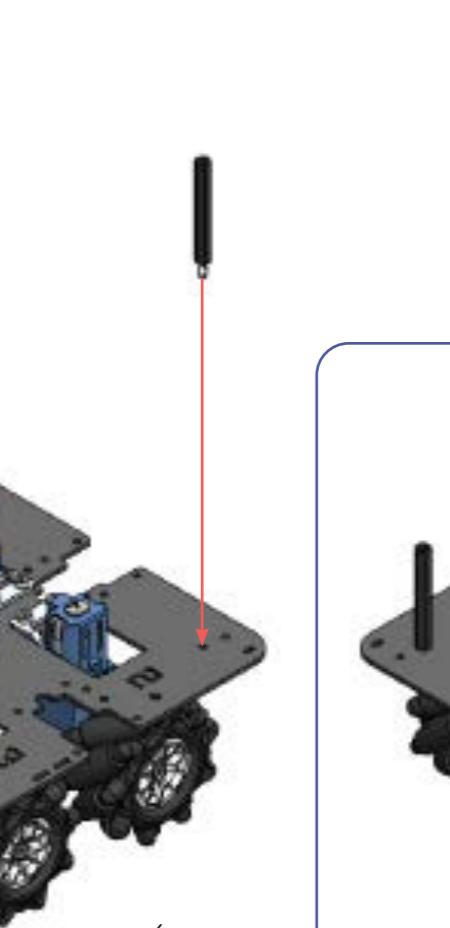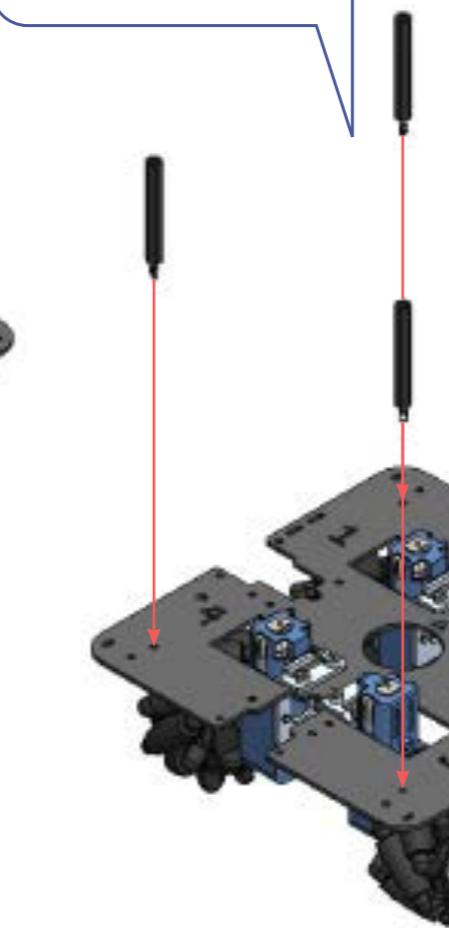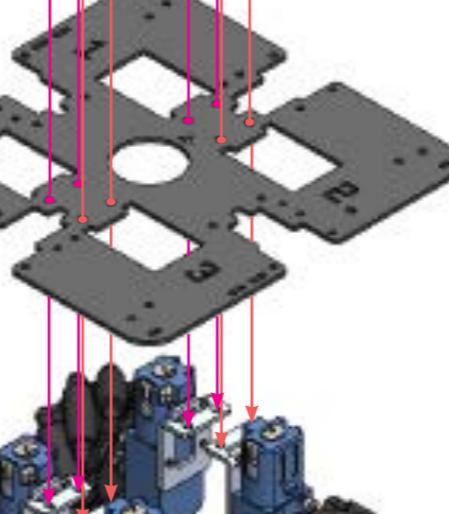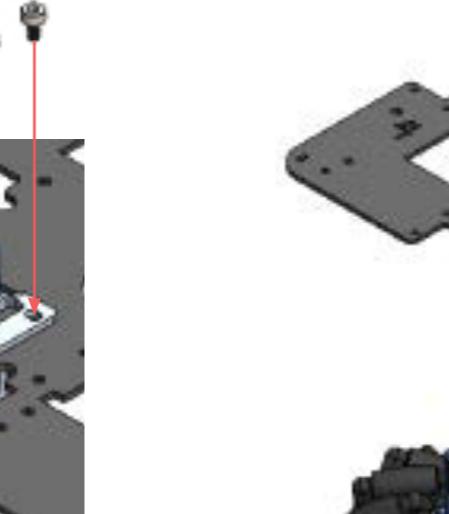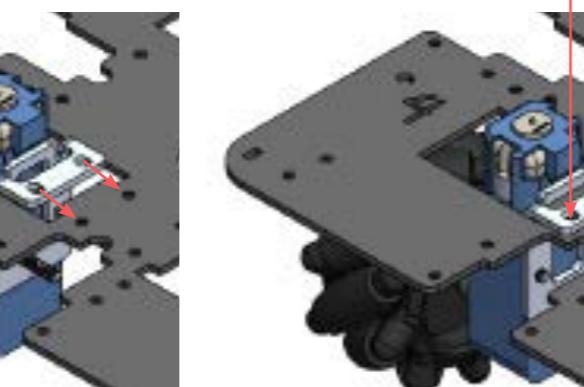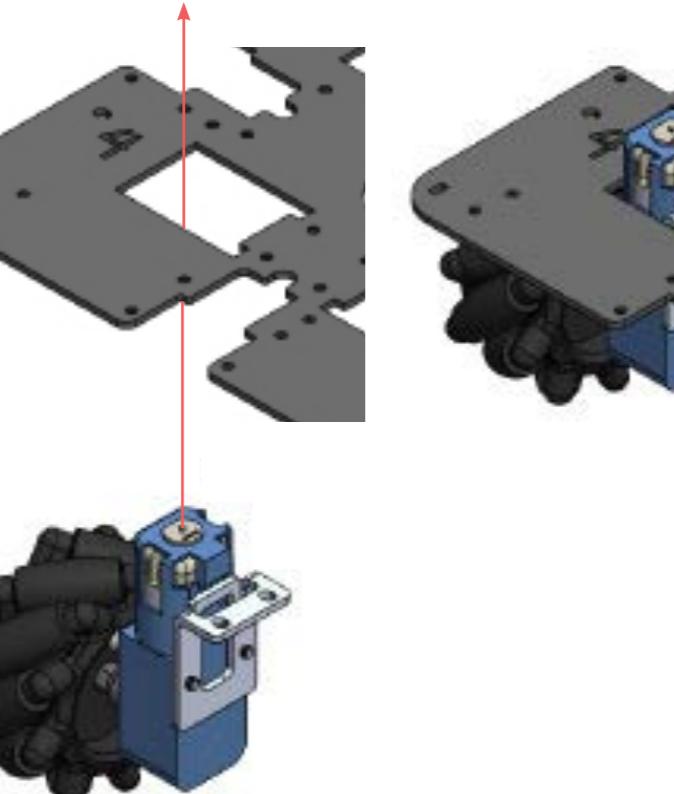



x 4

=






x 4

plan view

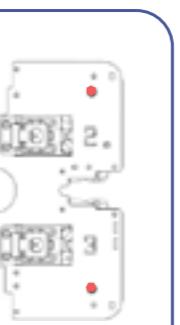

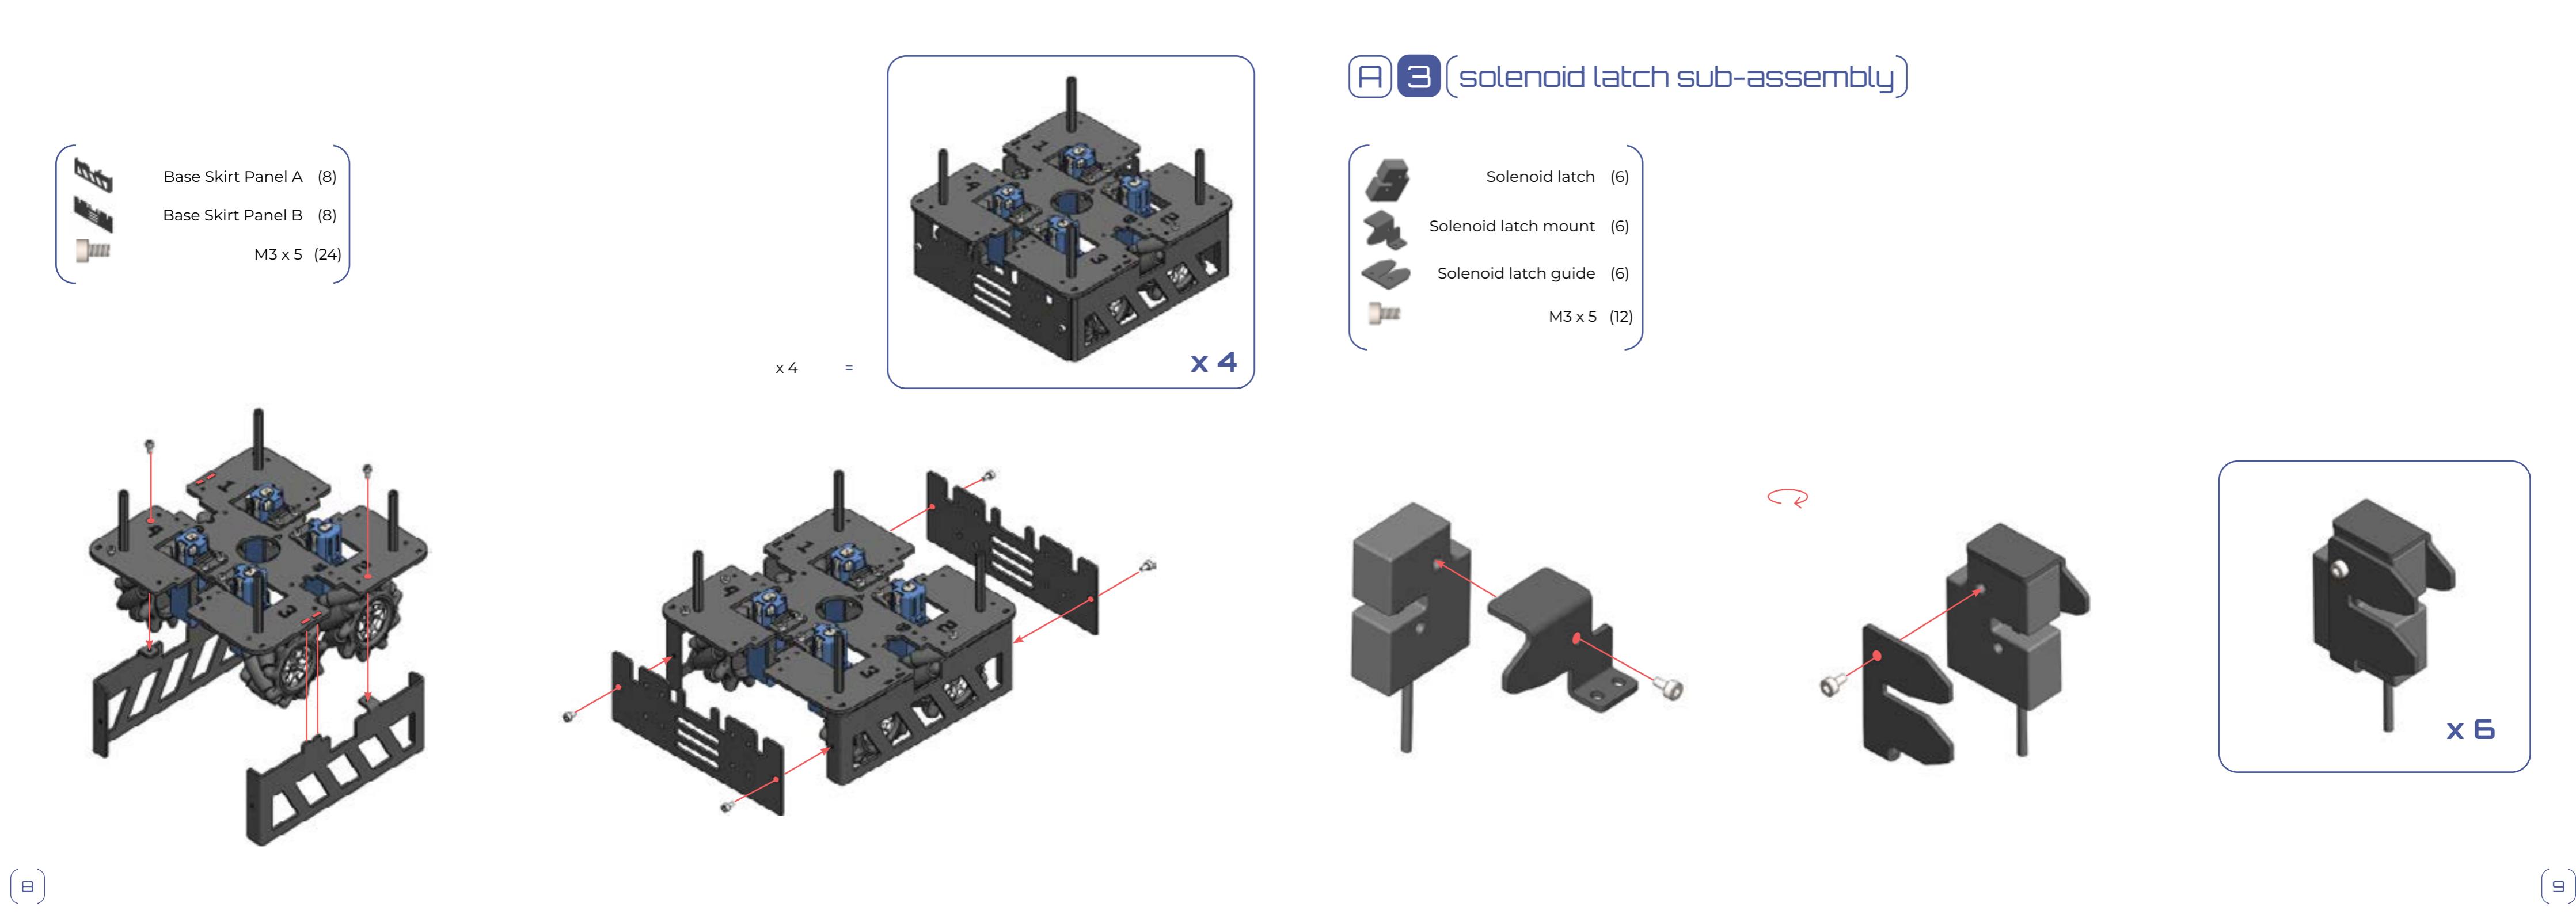

## A 4 (module 1 mechanical sub-assembly)


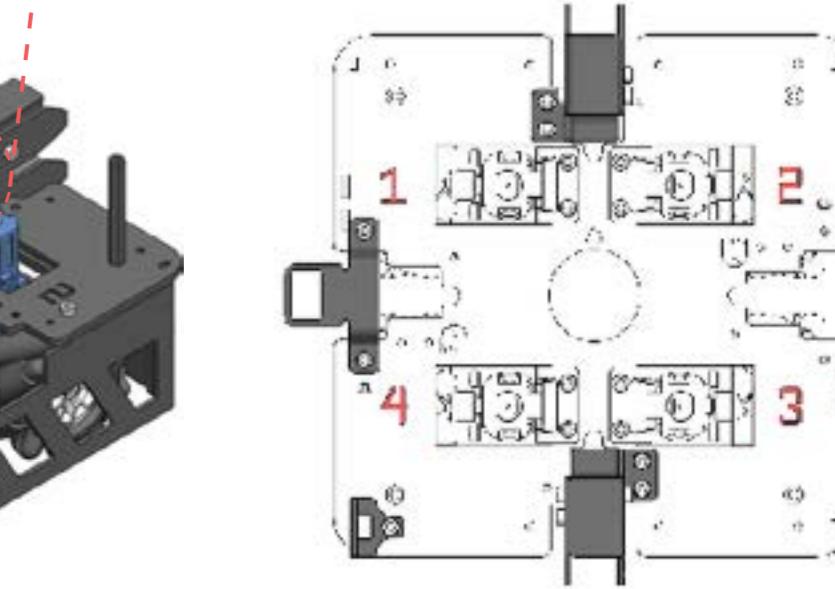
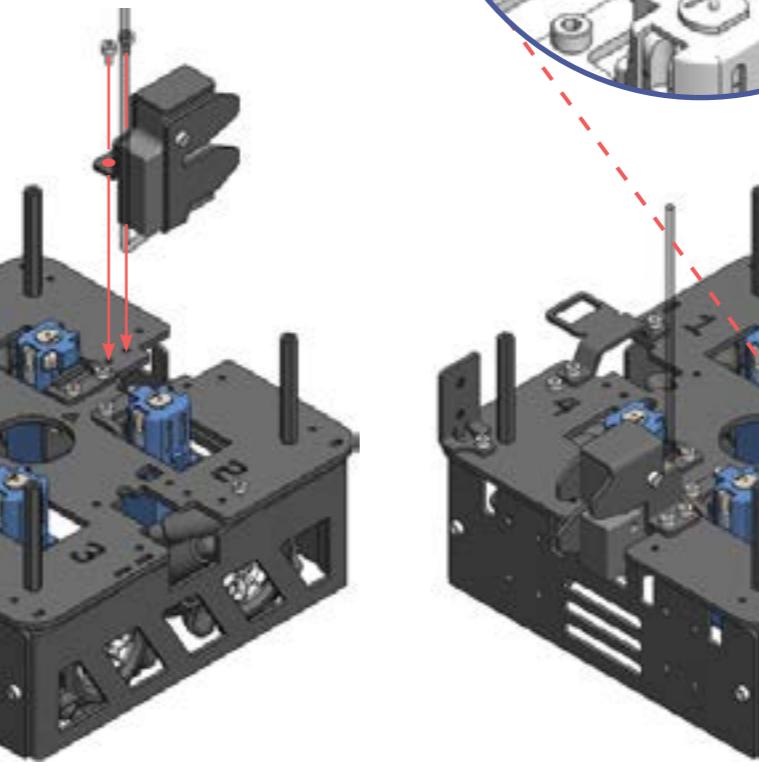
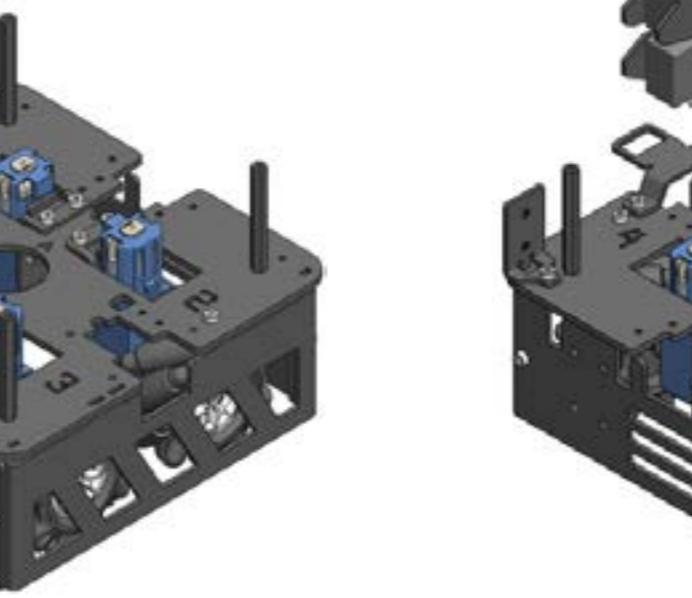
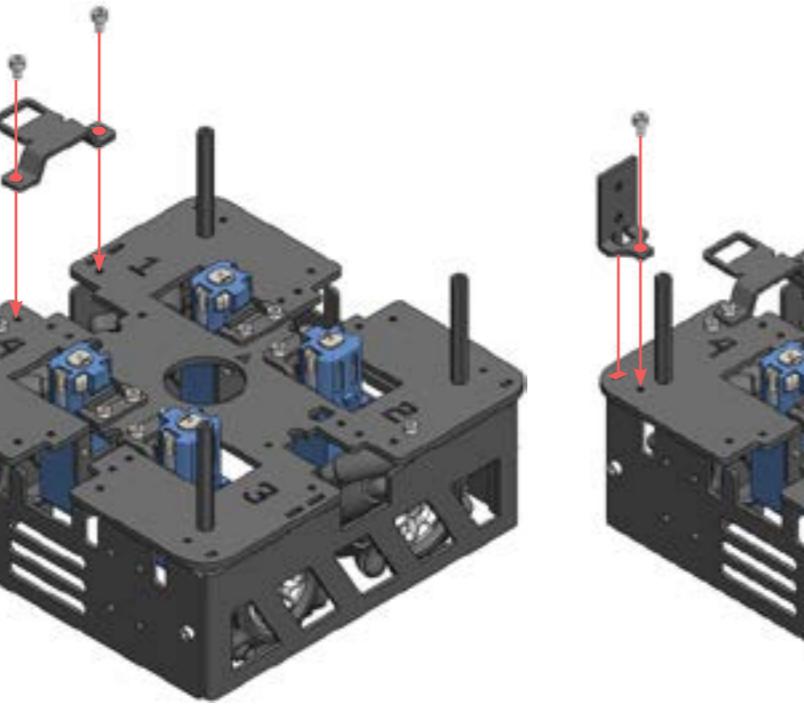
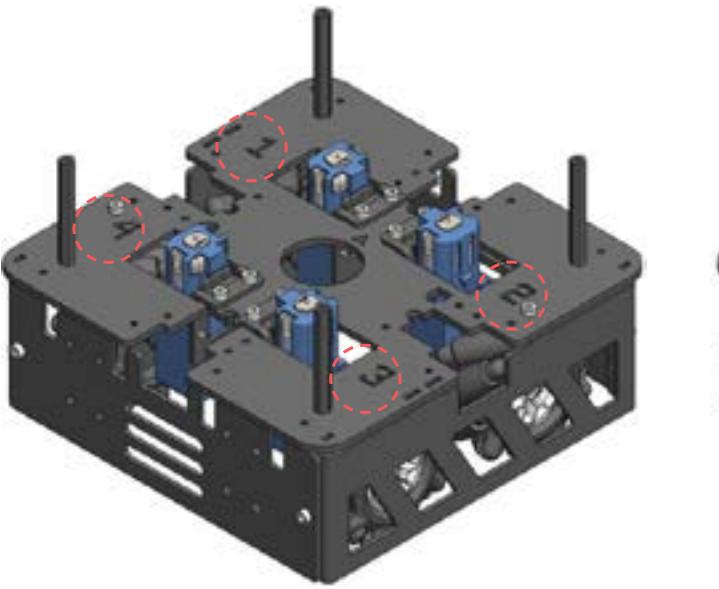


✖ Pay attention to the numbers and their positions in relation to the parts being attached.


✖ Check that the parts have been attached in the right location, in relation to the numbers.

## A5 (module 2 mechanical sub-assembly)

Hinge mount	(2)
Solenoid catch	(2)
Solenoid latch SA from A.3	(1)
Battery bracket	(2)
Li-ion Battery	(1)
Base Module SA from A.2	(1)
M3 x 5	(9)
Wing Screw M3 x 5	(1)

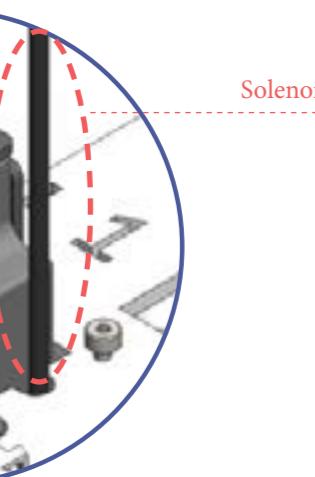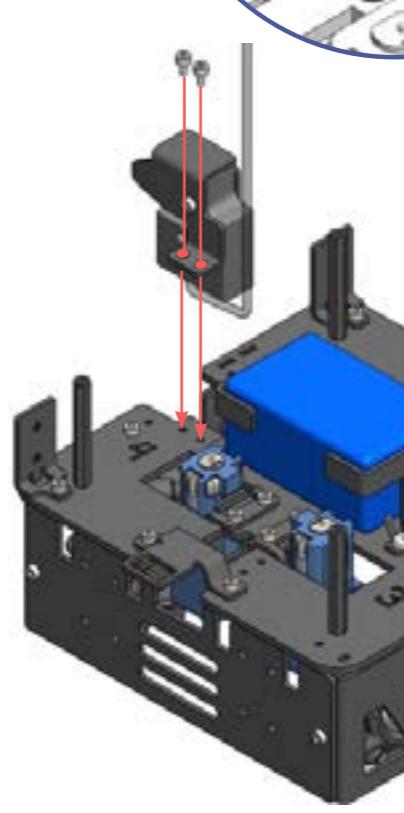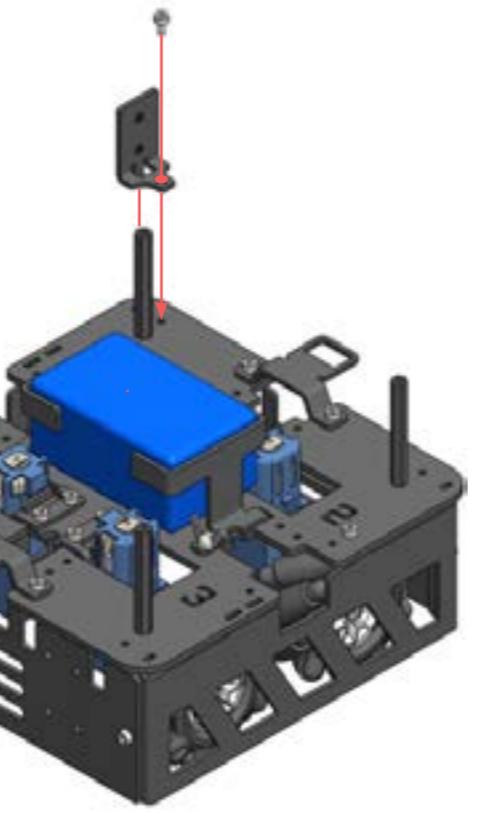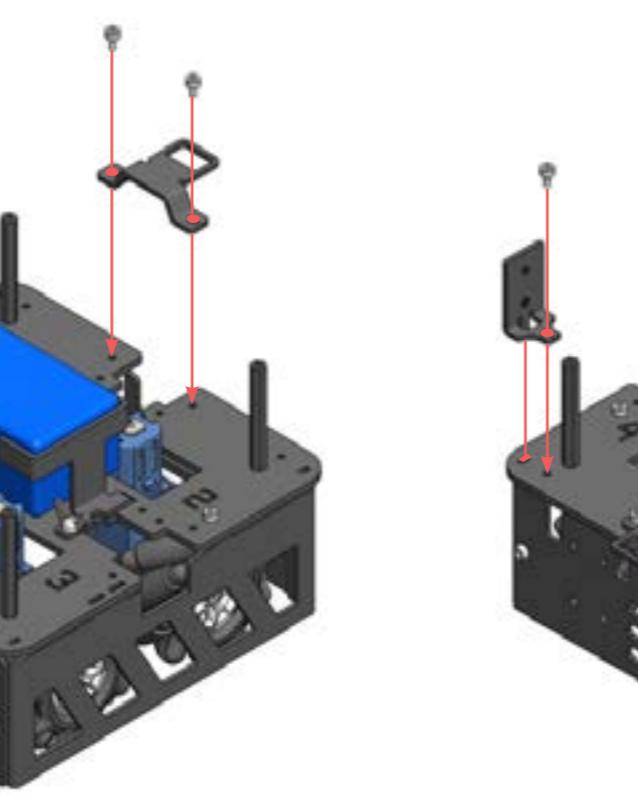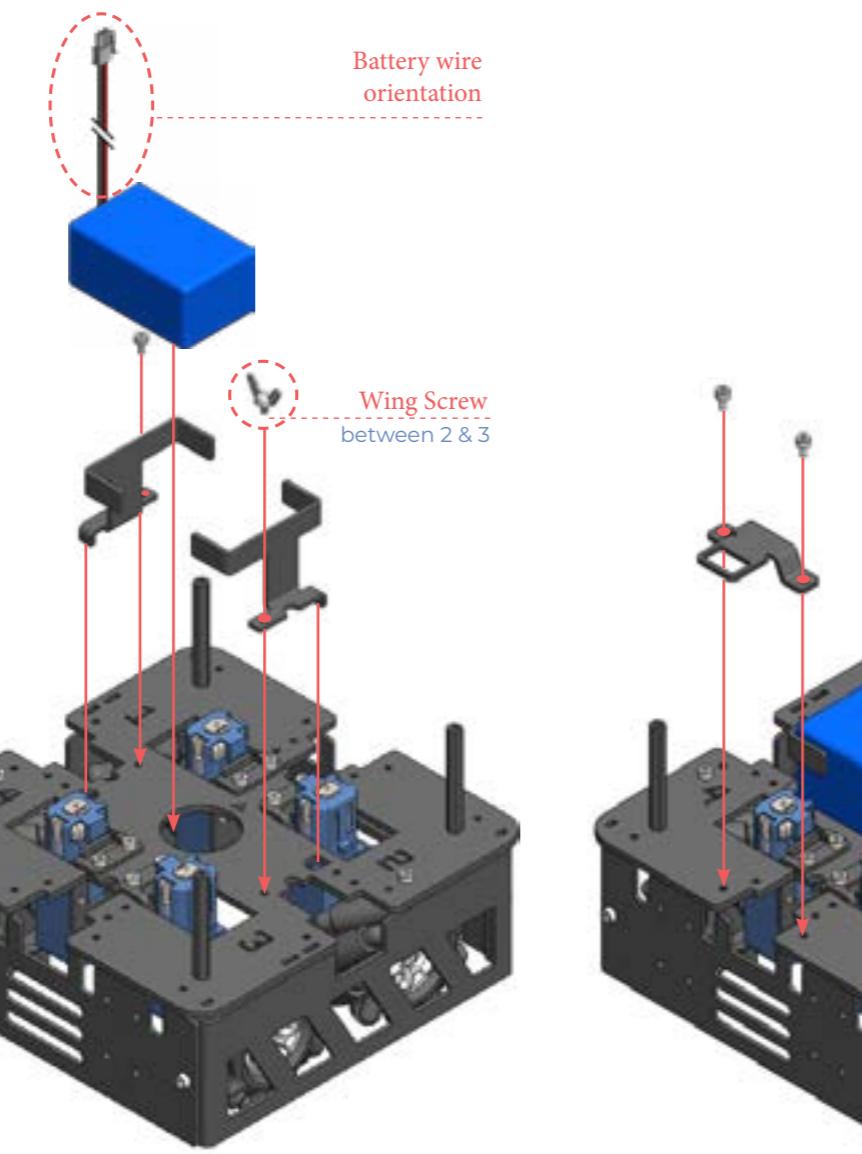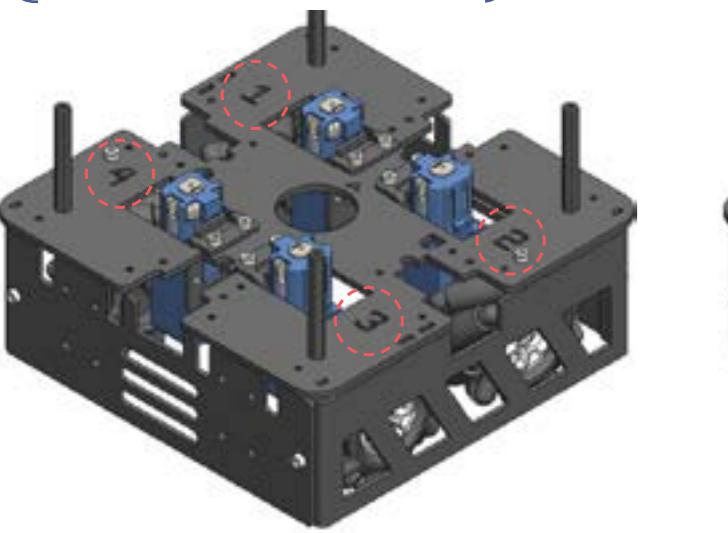





Solenoid Wire

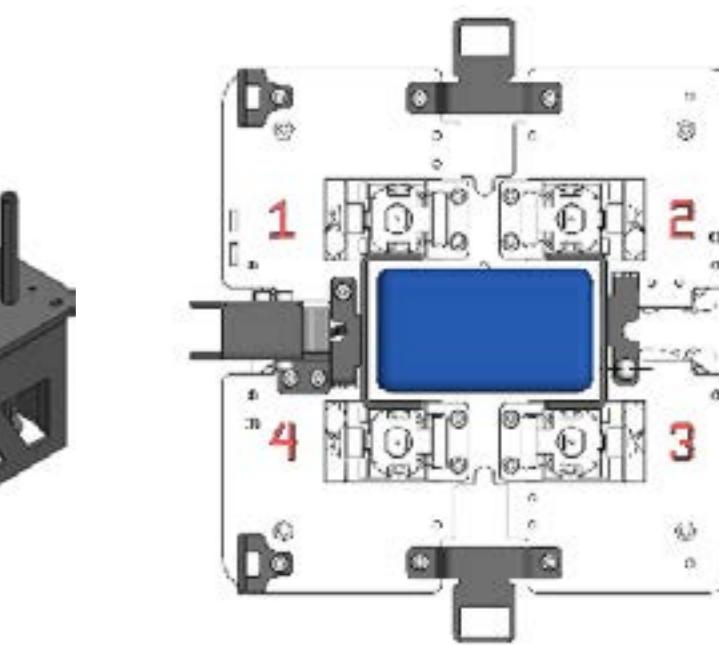


✖ Pay attention to the numbers and their positions in relation to the parts being attached.

✖ Check that the parts have been attached in the right location.

## A6 [module 3 mechanical sub-assembly]

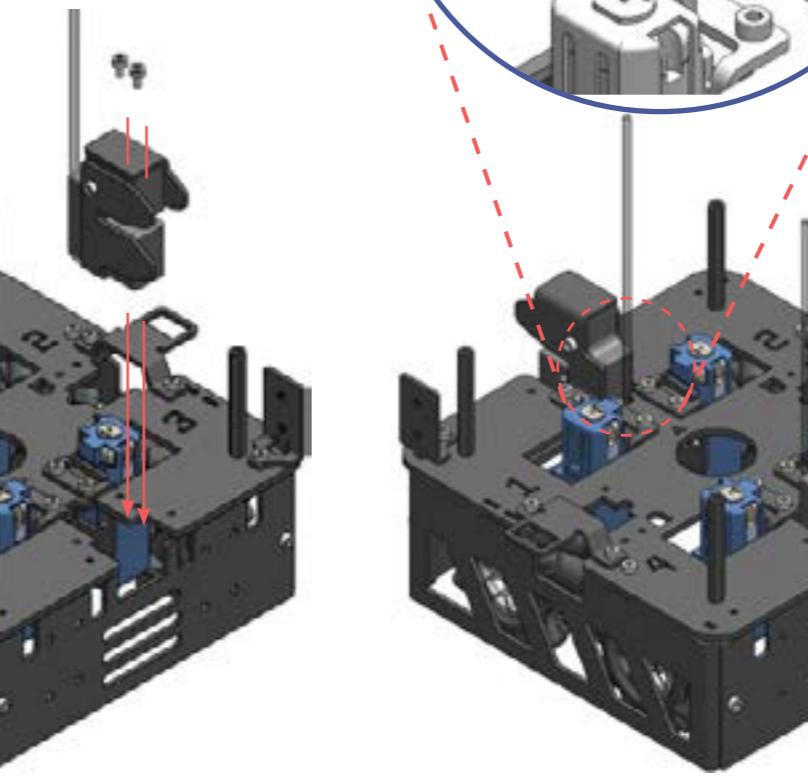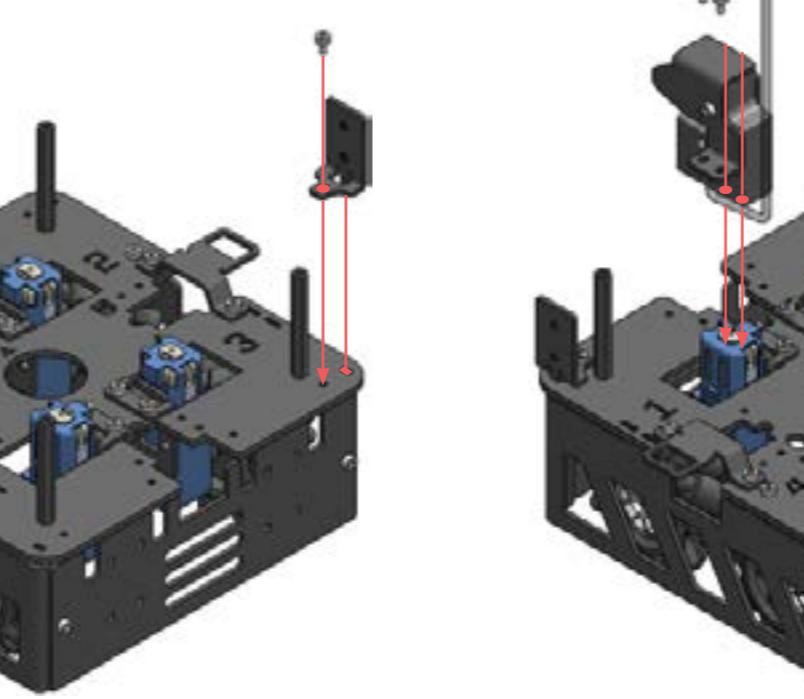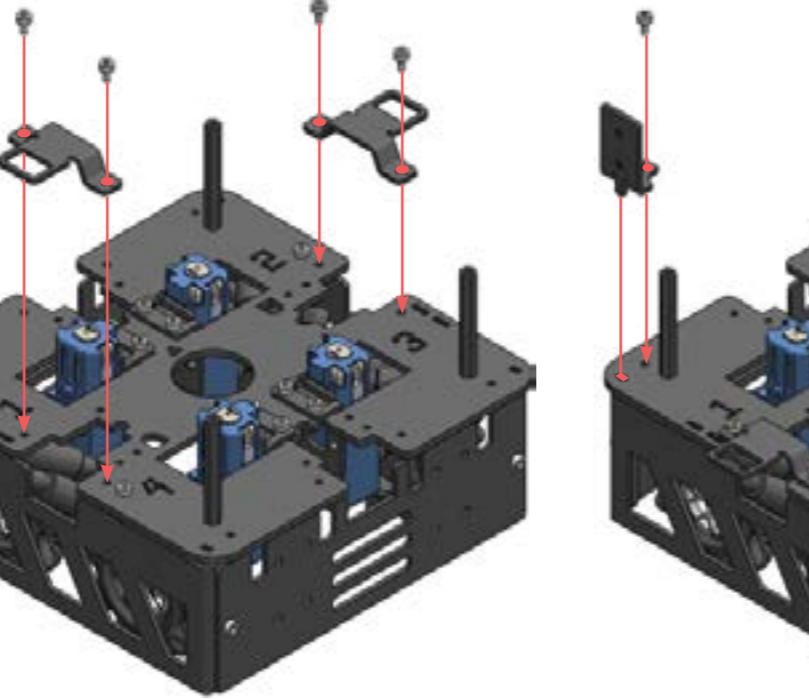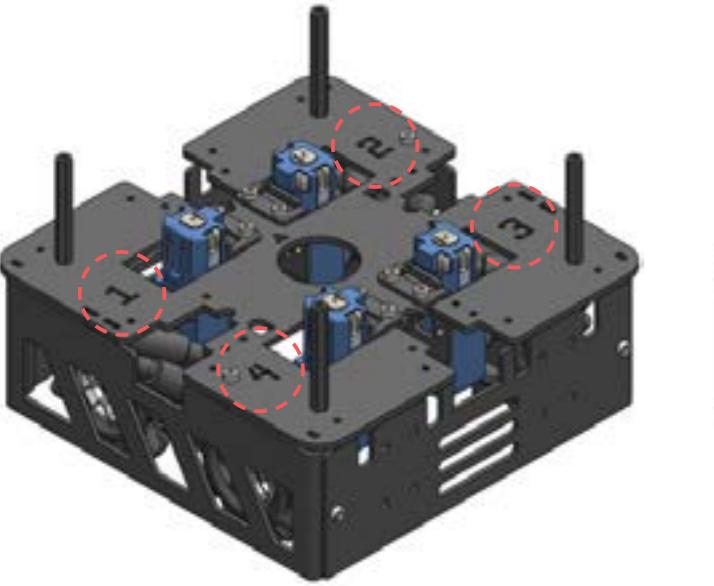








Solenoid Wire

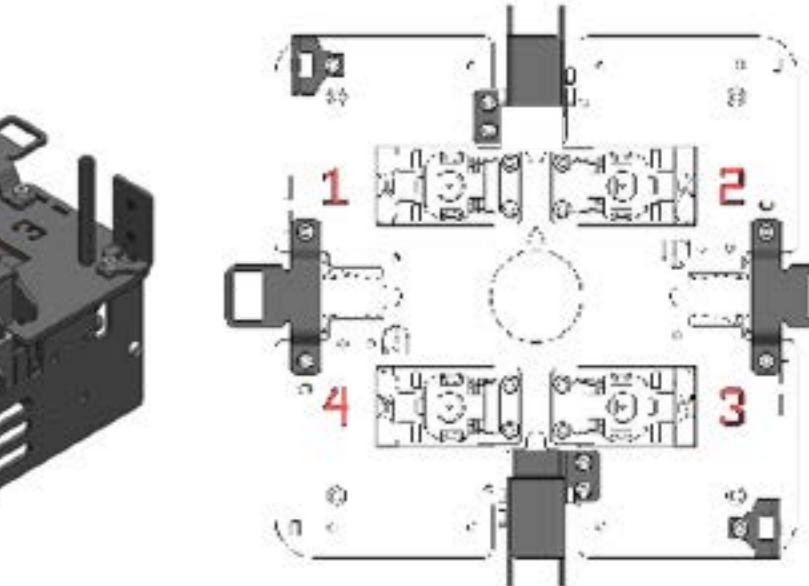

✖ Pay attention to the numbers and their positions in relation to the parts being attached.

✖ Check that the parts have been attached in the right location, in relation to the numbers.



## A7 (module 4 mechanical sub-assembly)

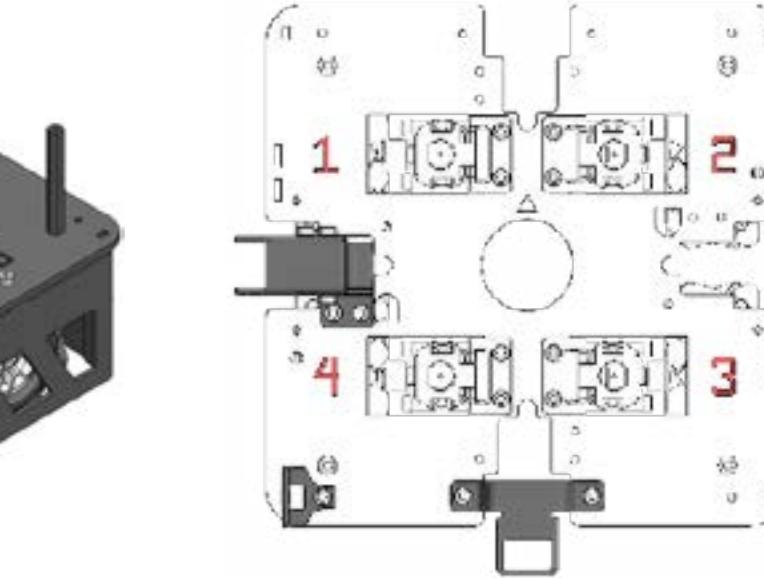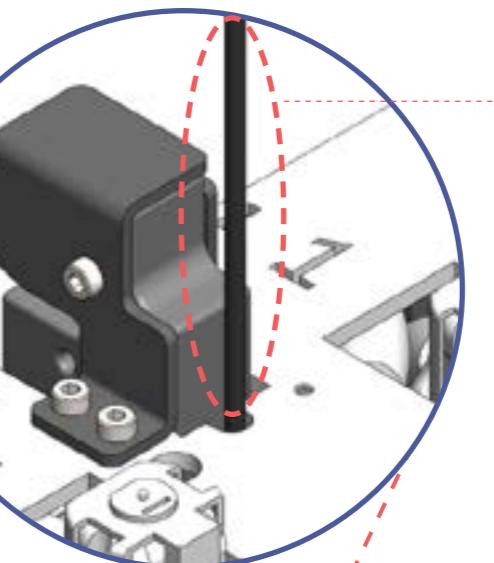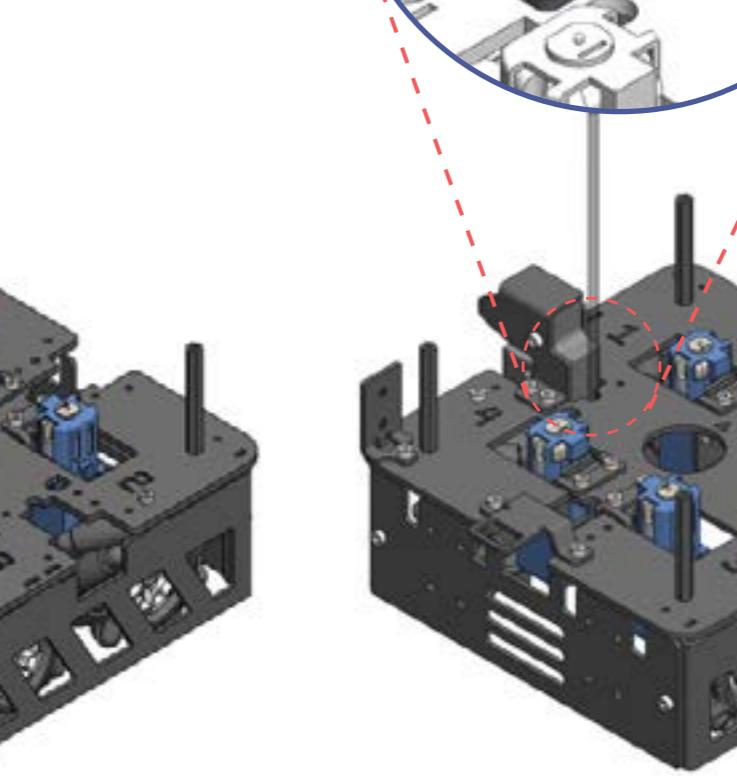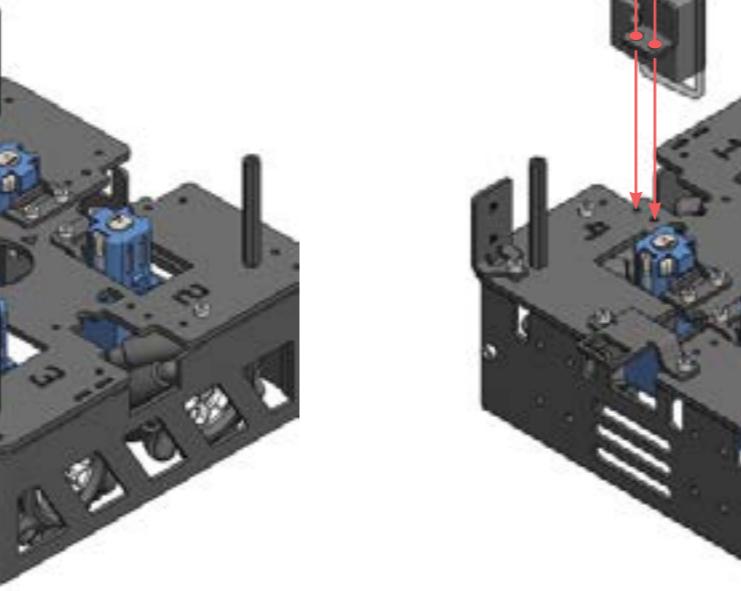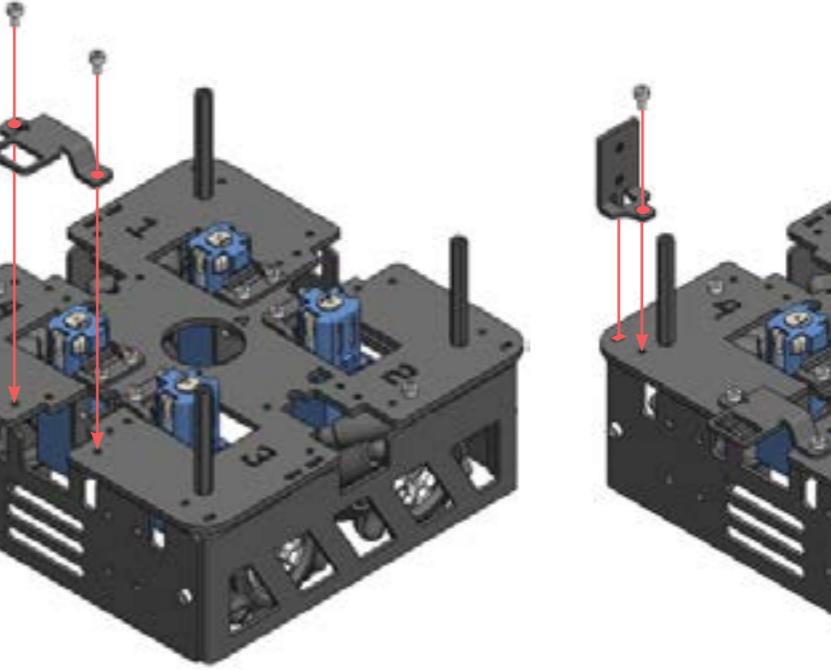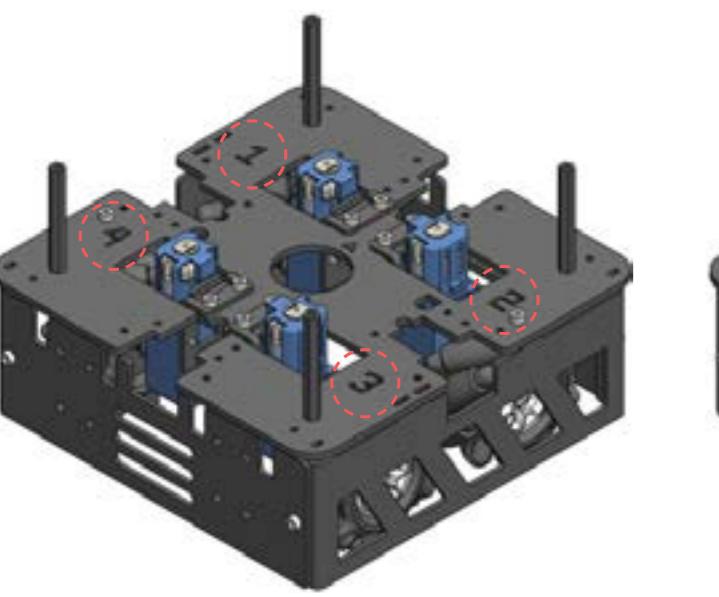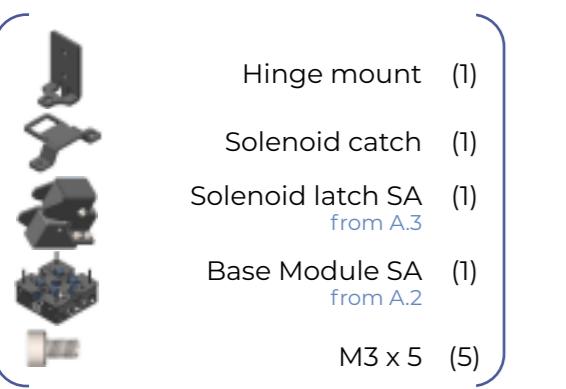




✗ Pay attention to the numbers and their positions in relation to the parts being attached.




✗ Check that the parts have been attached in the right location.

## A8 (full mechanical assembly)

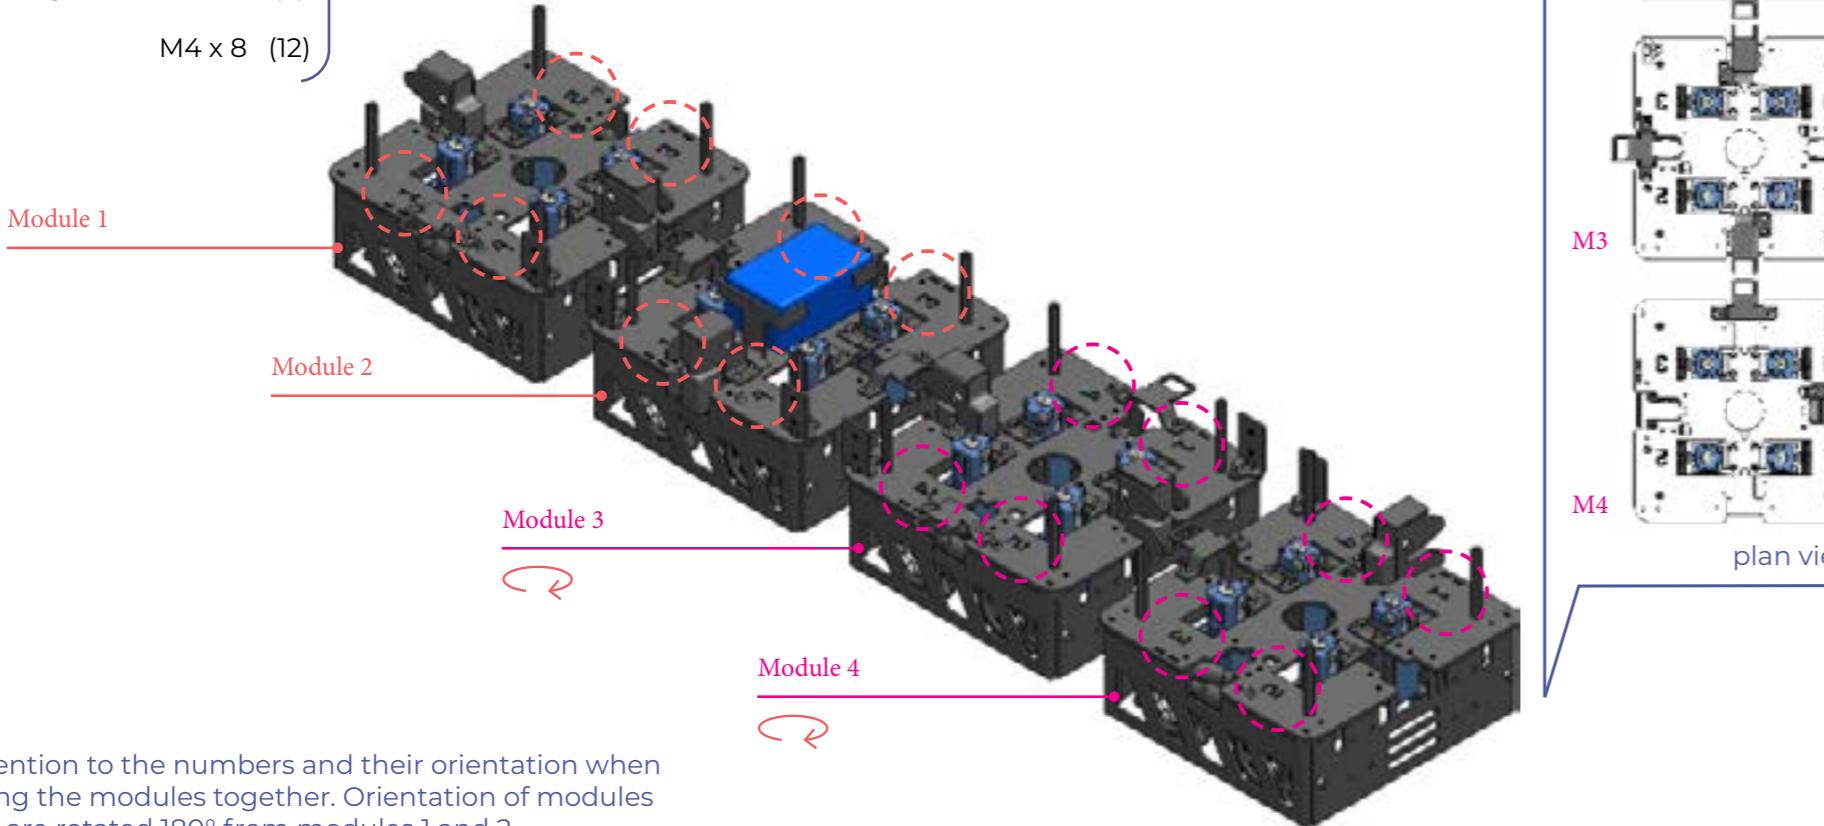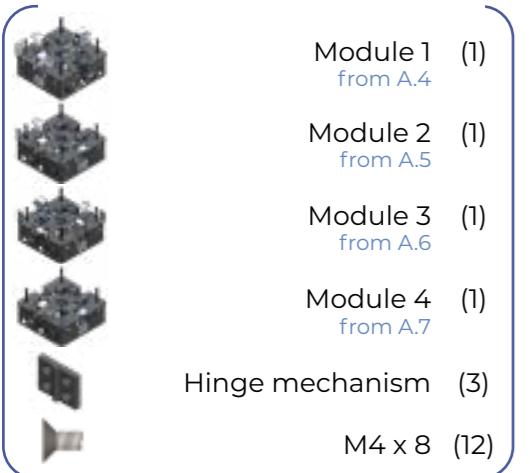

Pay attention to the numbers and their orientation when attaching the modules together. Orientation of modules 3 and 4 are rotated 180° from modules 1 and 2.

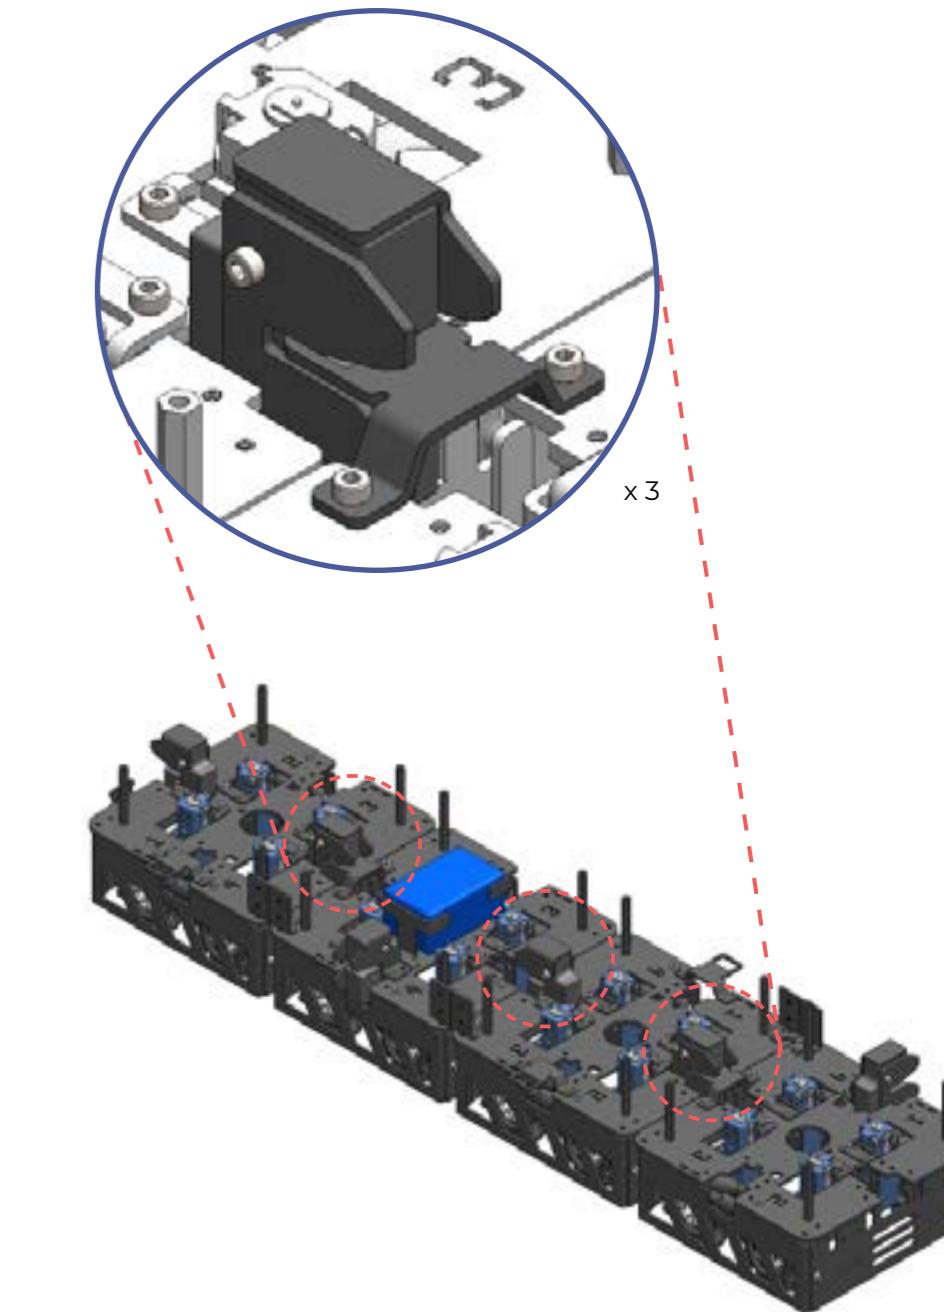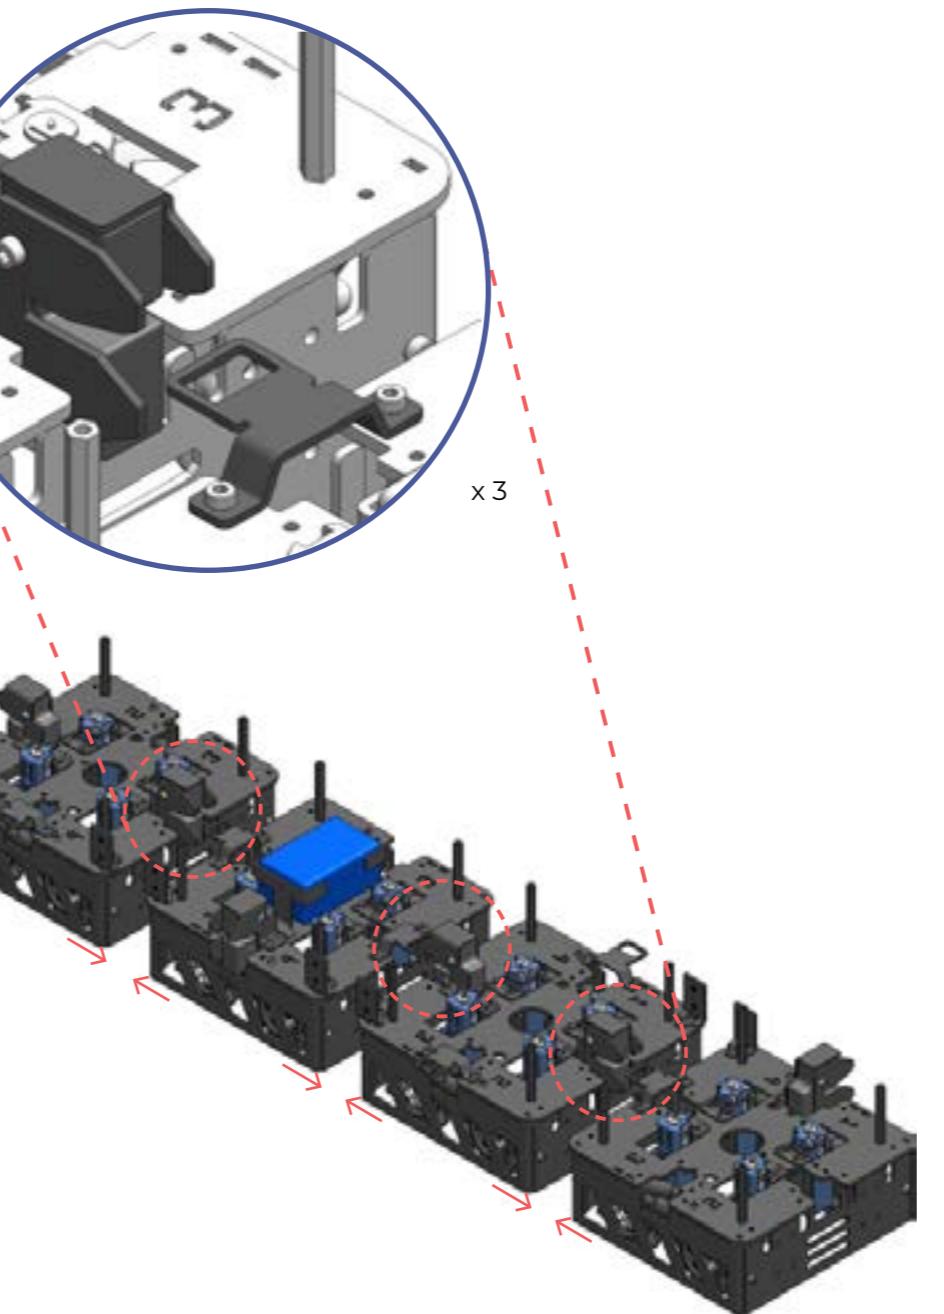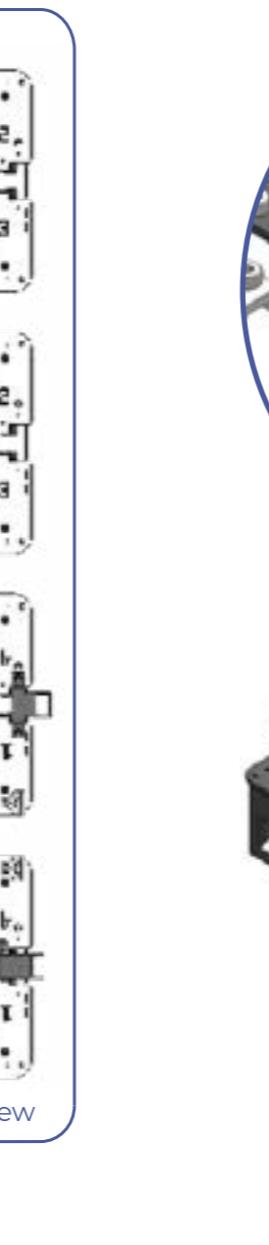


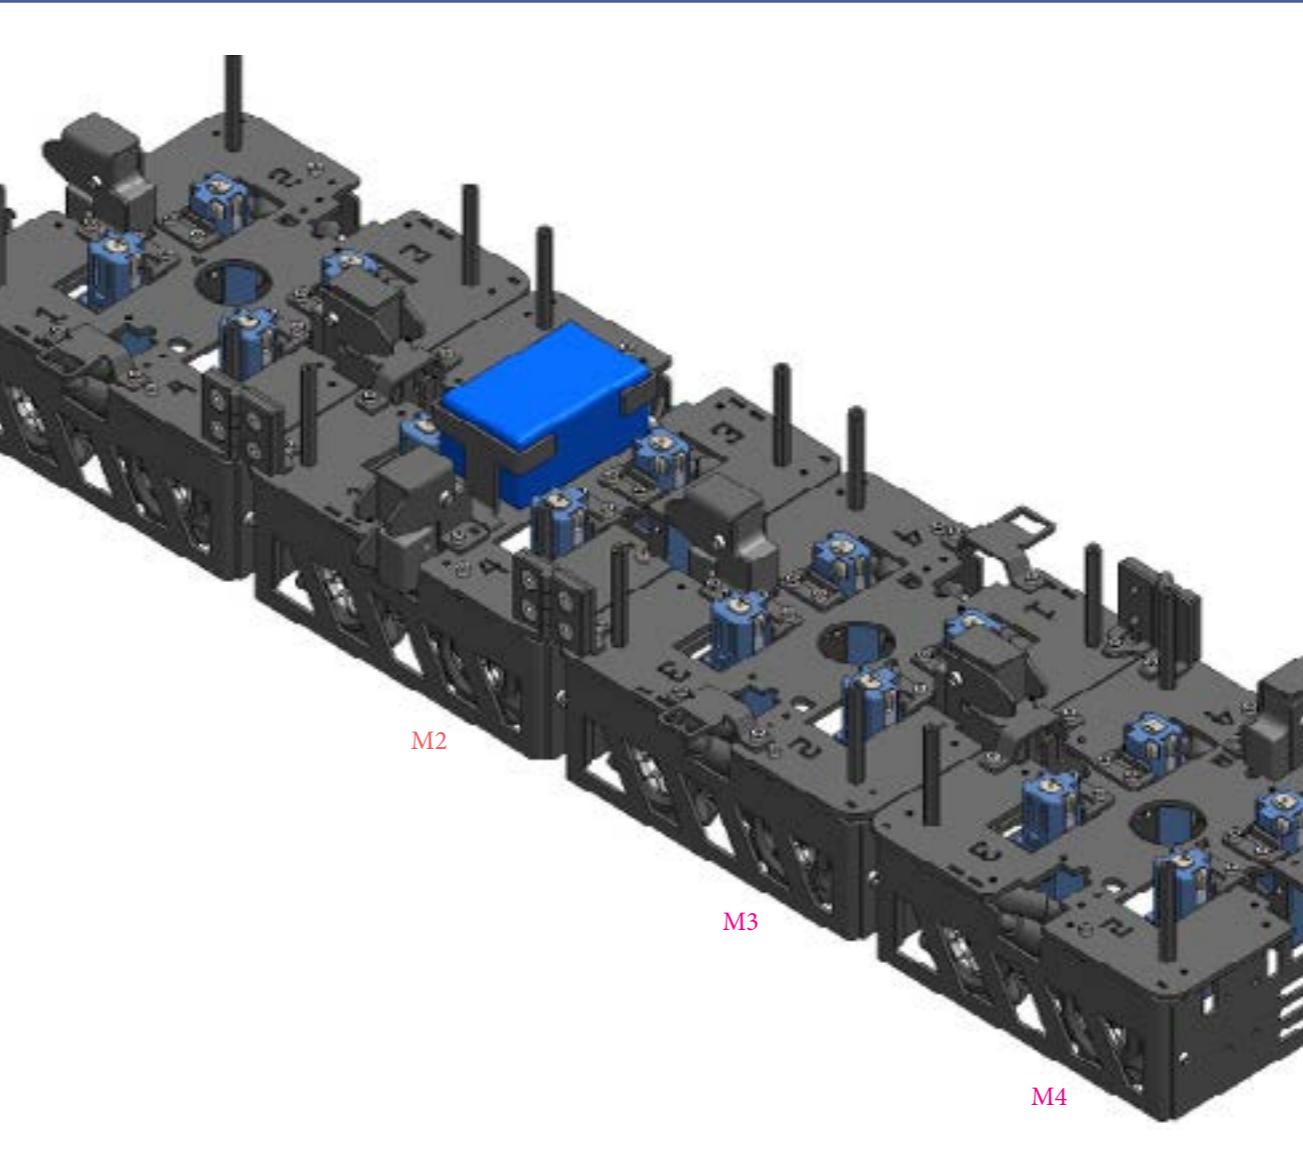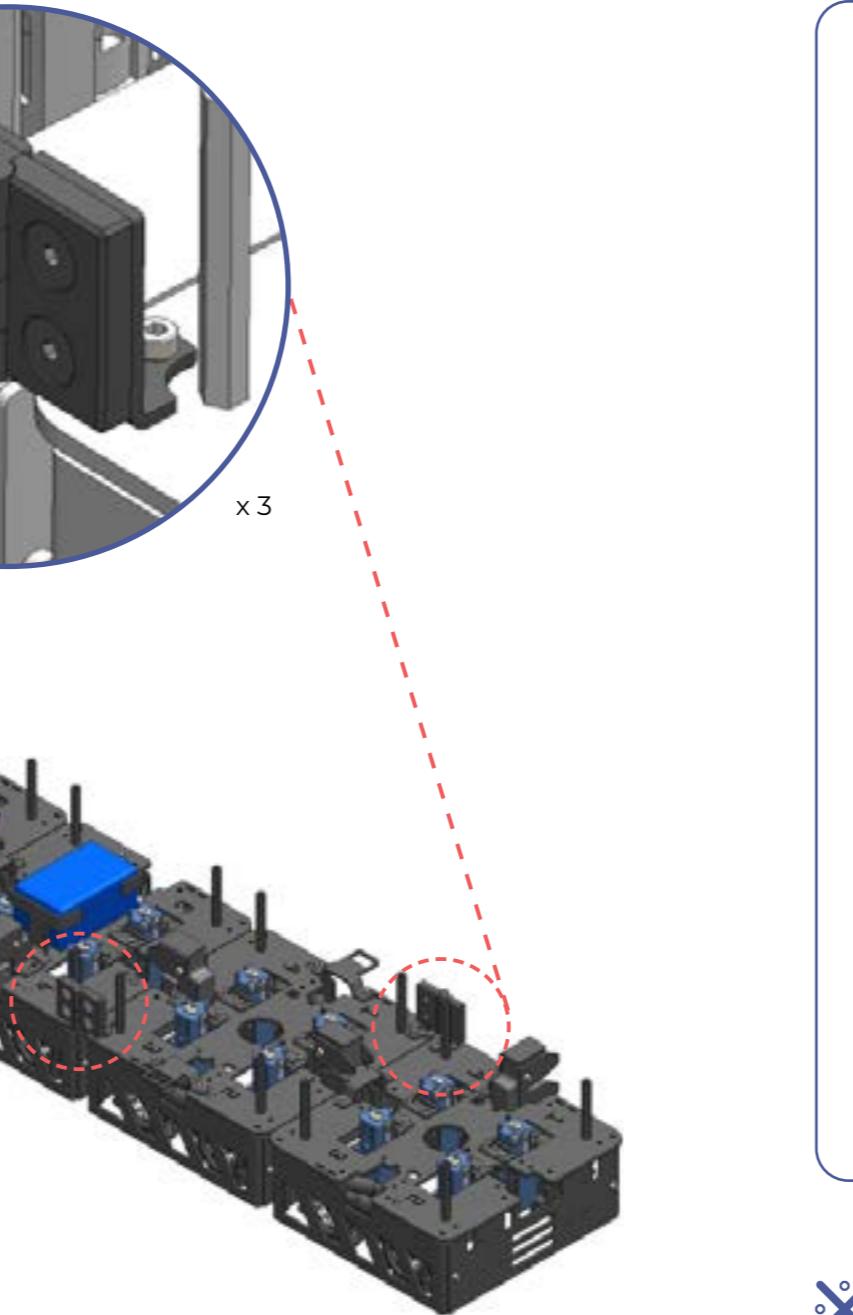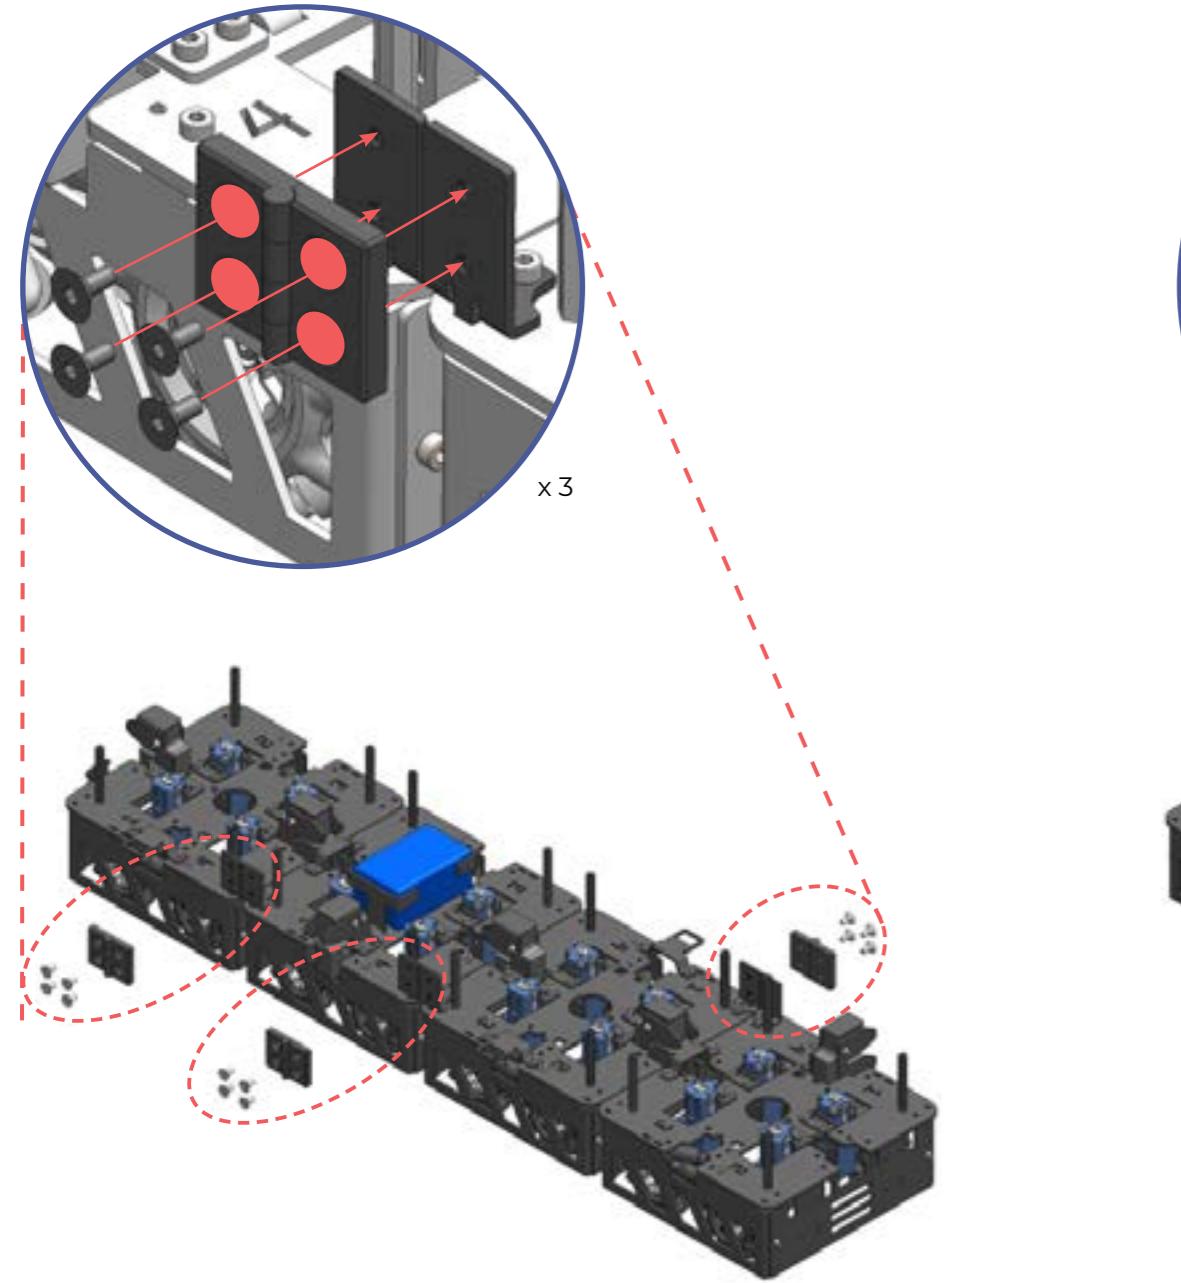

✖ Check all the positions of solenoids,  
solenoid catches, hinge mounts before  
proceeding to section B.


A mechanical assembly completed

## B1 e-tray sub-assembly



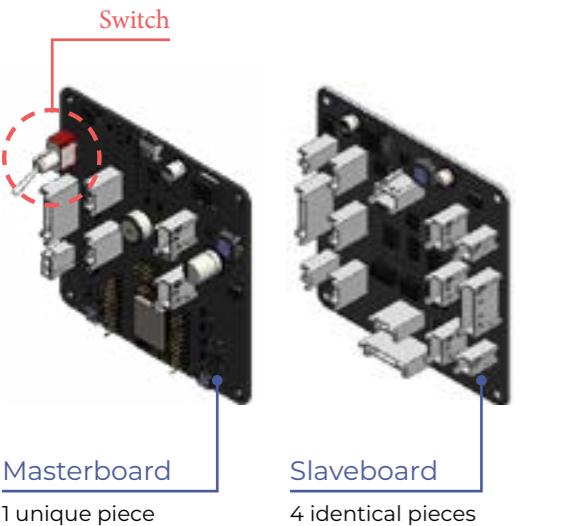


✗ Make sure that you are attaching the slaveboards and not the masterboard.


✗ How to differentiate between masterboard and slaveboards:  
- Masterboard has a special switch

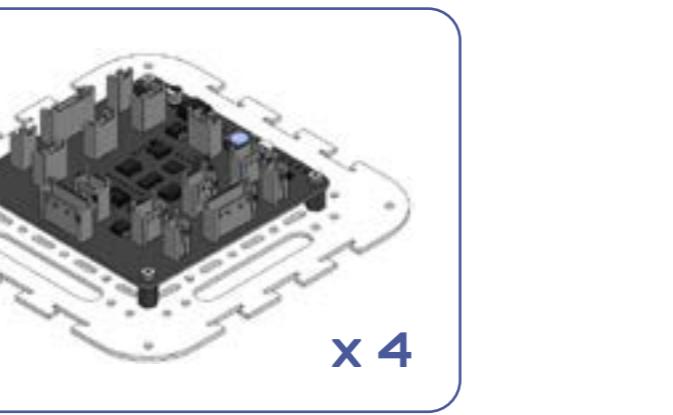

## B2 e-tray onto mechanical assembly

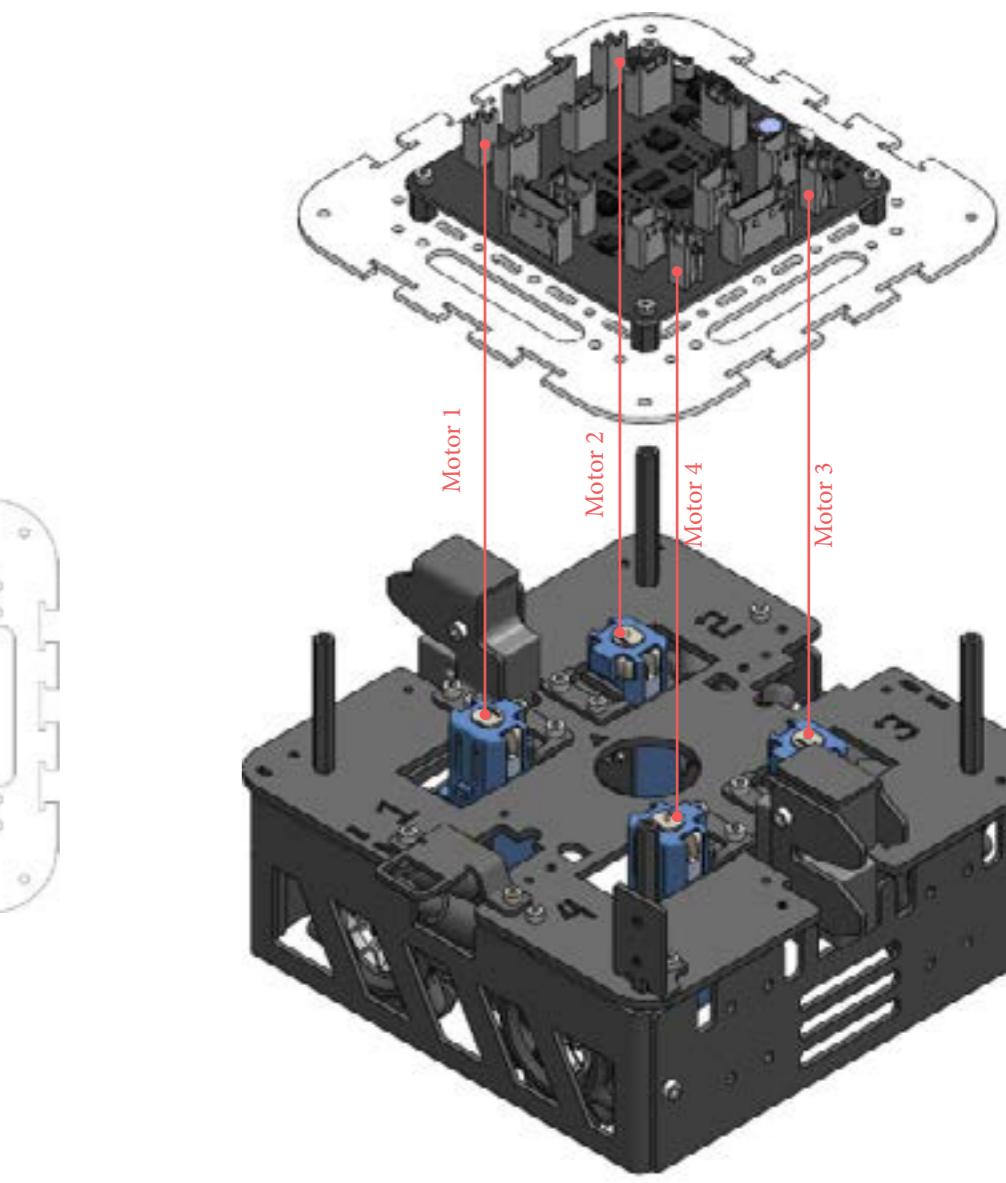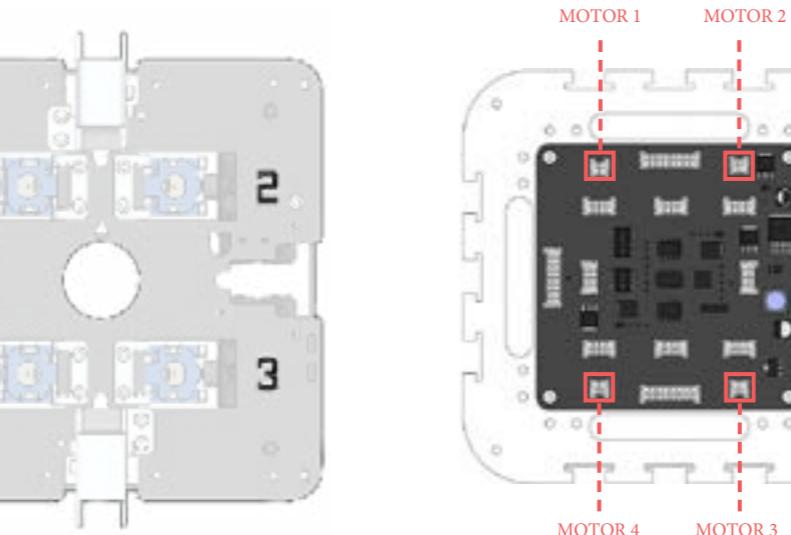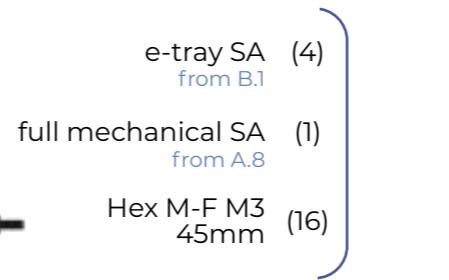






✗ Orientate e-tray SA and base module as shown on the right.  
Motor 1 connector on e-tray should be on top of Motor 1 of base module.  
Same goes for Motor 2, 3 and 4.

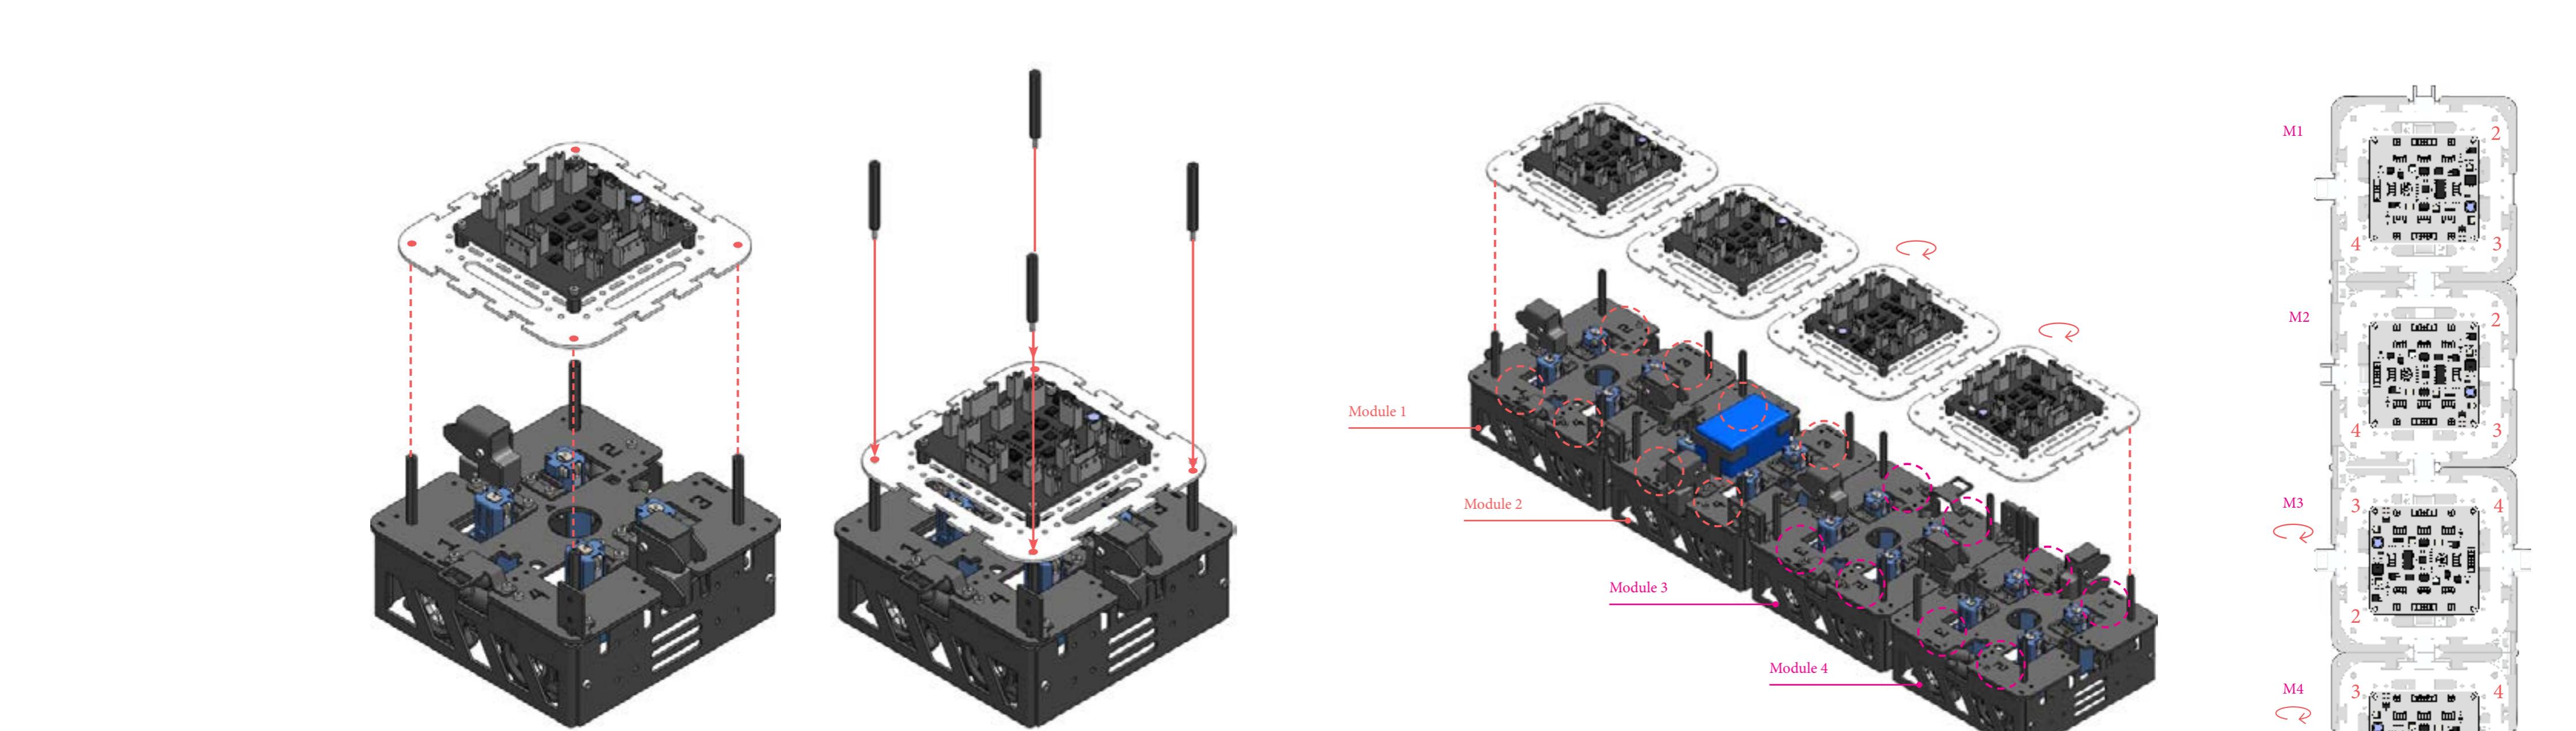

Before attaching the e-tray SA, please flip all the cables and connectors for motors and solenoids (not shown in diagram for clarity) out, for easy attachment later on.



Orientation of modules 3 and 4 are rotated 180° from modules 1 and 2. Therefore, make sure that the e-tray SAs for module 3 and 4 are also rotated 180° to correspond to the motor orientation as numbered.

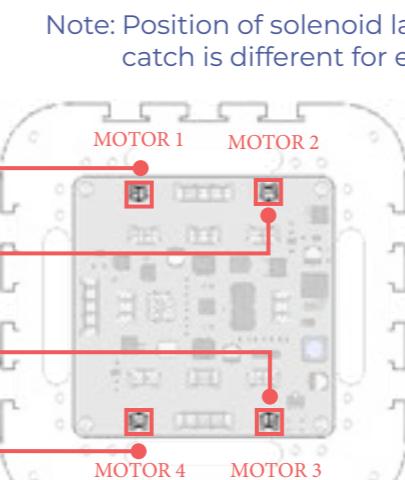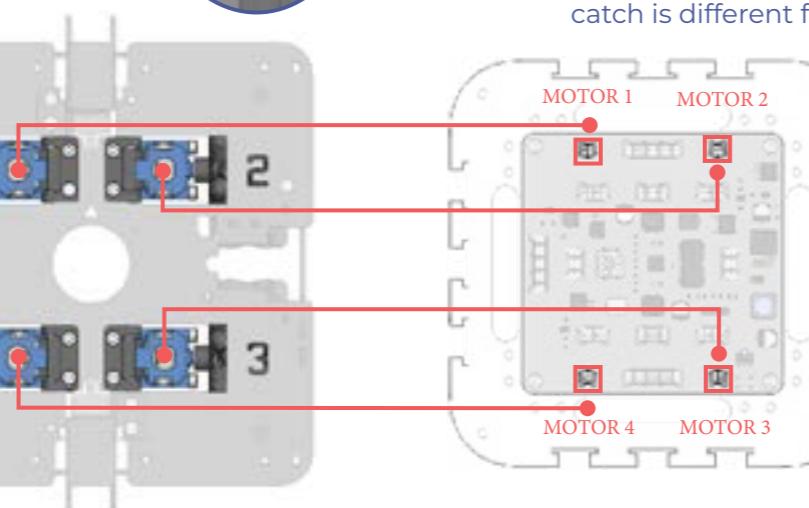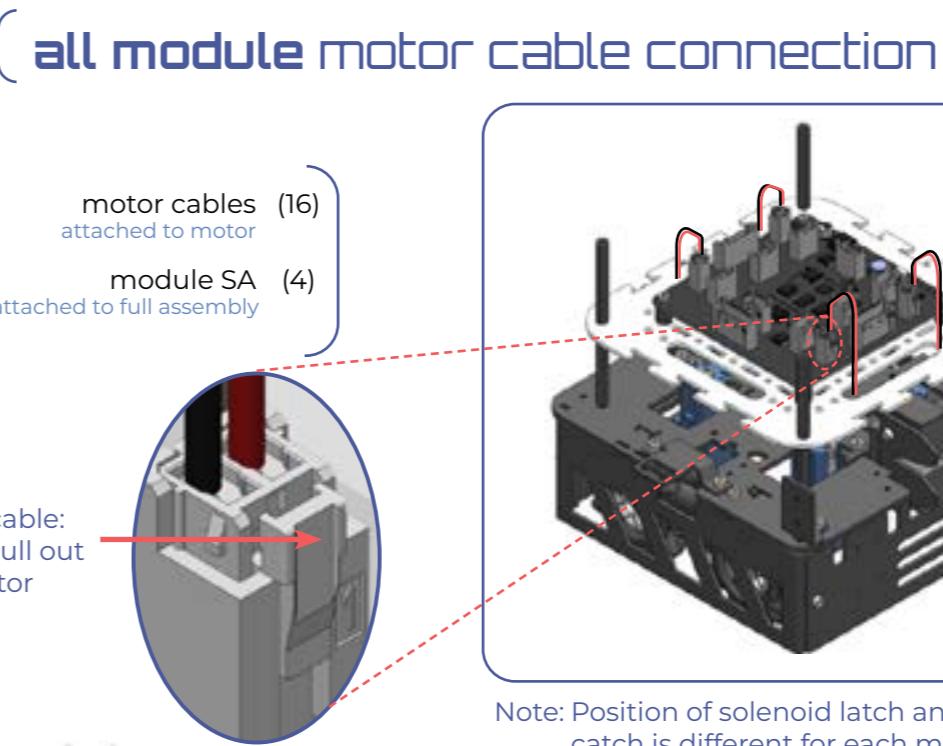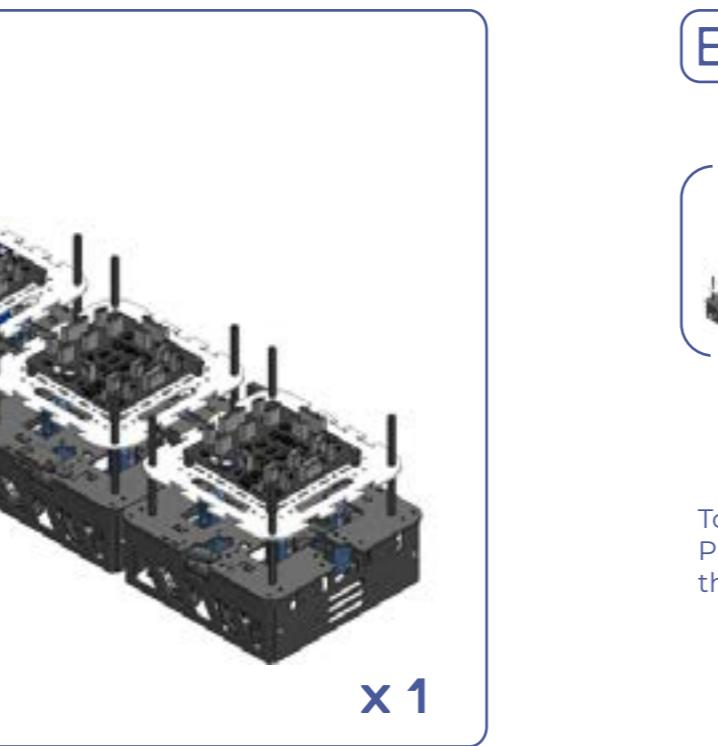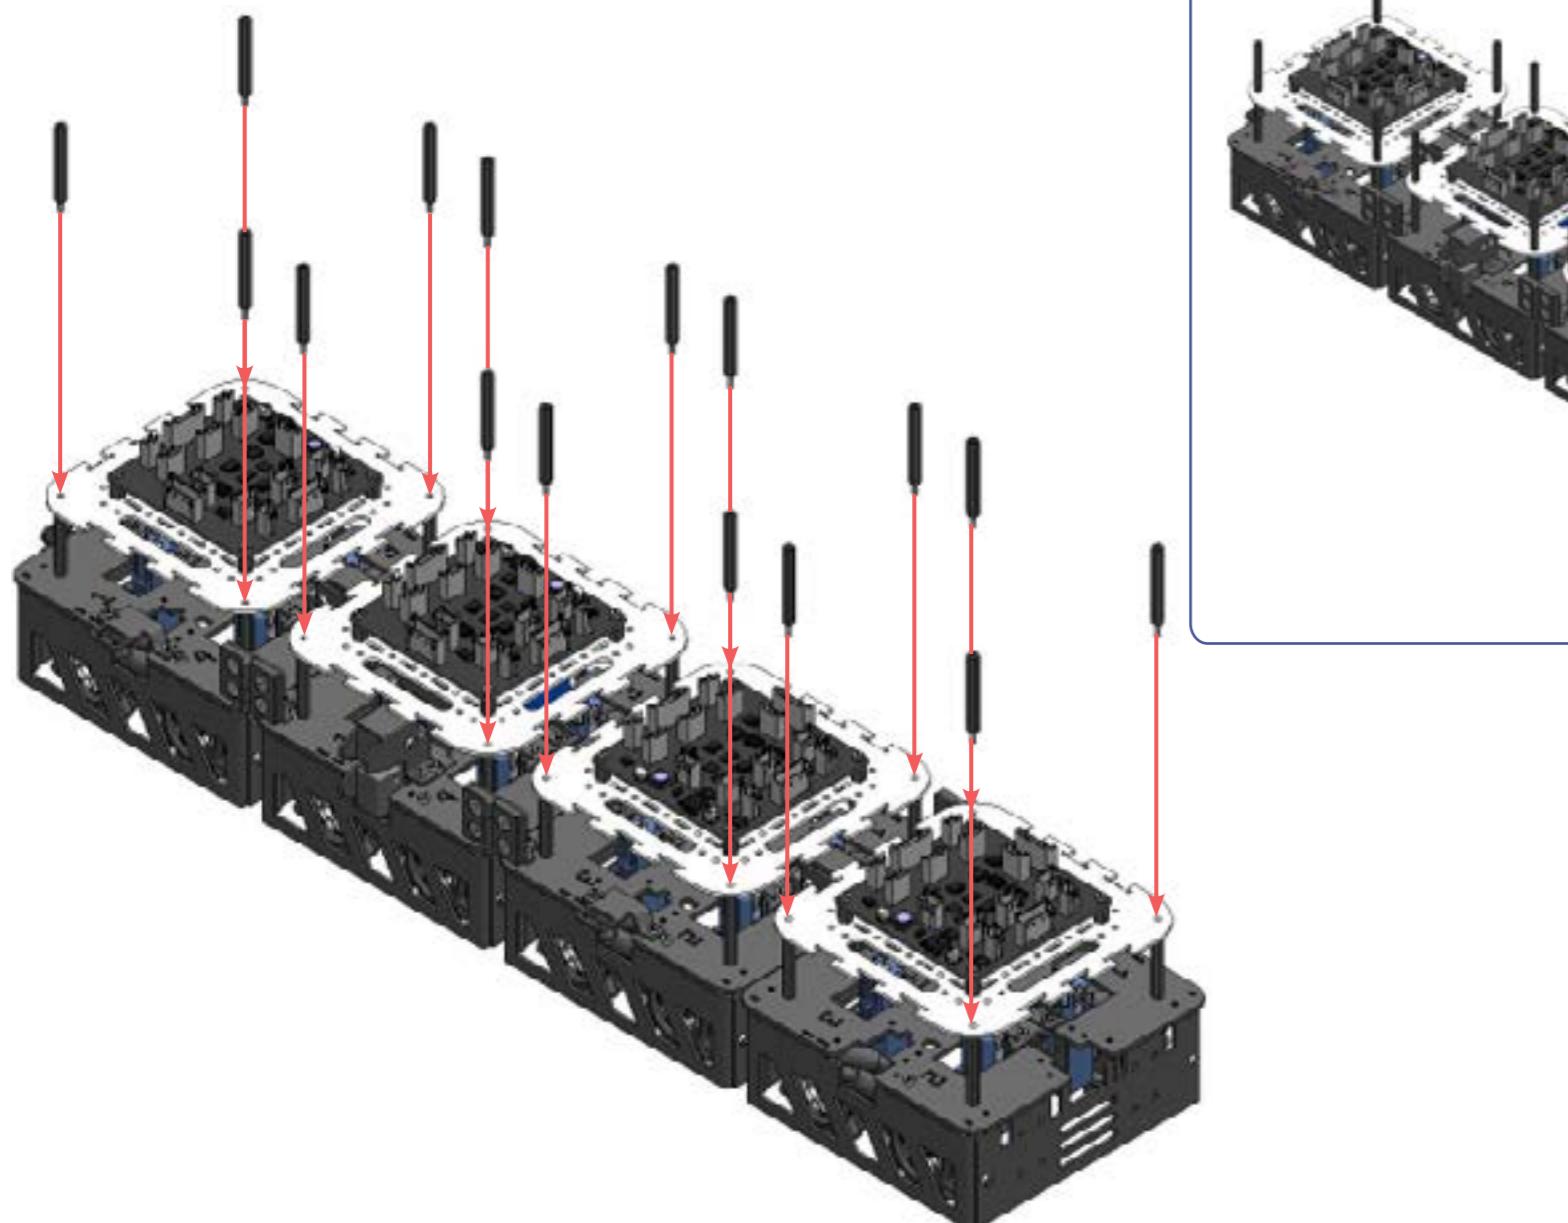


Make sure that Motor 1 is connected to Motor 1 connector on Slaveboard; the same goes for Motor 2, 3 and 4.



Motor cable connection is the same for all 4 modules

Module 1 to 4  
Motor Connection

Opening to pass wire through

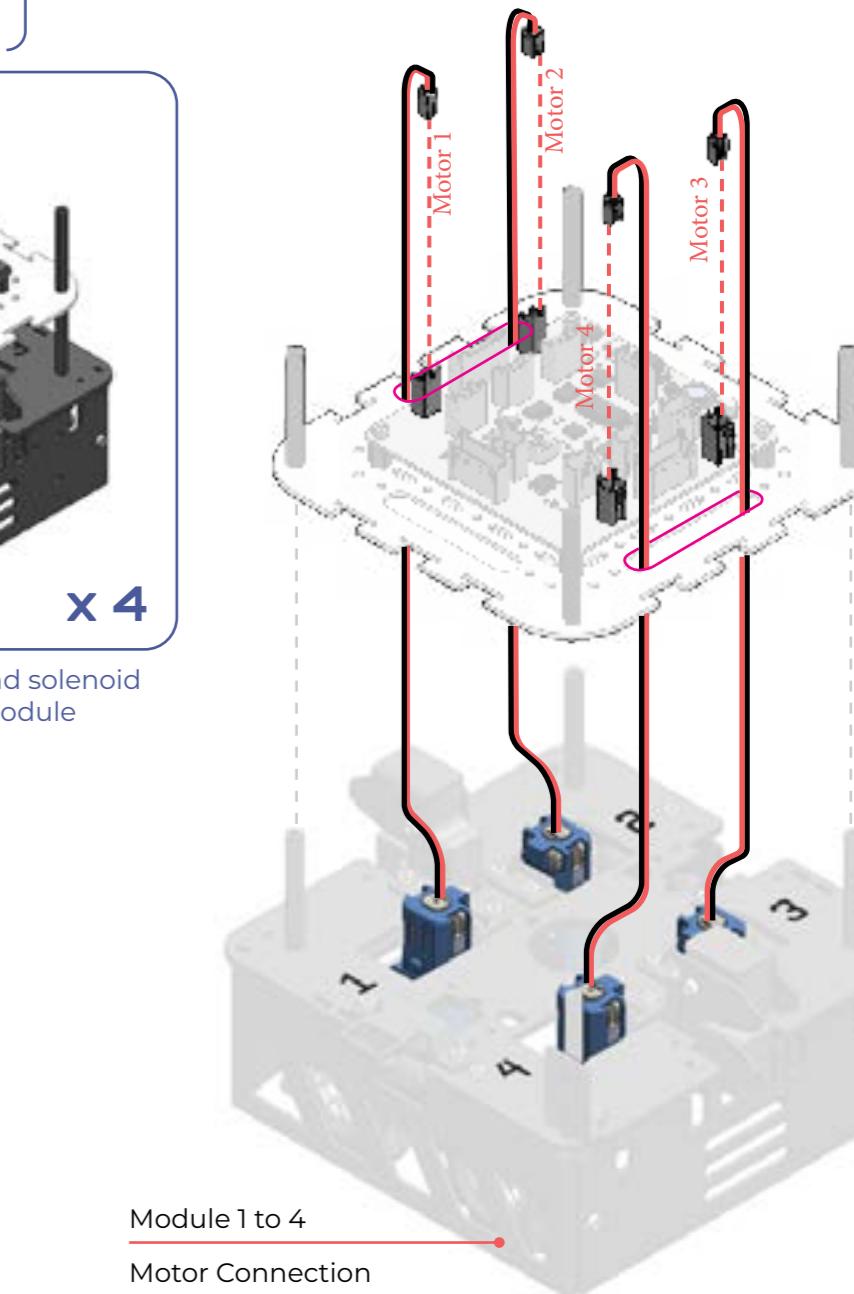


## B 4 (module 1 solenoid cable connection)

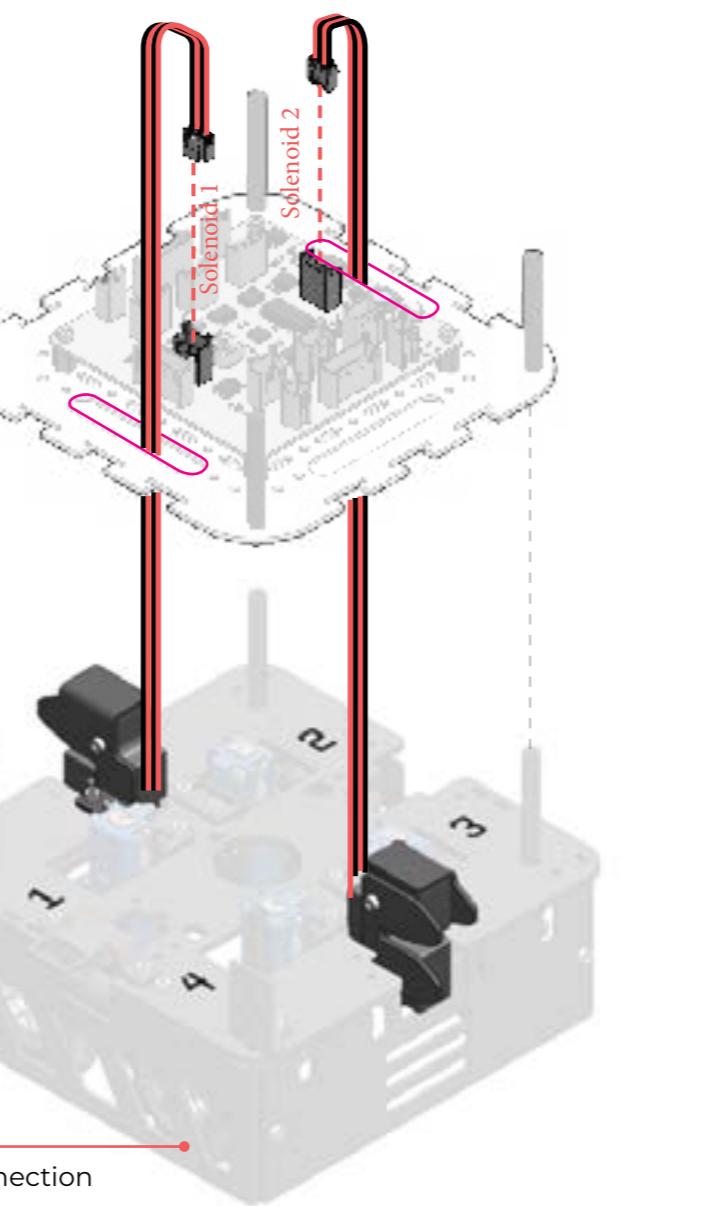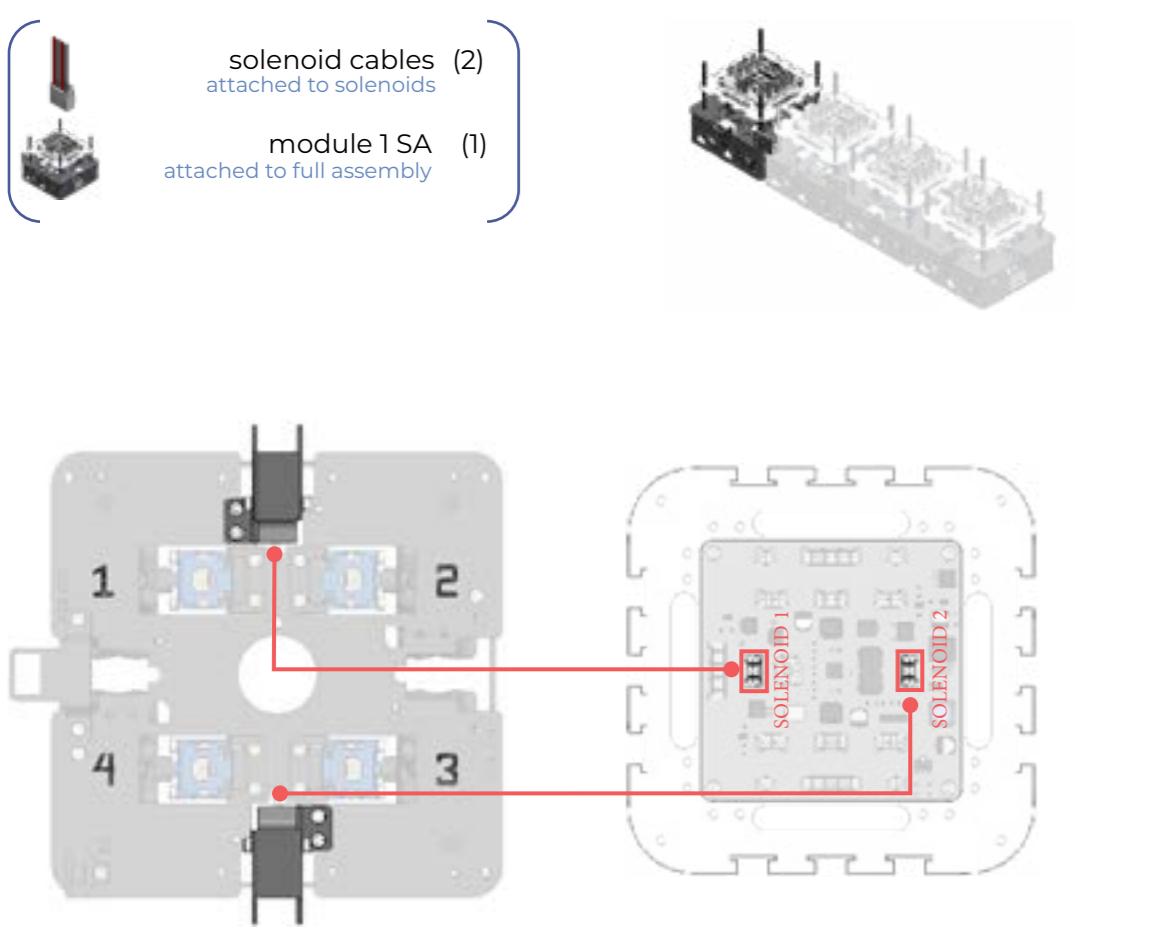


🚫 Make sure to connect the solenoid to the labelled solenoid connector exactly as in the diagram below.

Opening to pass wire through

## B 5 (module 2 solenoid cable connection)


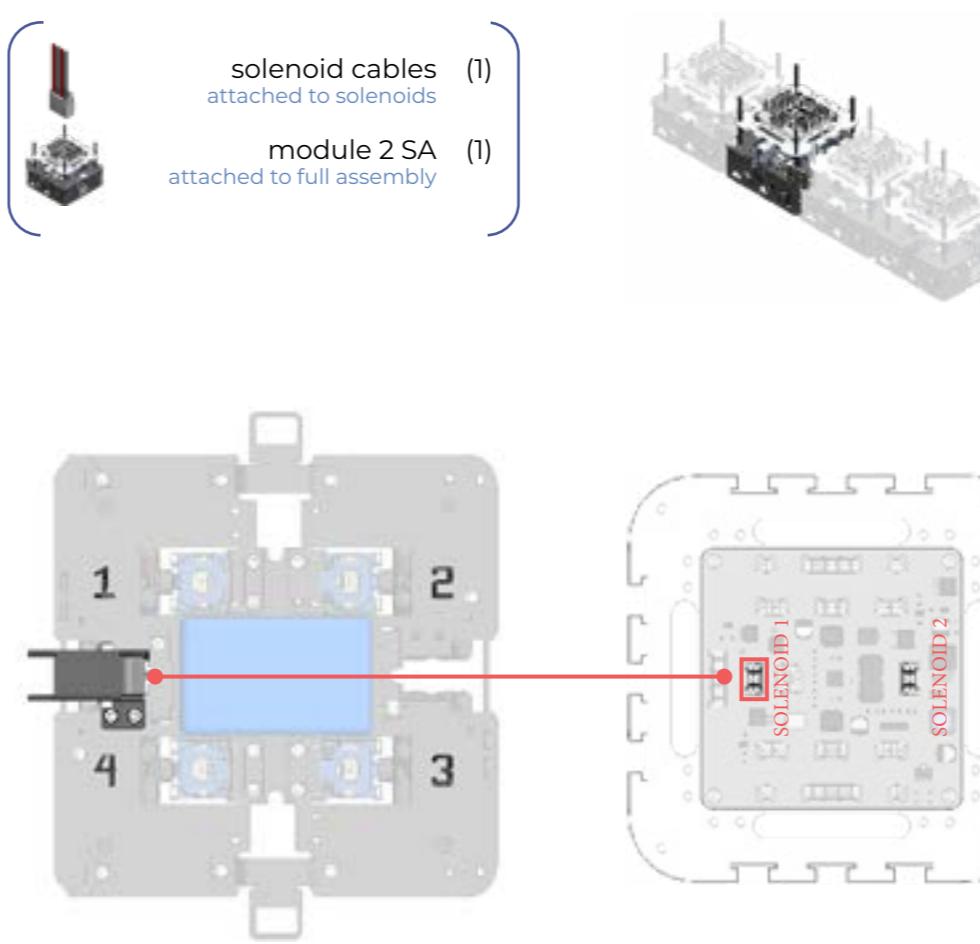


🚫 Make sure to connect the solenoid to the labelled solenoid connector exactly as in the diagram below.

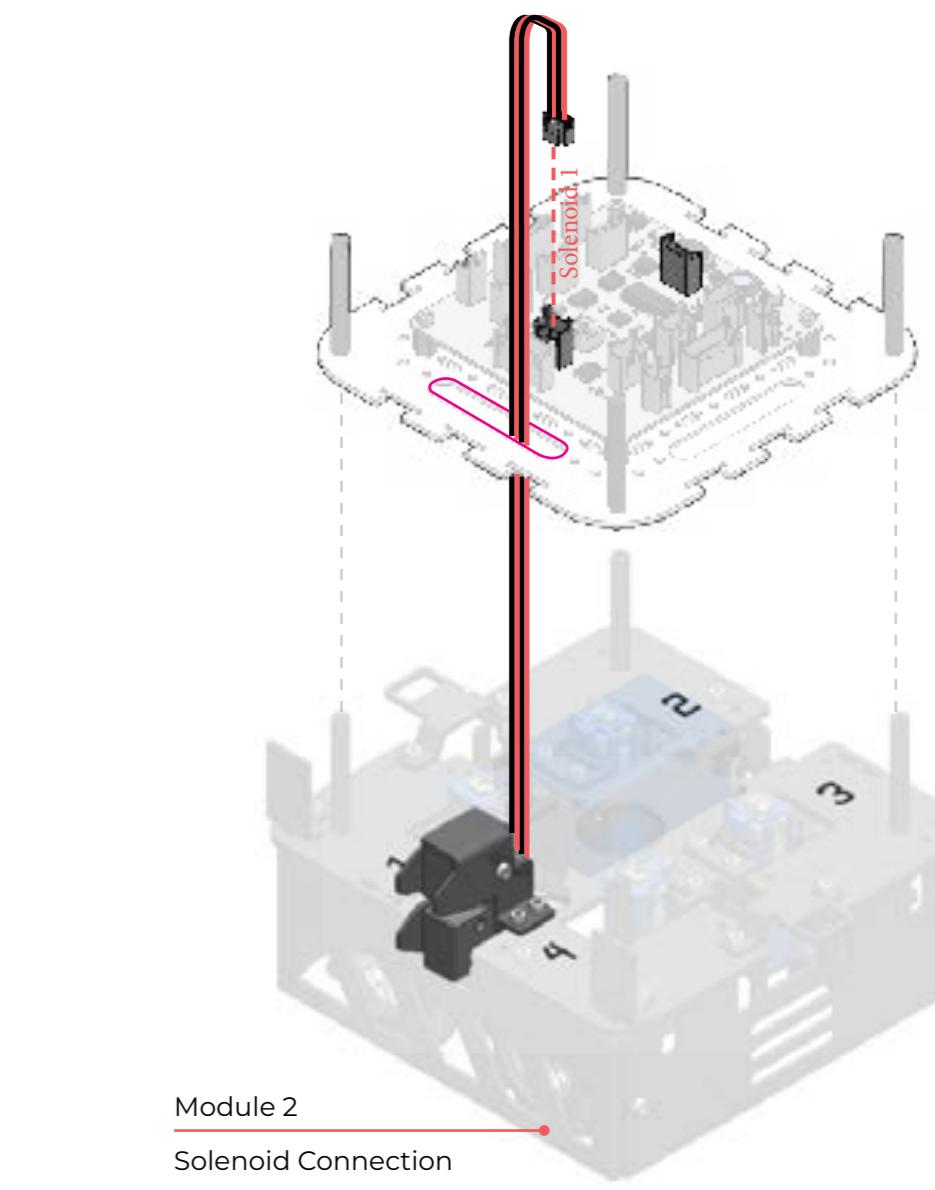

Opening to pass wire through


## B6 (module 3 solenoid cable connection)

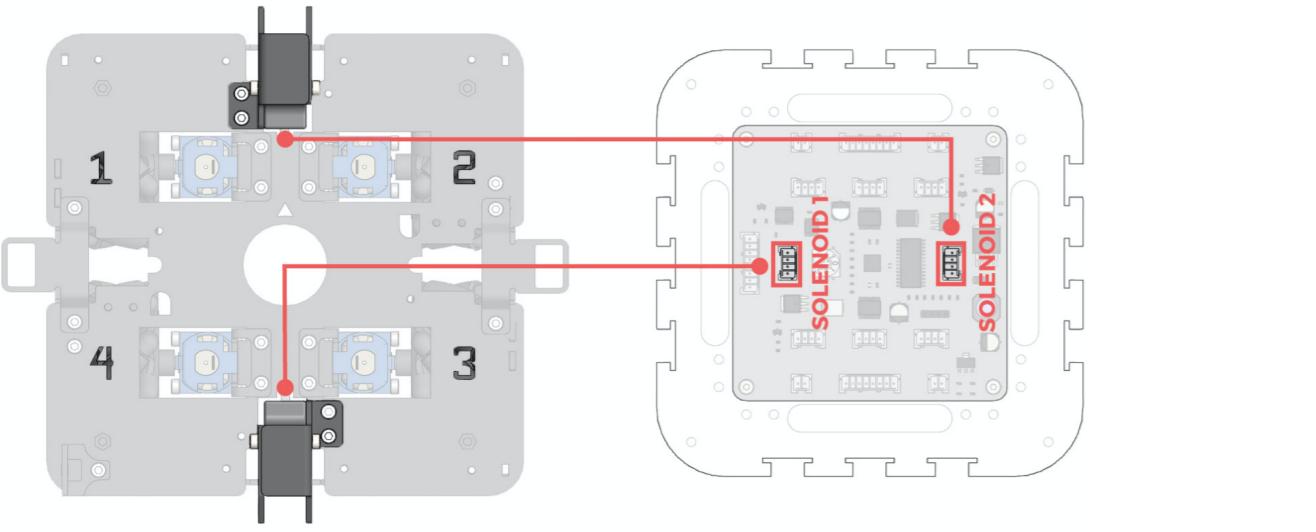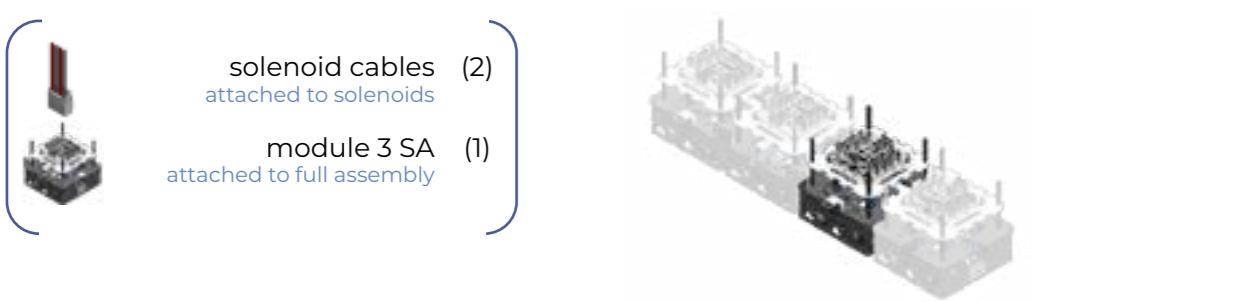



✖ Make sure to connect the solenoid to the labelled solenoid connector exactly as in the diagram below.

Module 3  
Solenoid Connection

Opening to pass wire through

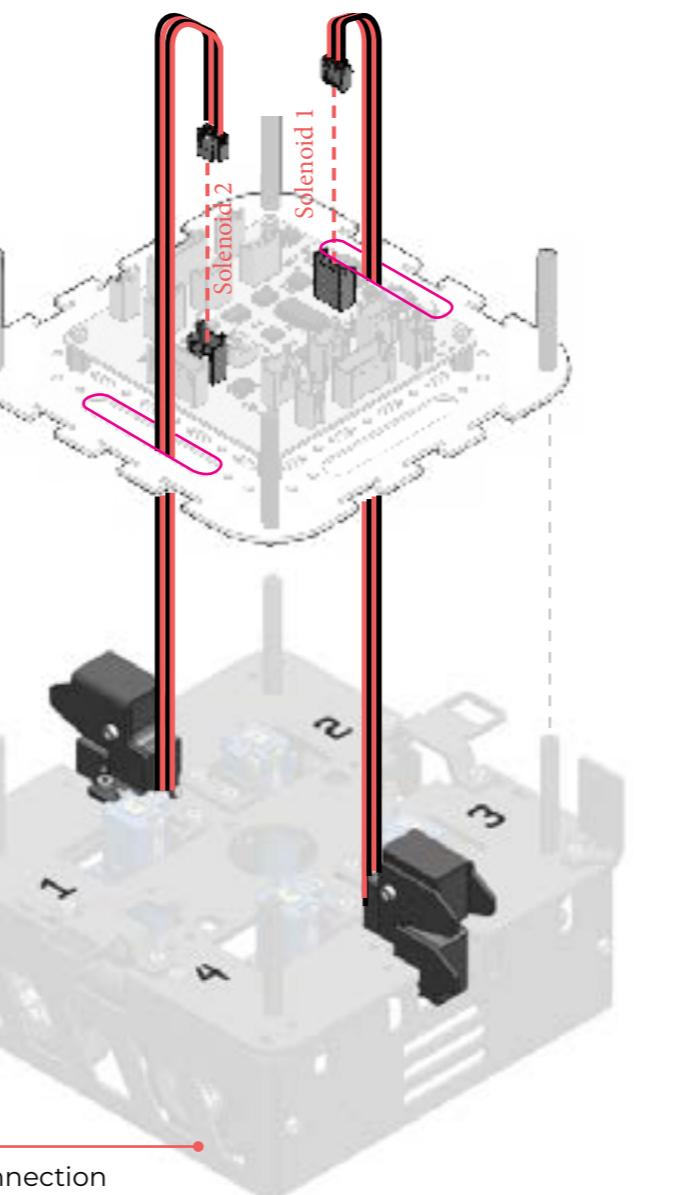


## B7 (module 4 solenoid cable connection)

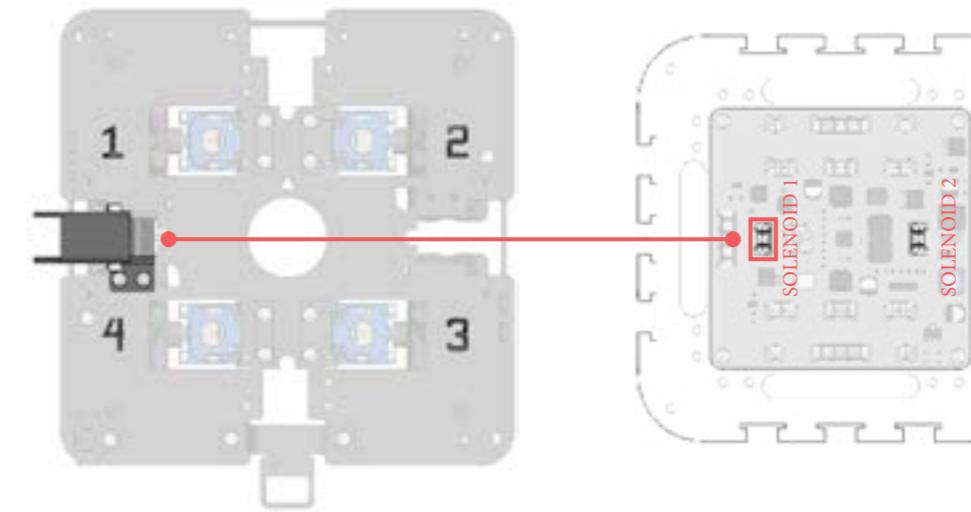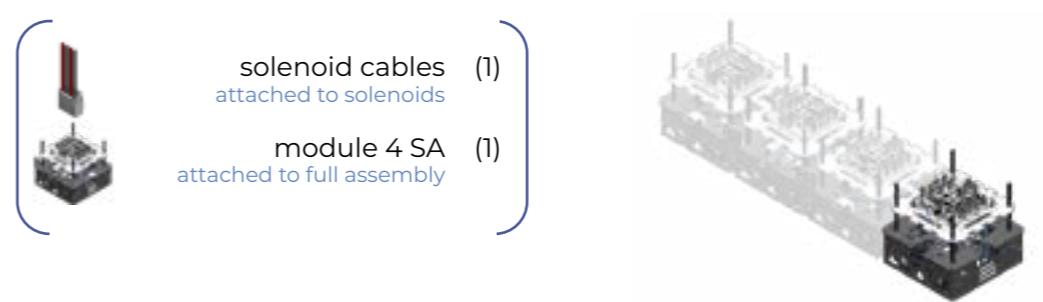



✖ Make sure to connect the solenoid to the labelled solenoid connector exactly as in the diagram below.

Module 4  
Solenoid Connection


Opening to pass wire through

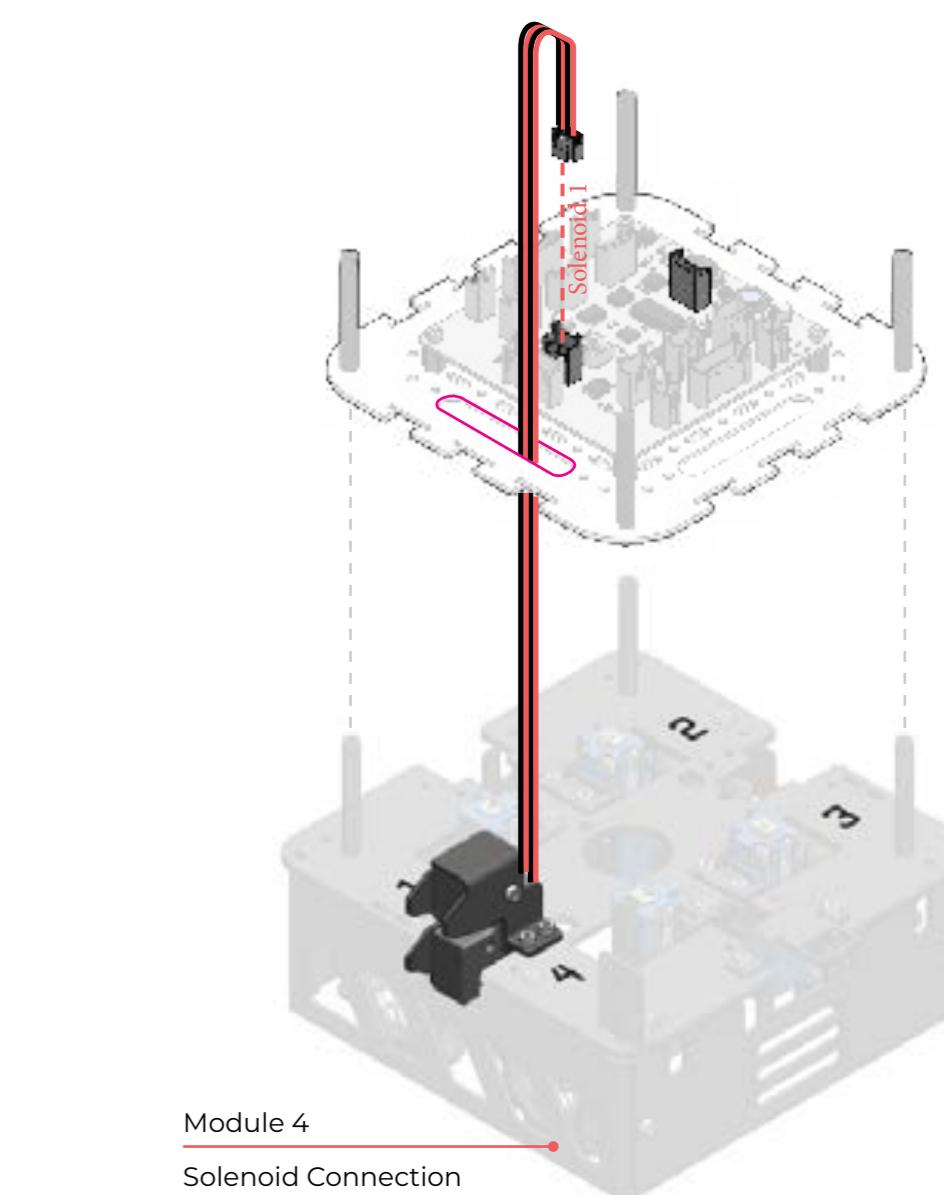


## B8 (inter-module cable connection)

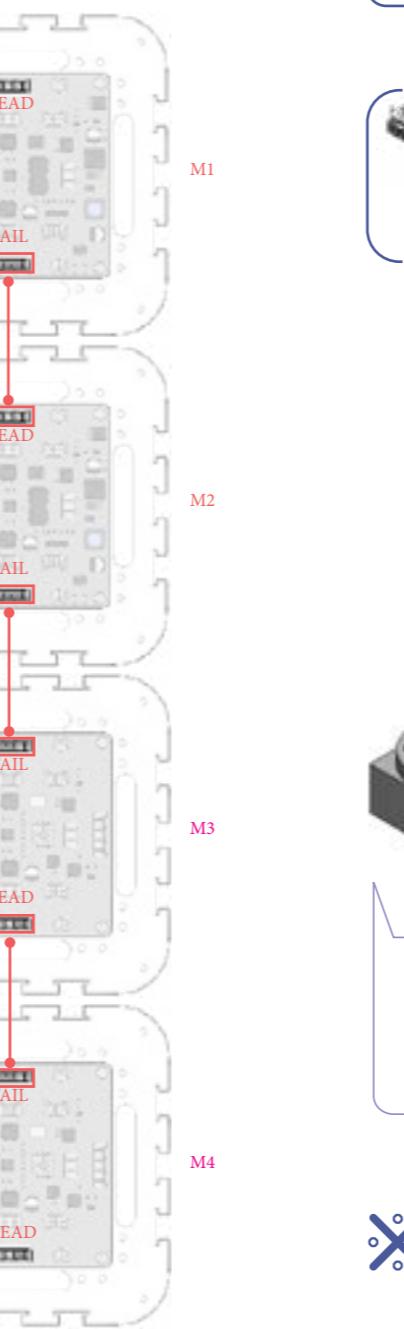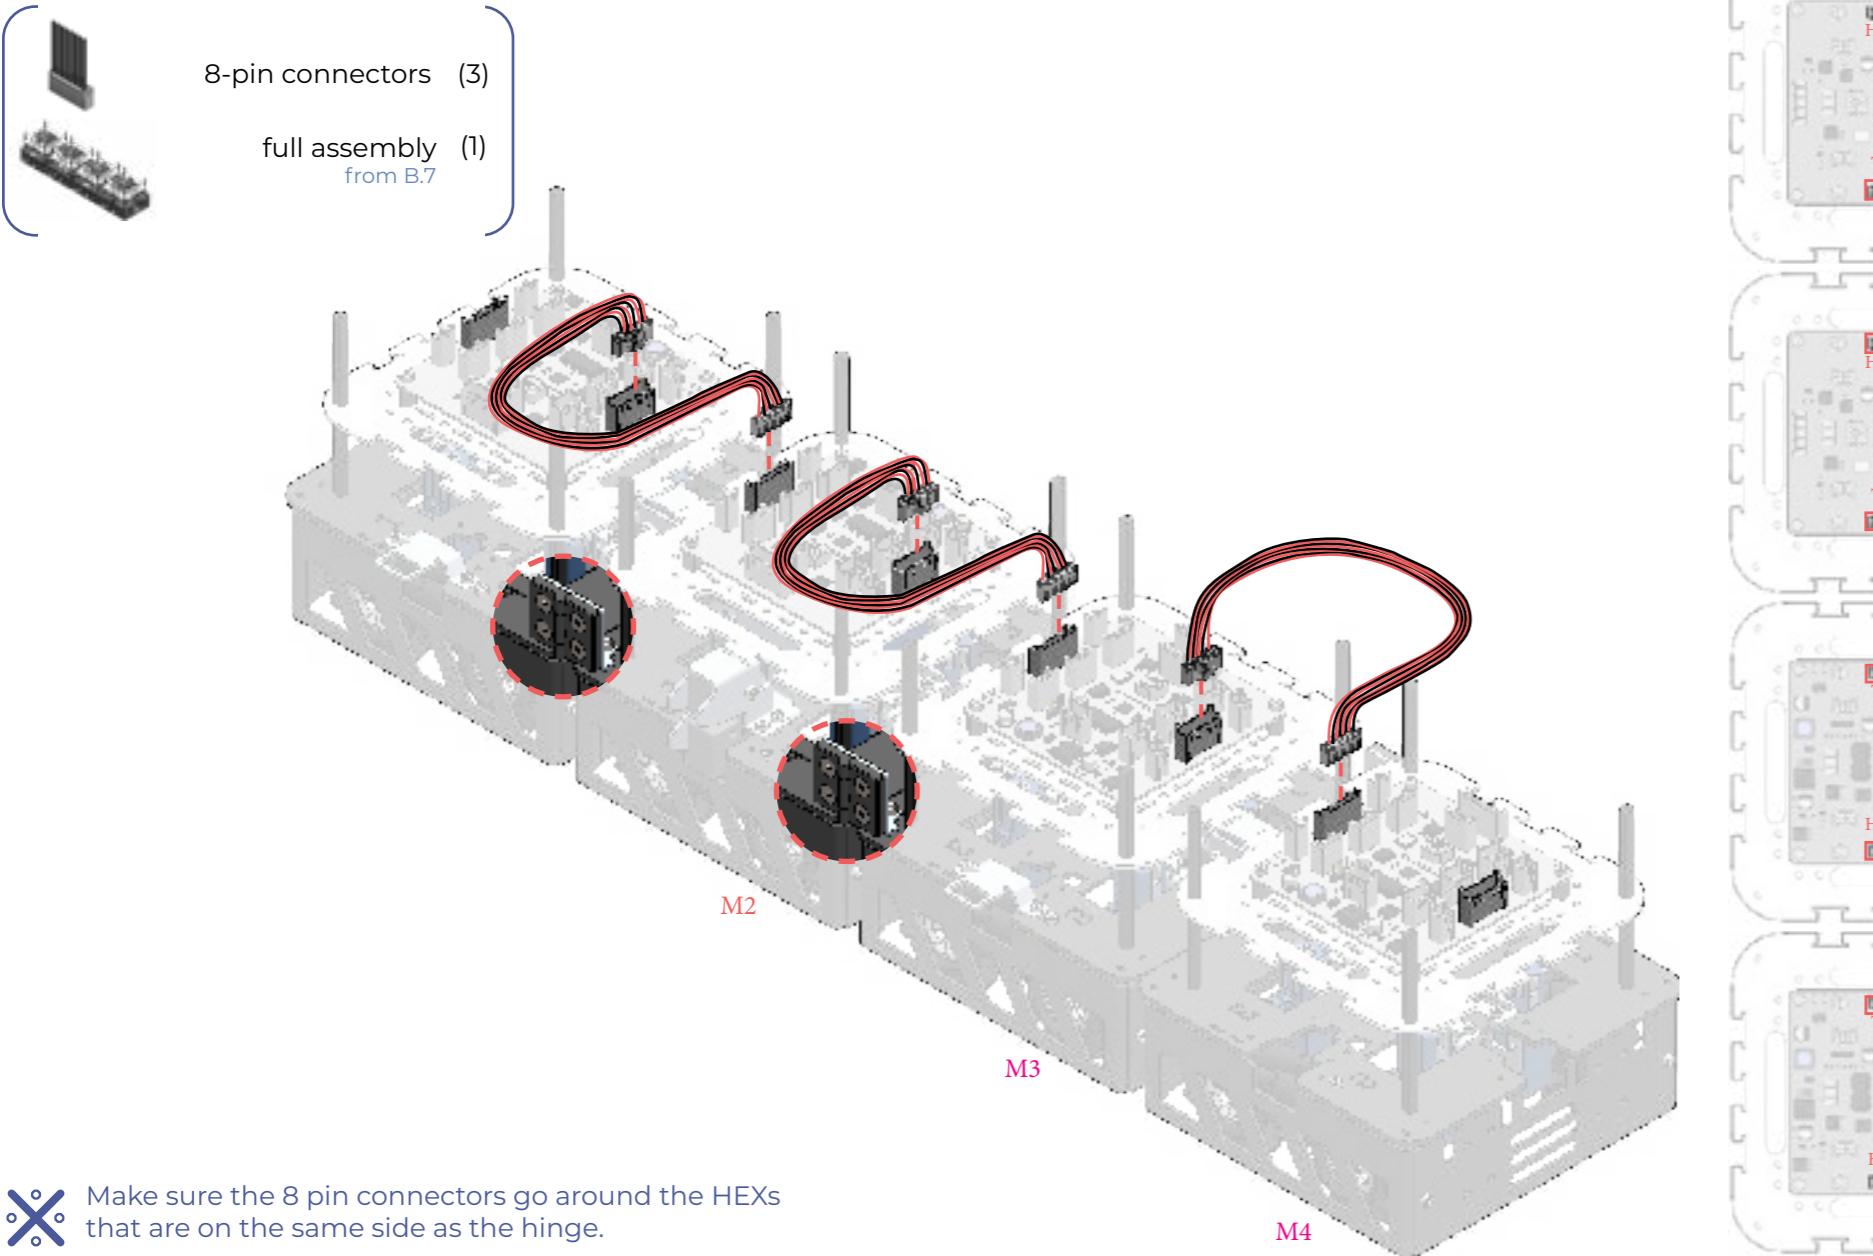



## B9 (address selection)

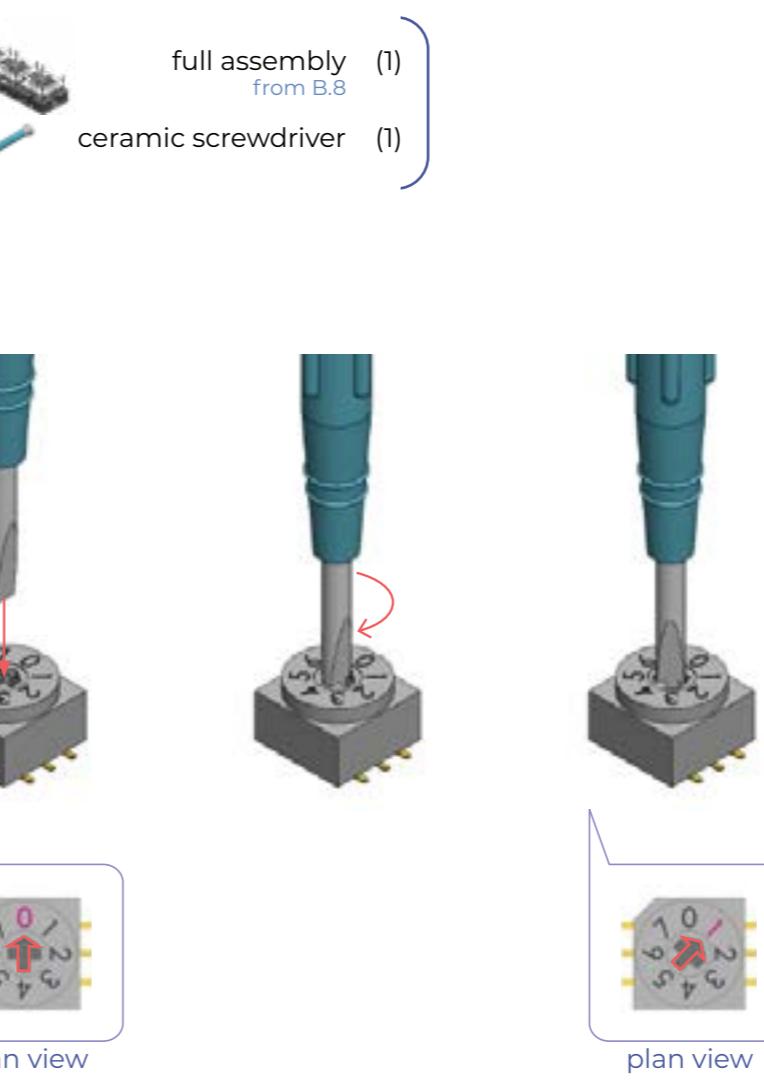

Use the ceramic screwdriver to adjust the rotary switch and select the address for all 4 modules.  
Module 1: Address 0, Module 2: Address 1,  
Module 3: Address 2, Module 4: Address 3

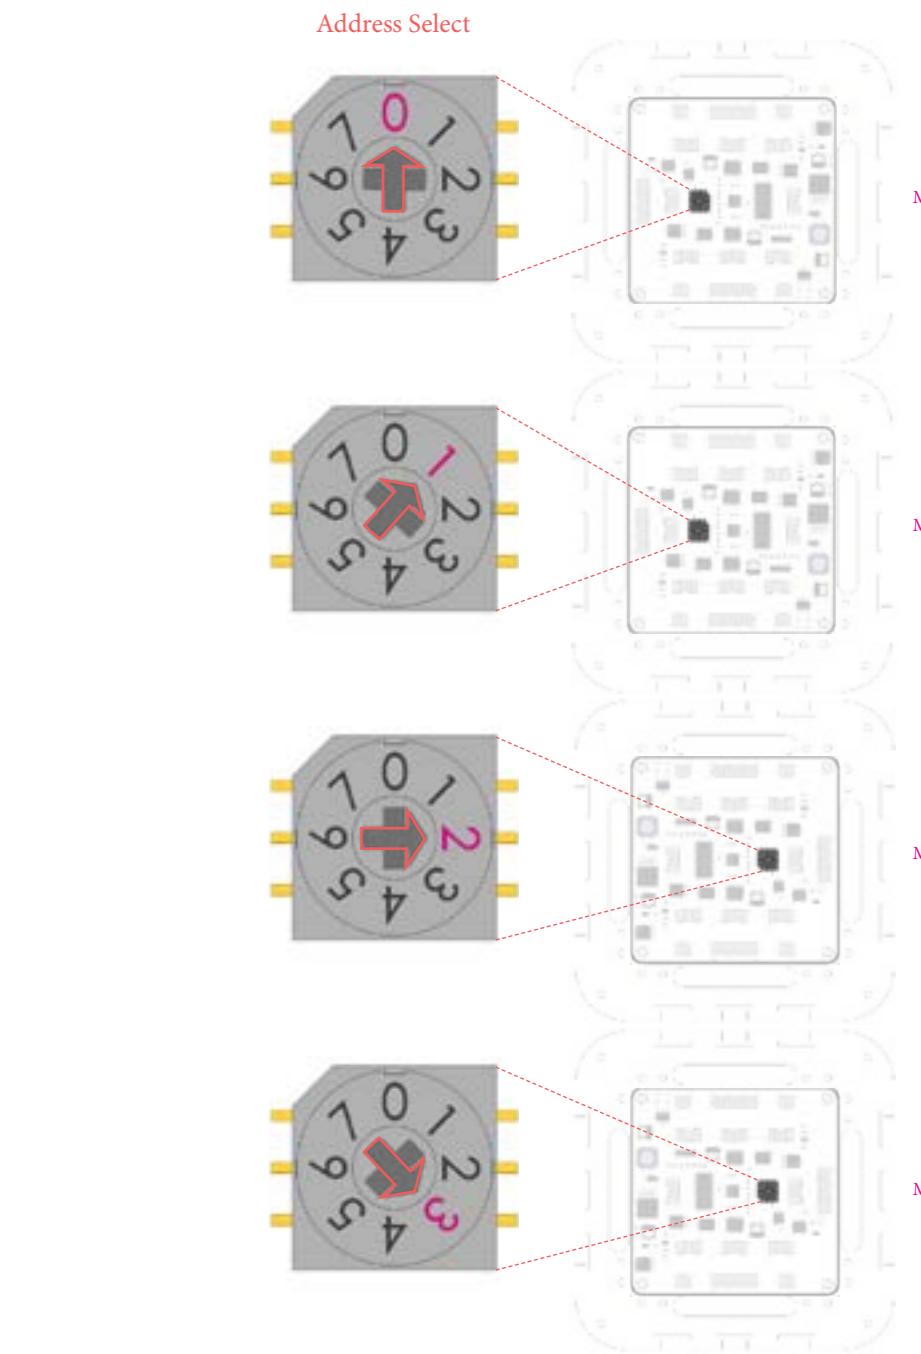

## B 10 (masterboard e-tray sub-assembly)

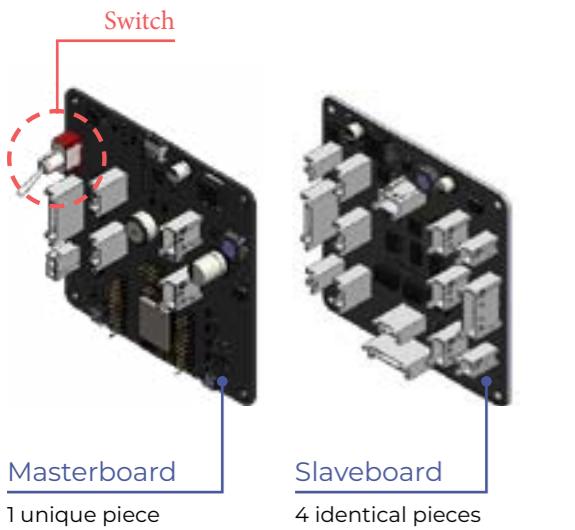
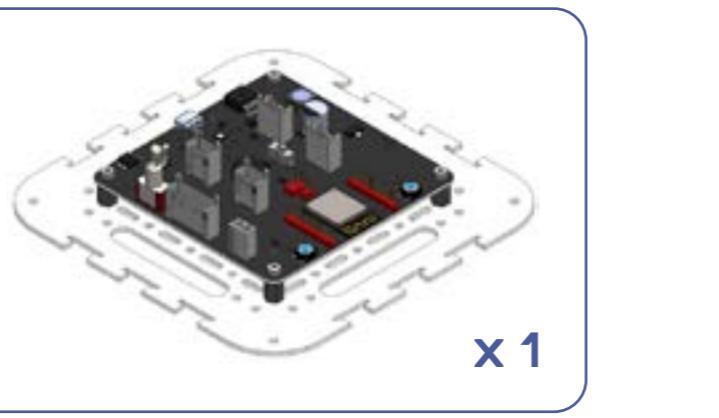


Masterboard  
1 unique piece




Slaveboard  
4 identical pieces

✖ Make sure that you are attaching the masterboard and not the slaveboards.

✖ How to differentiate between masterboard and slaveboards:  
- Masterboard has a special switch

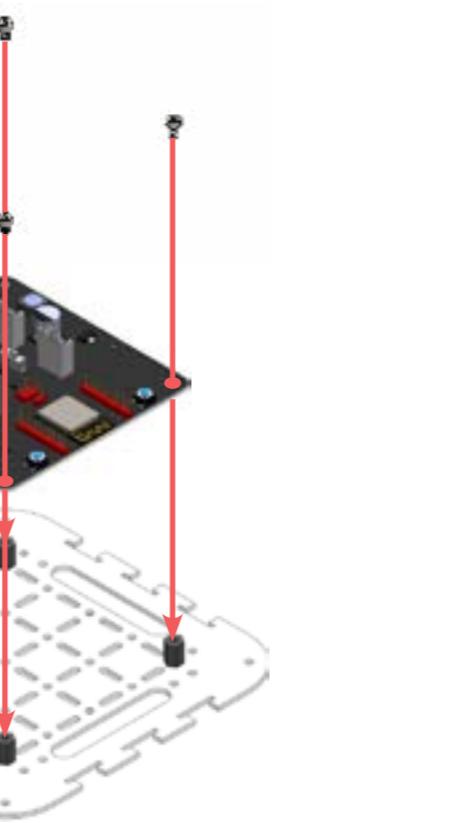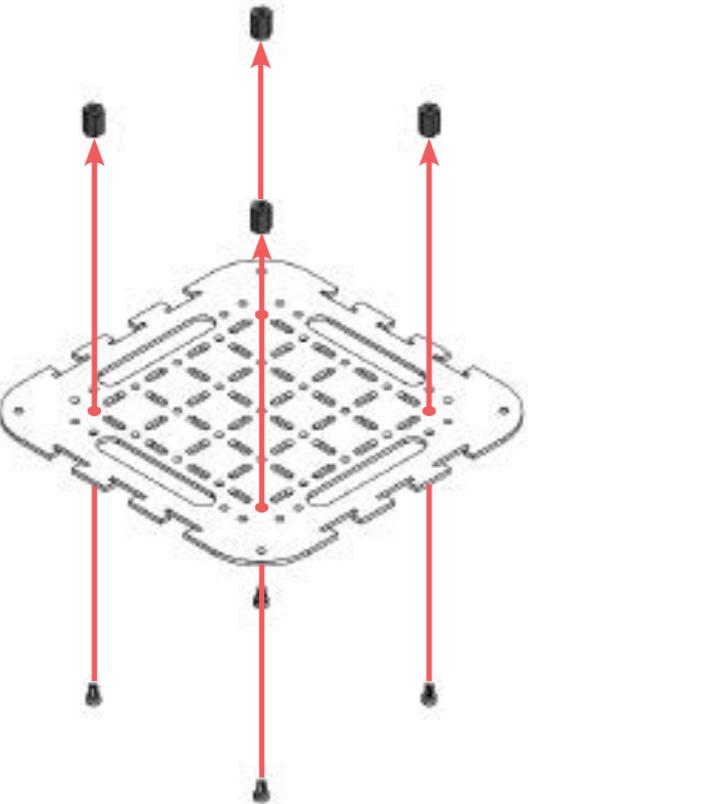



## B 11 (masterboard e-tray onto main assembly)

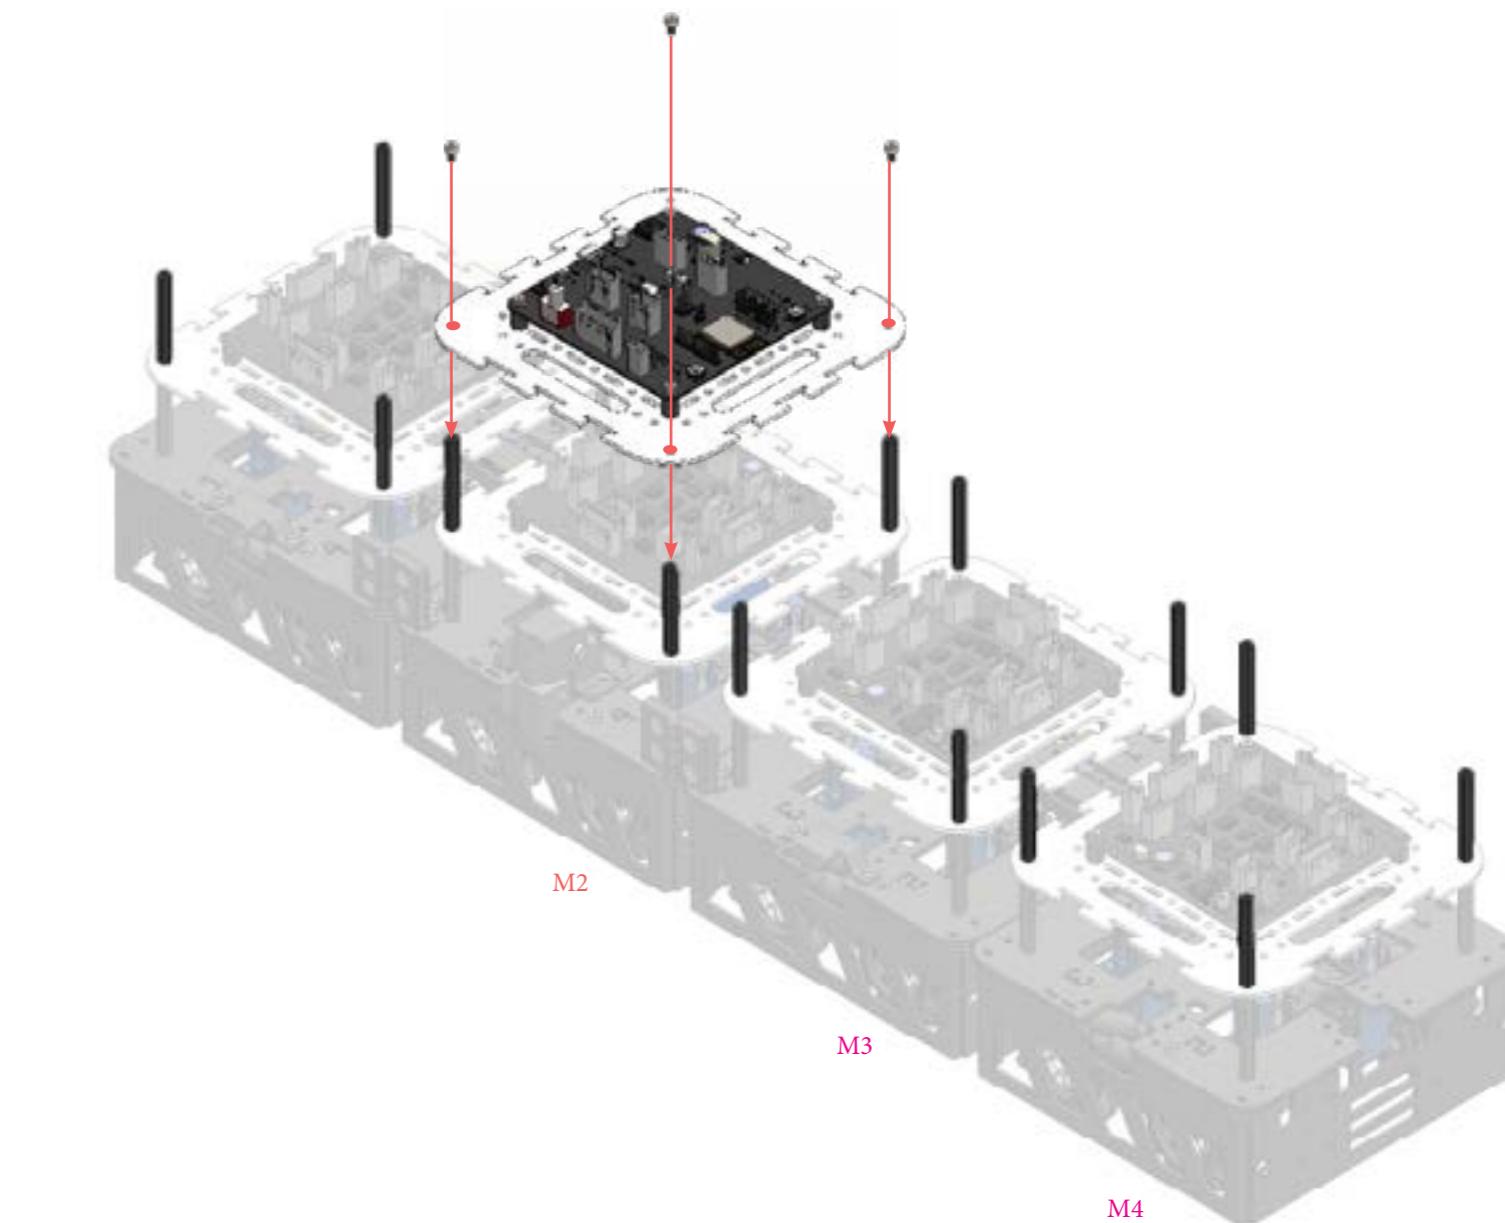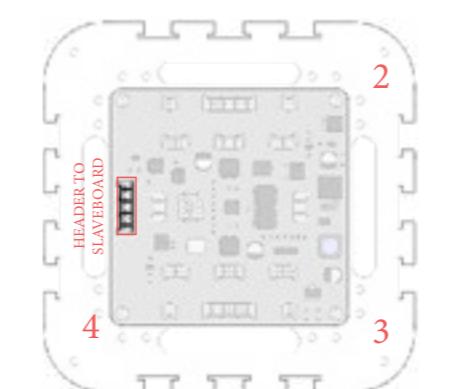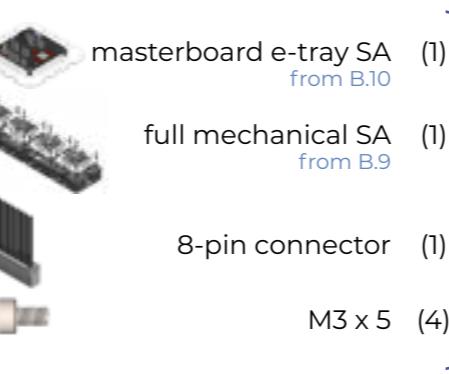

✖ Align the header to slaveboard connector on the masterboard to face the side connecting Motor 1 and 4.





"DO NOT PLUG-IN / UNPLUG THE CONNECTOR CABLES WHILE THE POWER SUPPLY IS ACTIVELY PROVIDED (EITHER THROUGH BATTERY/ USB)"

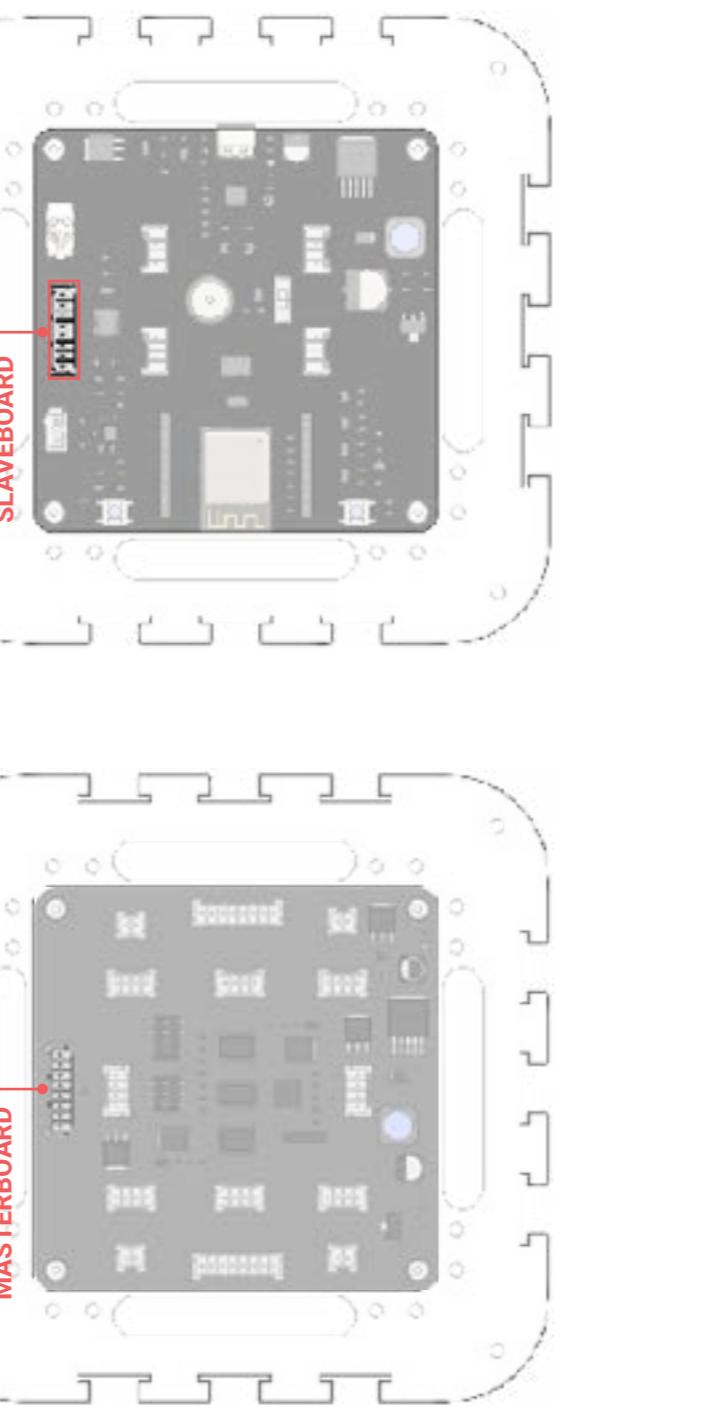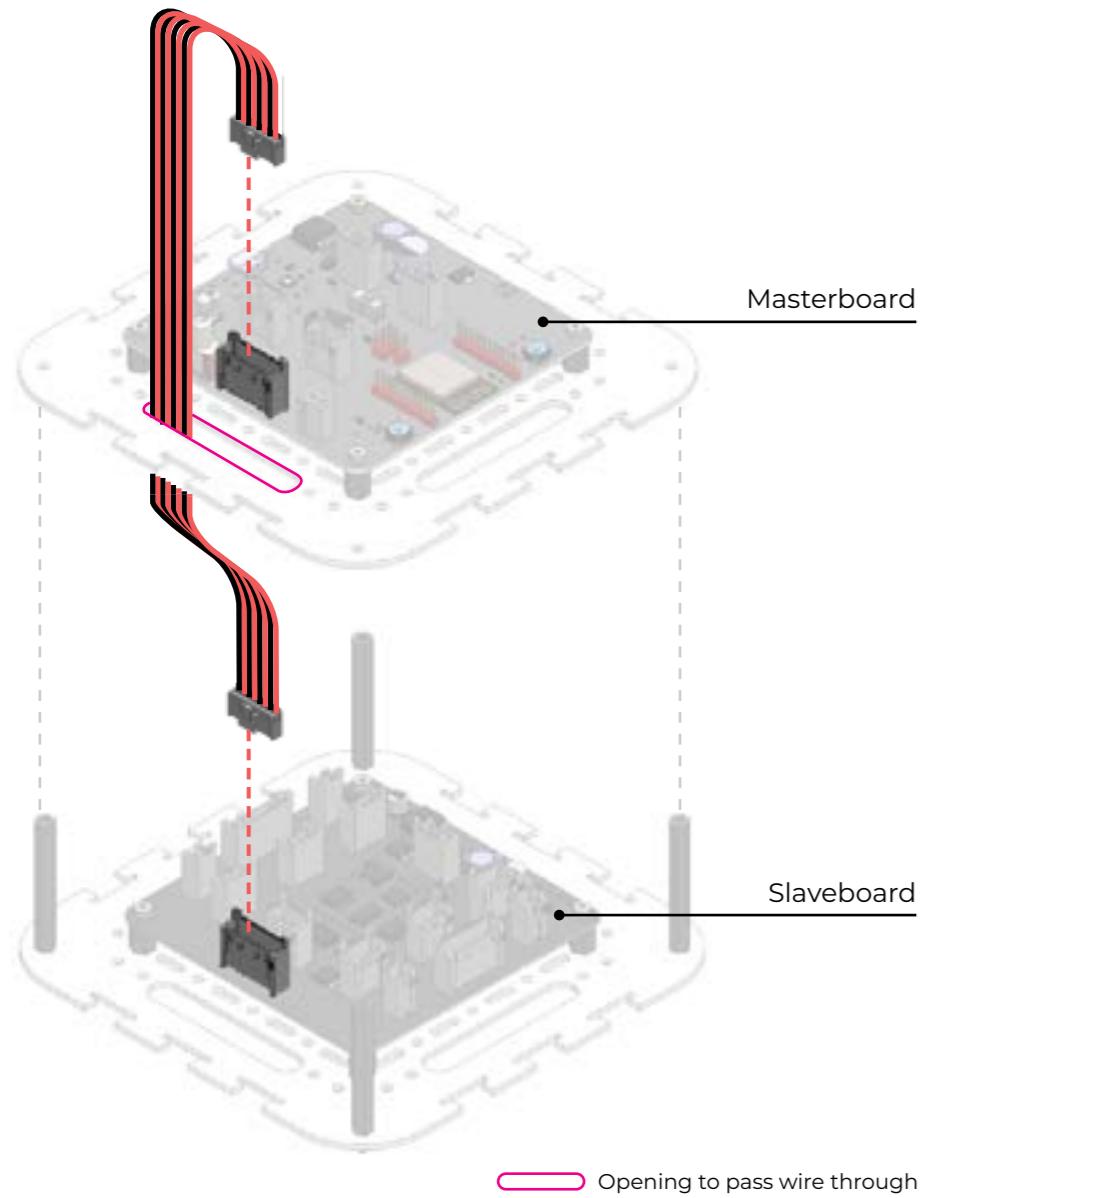


B12 (attach acrylic covers)


Acrylic base plate (3)  
full mechanical SA from B.11  
M3 x 5 (12)

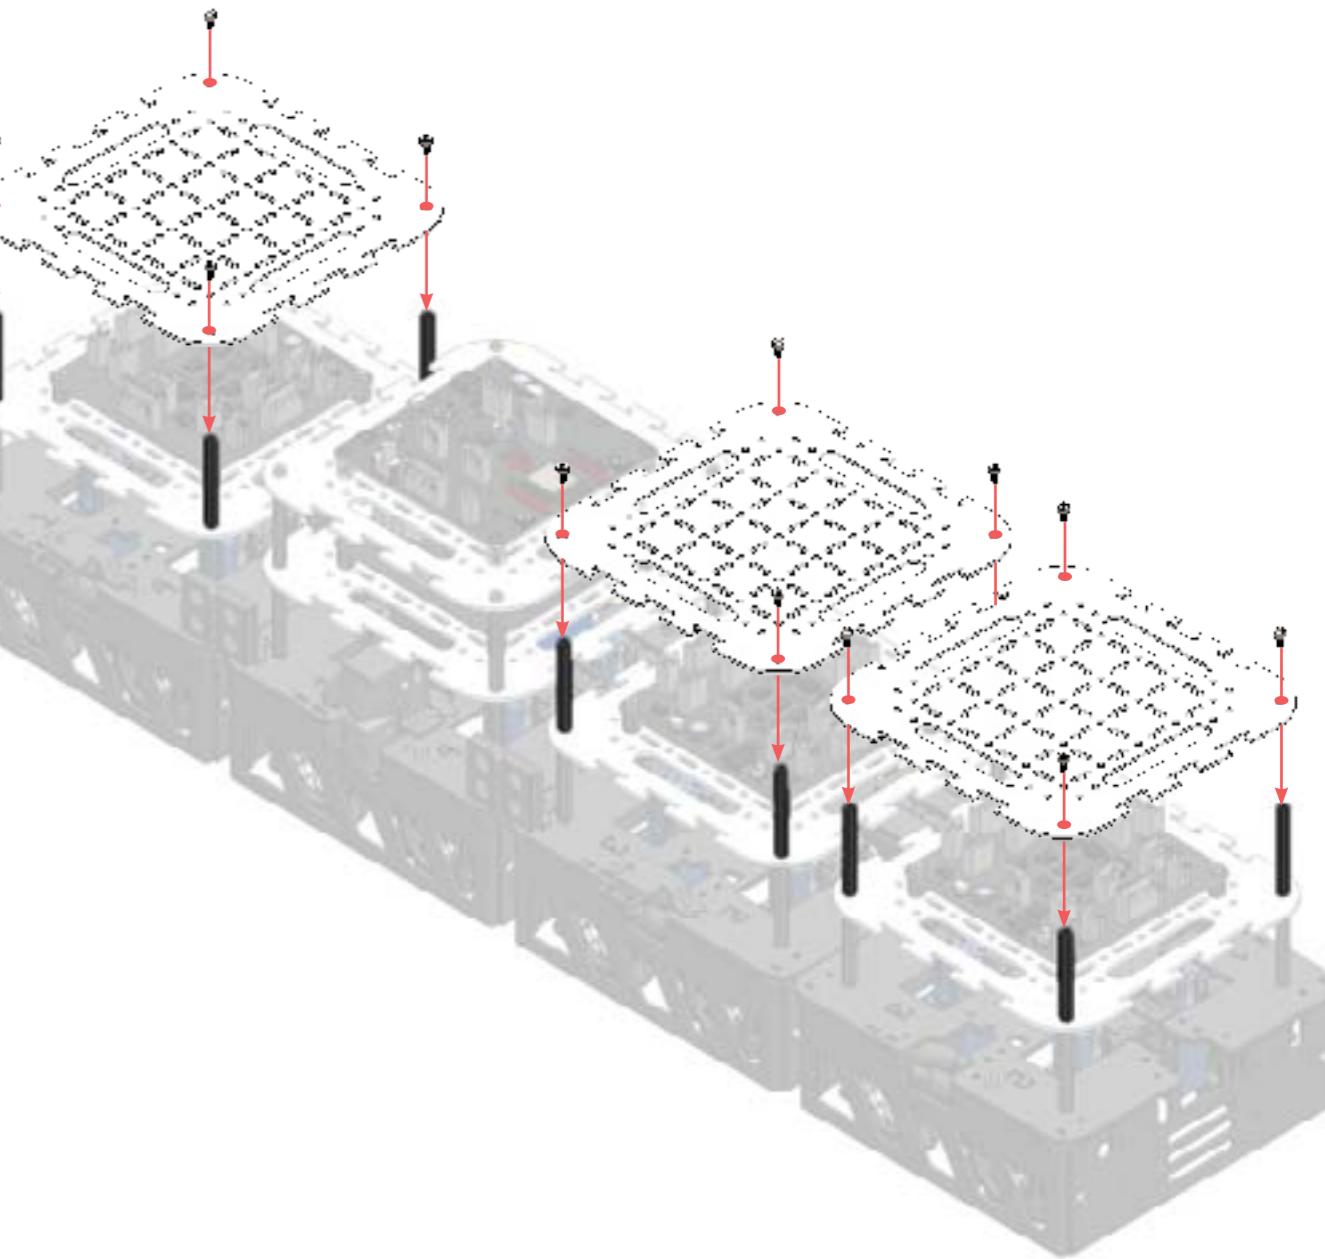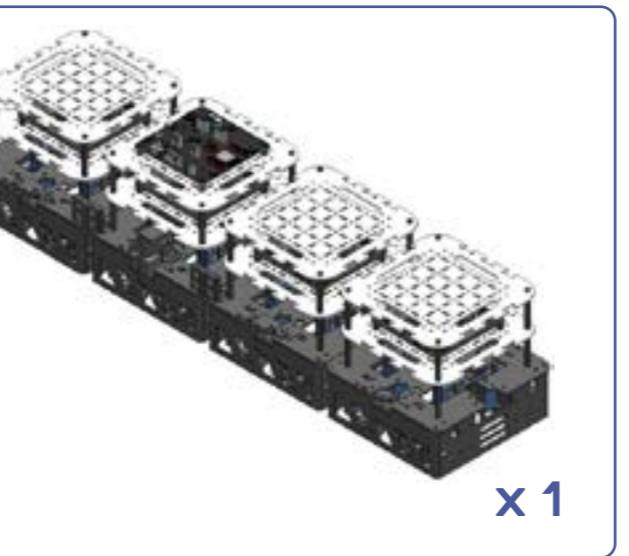


**B13**(connect battery to masterboard)

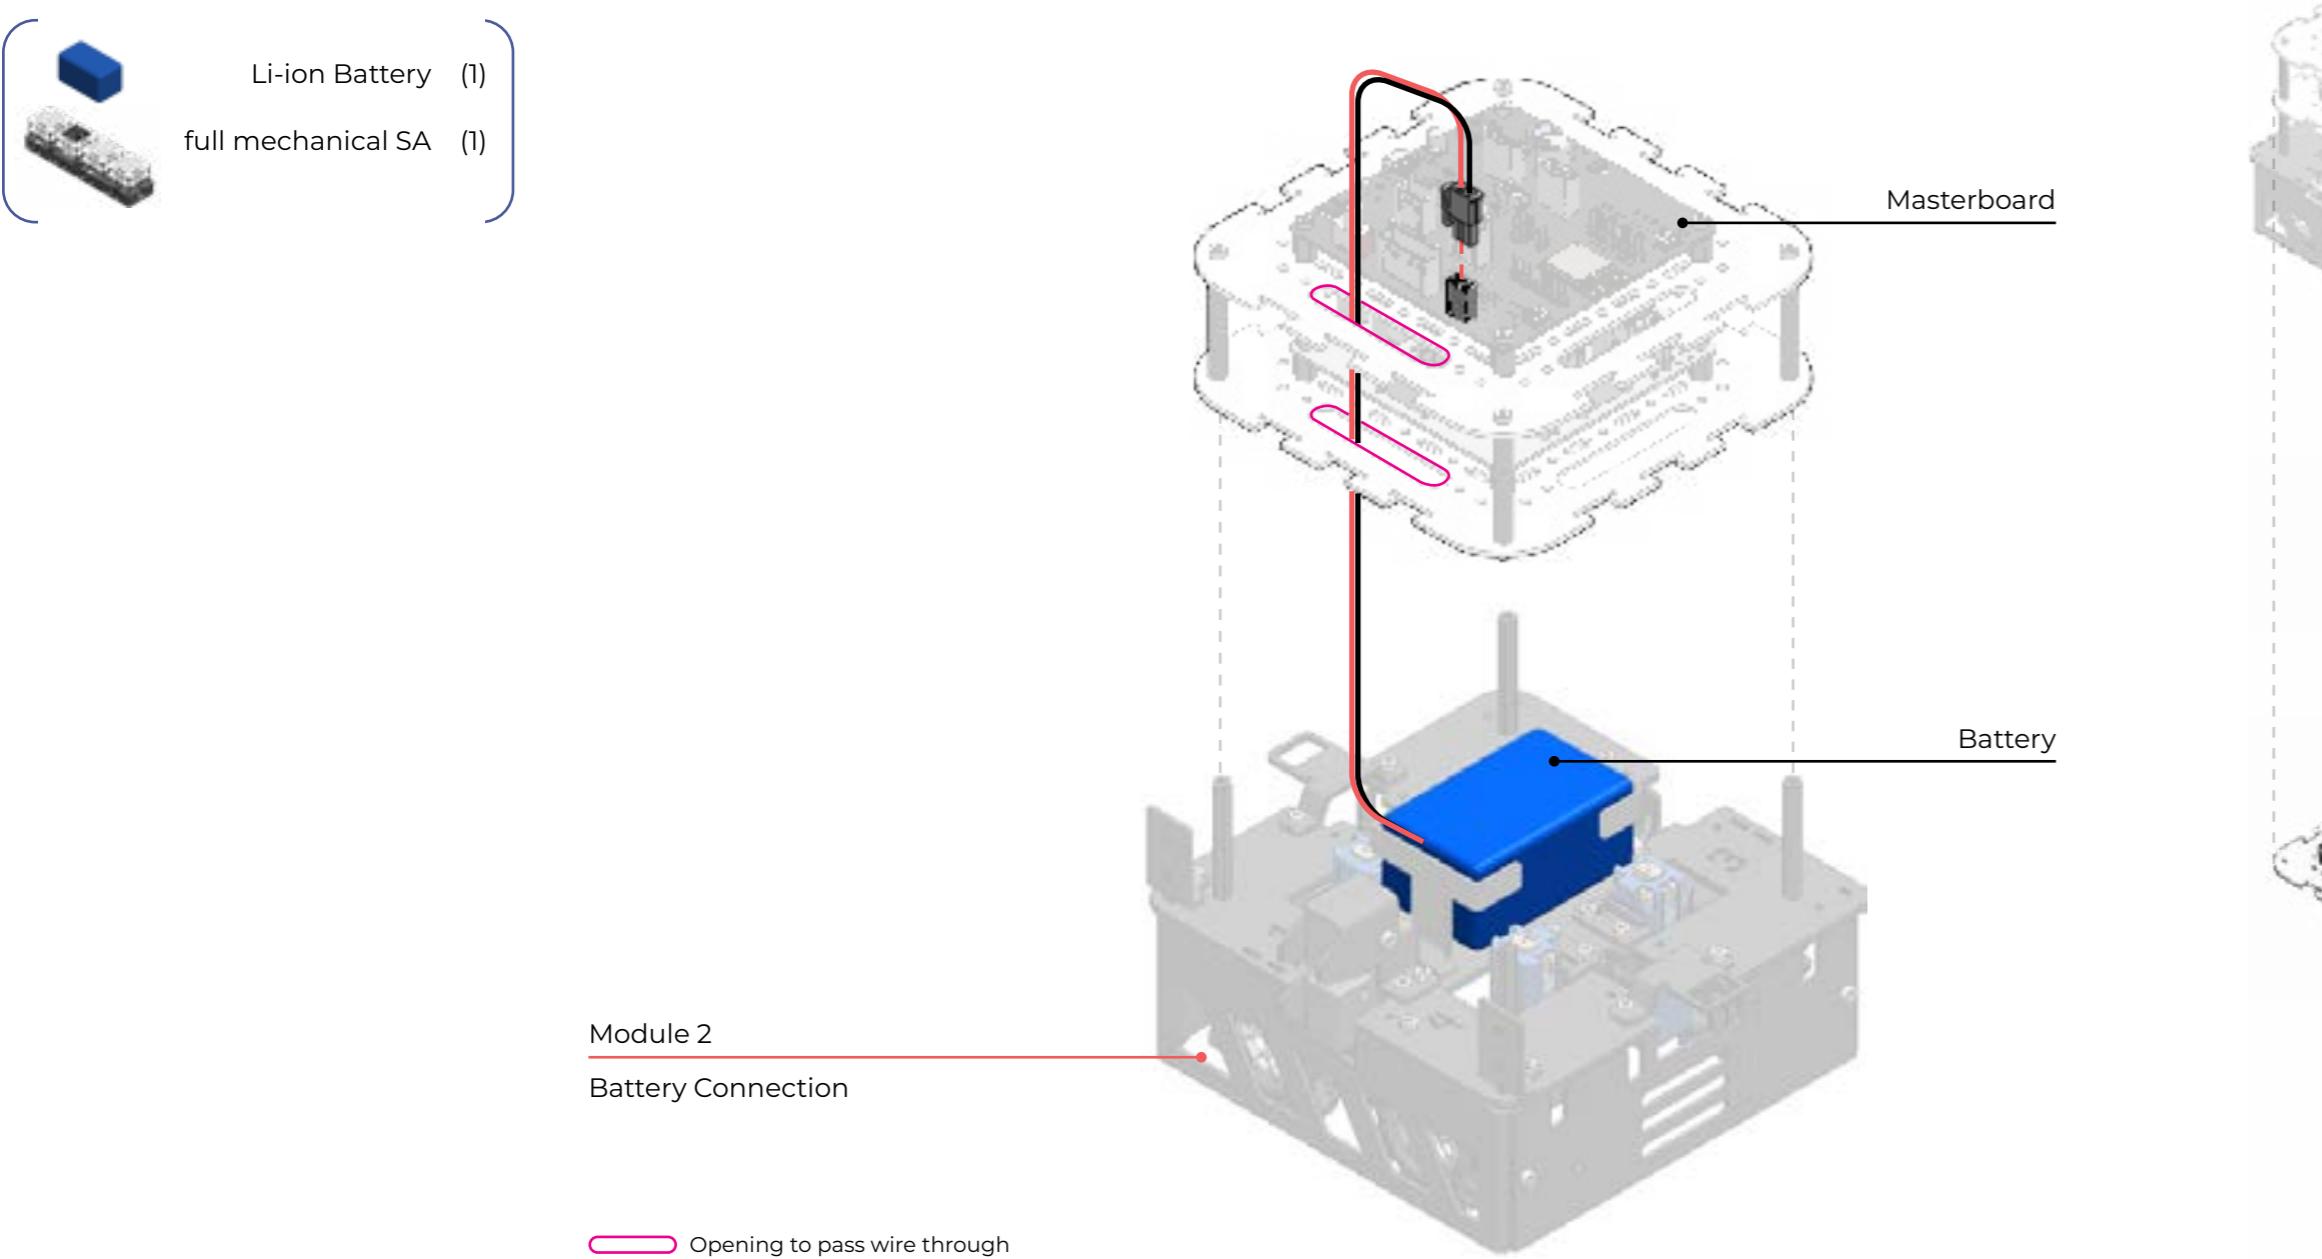

**B14**(check connection)

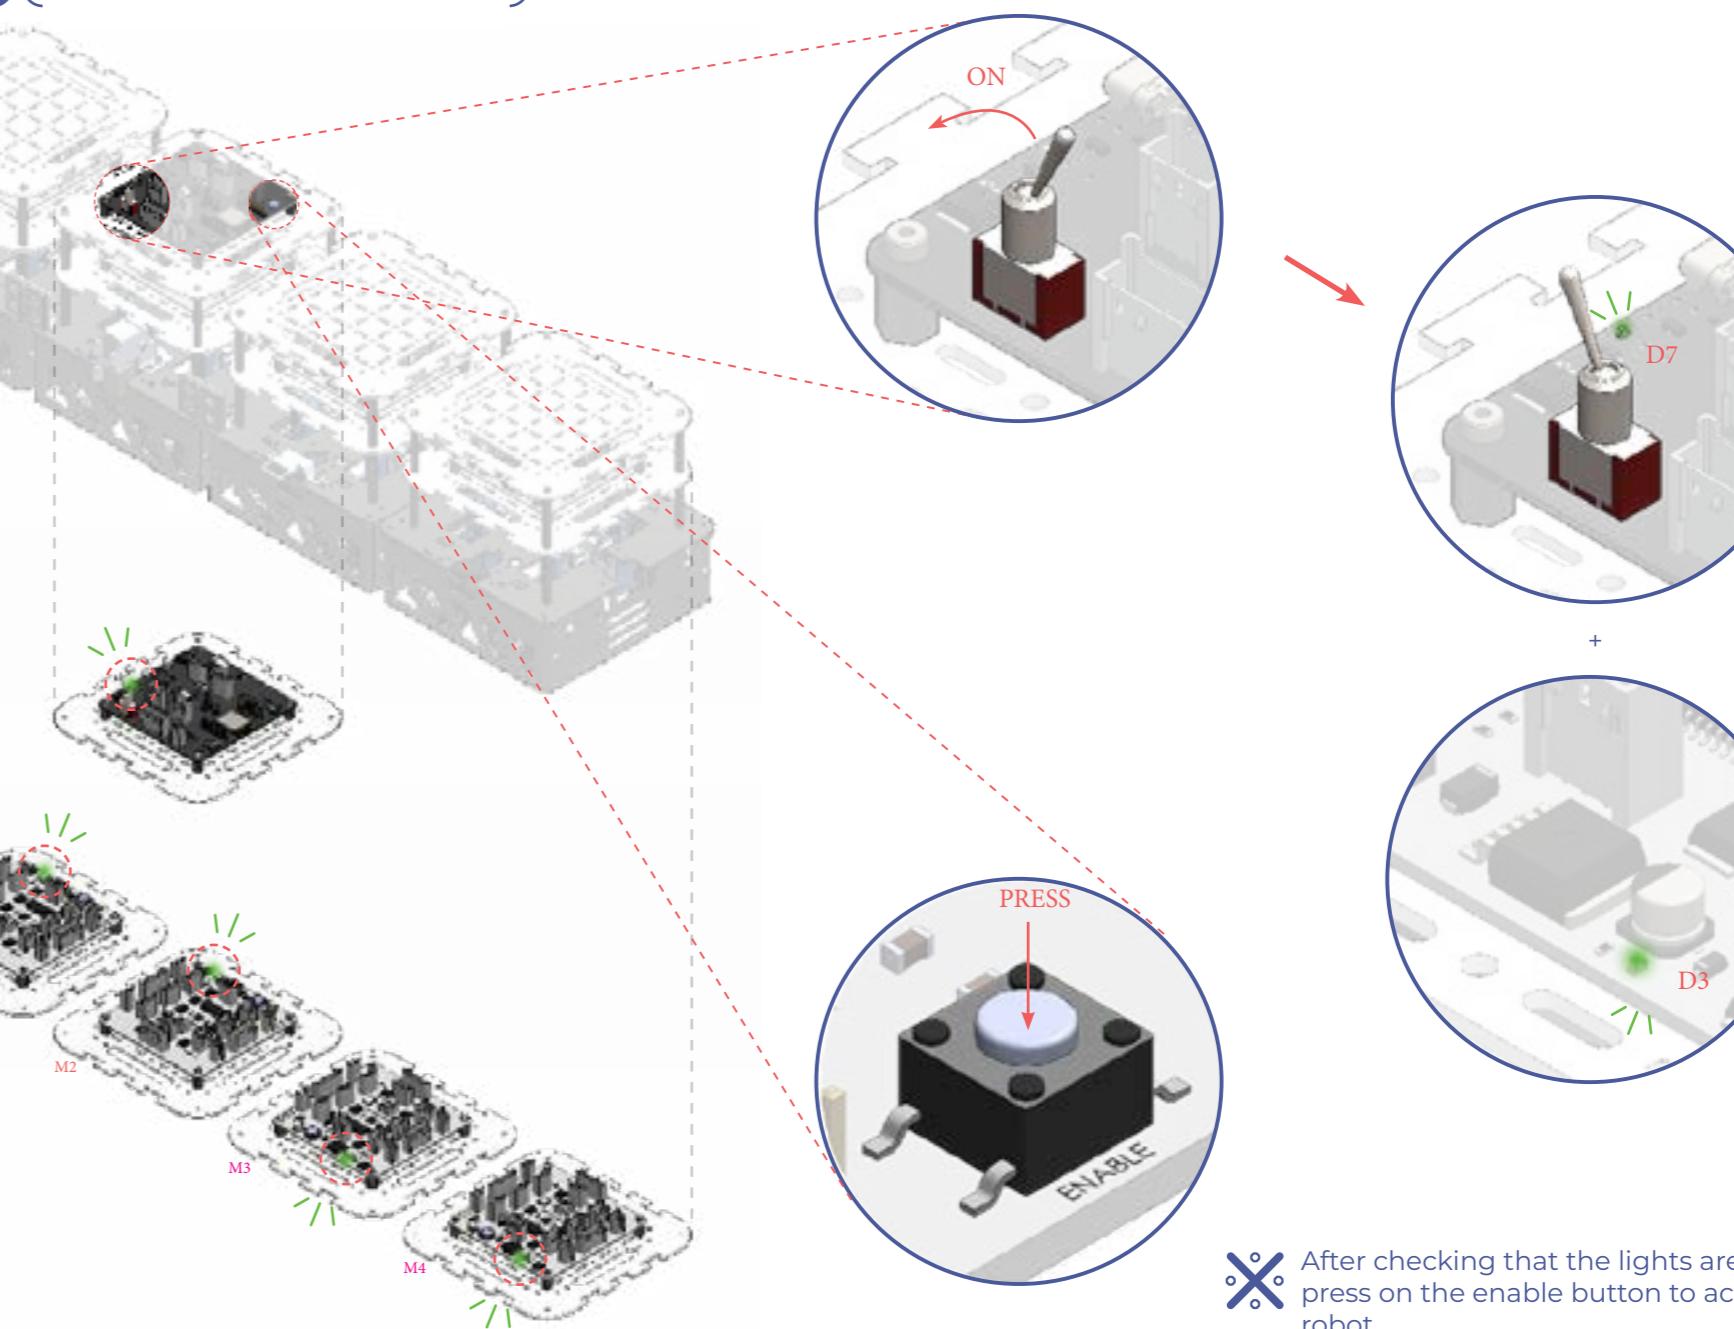

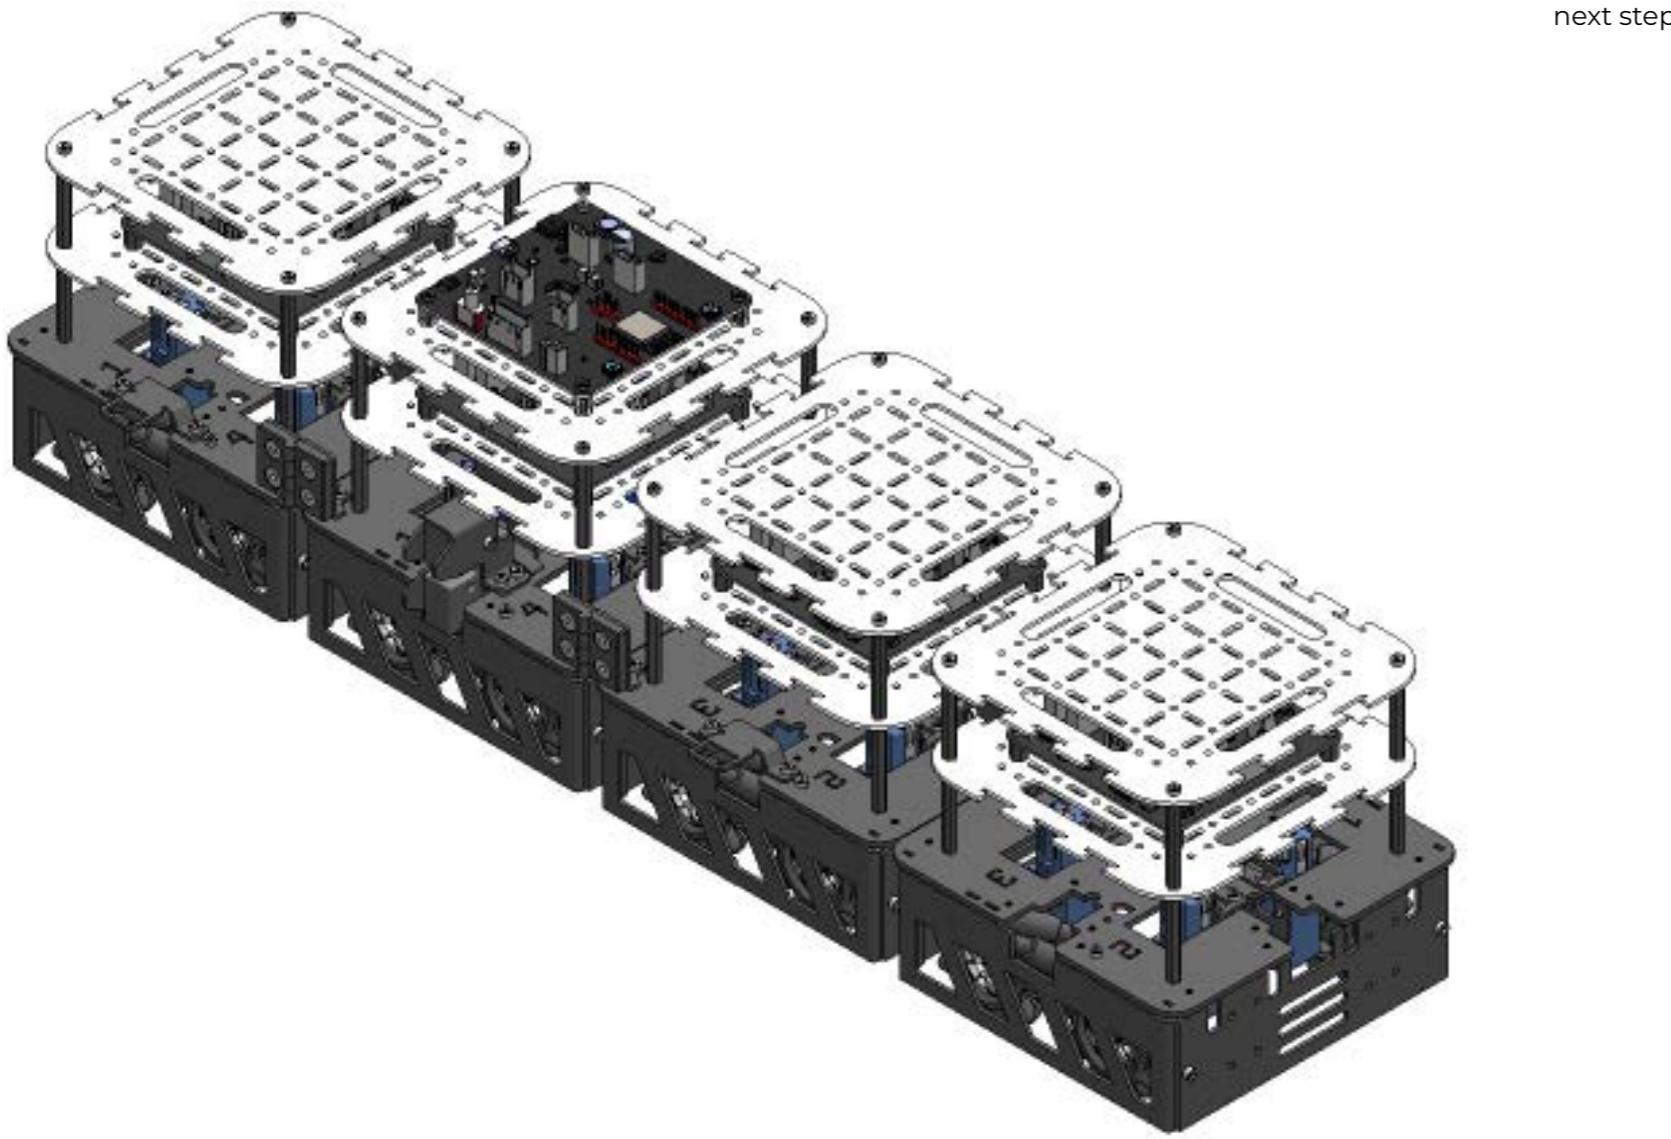

B electronic assembly completed

smorphi is ready!

next step: connect with app

( app )



1. App Download.



Not all devices are compatible now.

See the table below to check if your device is compatible with the Smorphi app.

Smorphi App Information	
Available Platforms	( Android )
Download from	( Google Play )
App Icon & Name	 smorphi
System Requirements	{ Android 6+ Bluetooth 4.0+ }
OS Requirements	

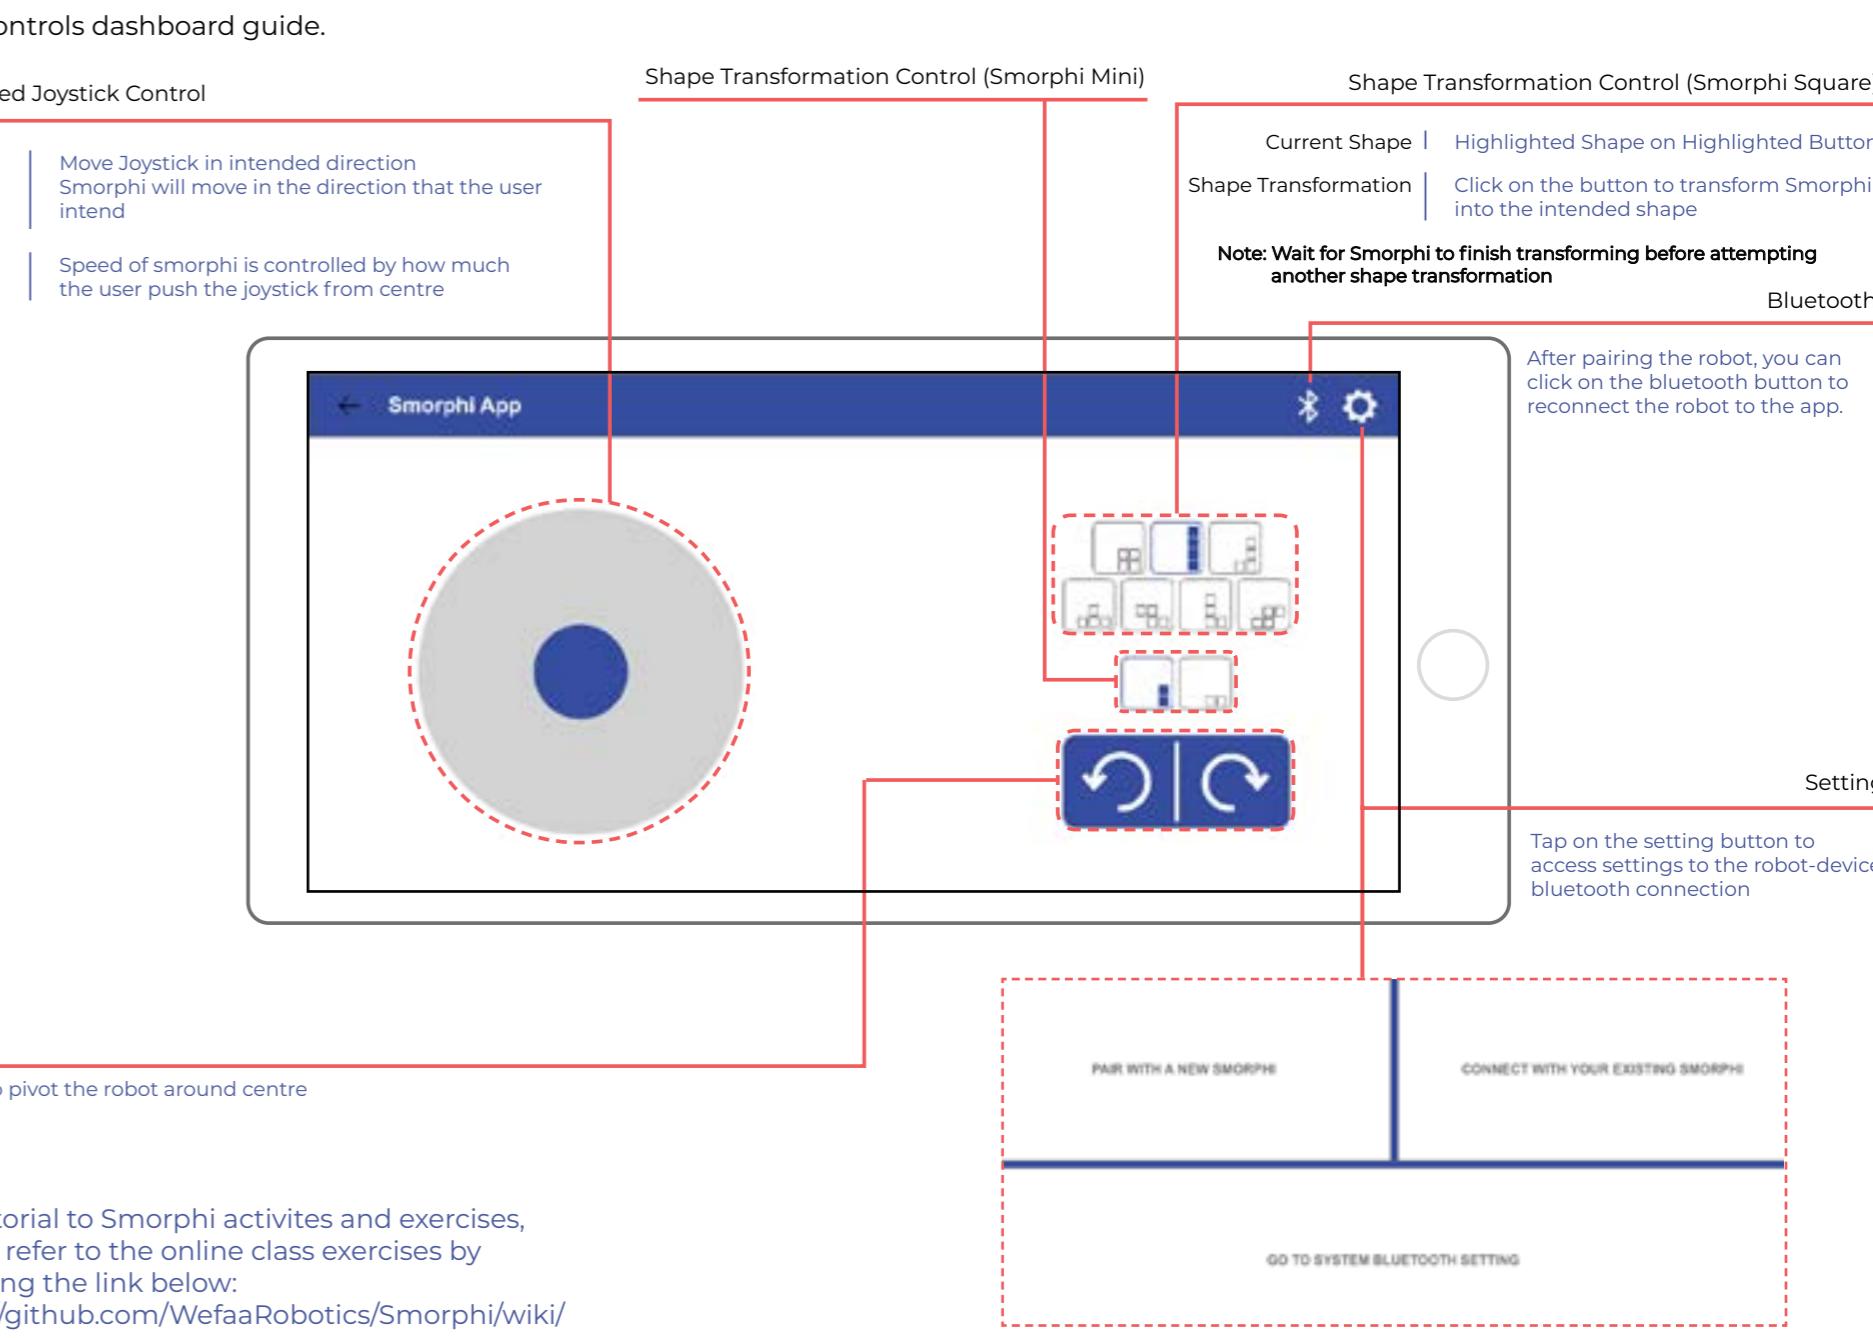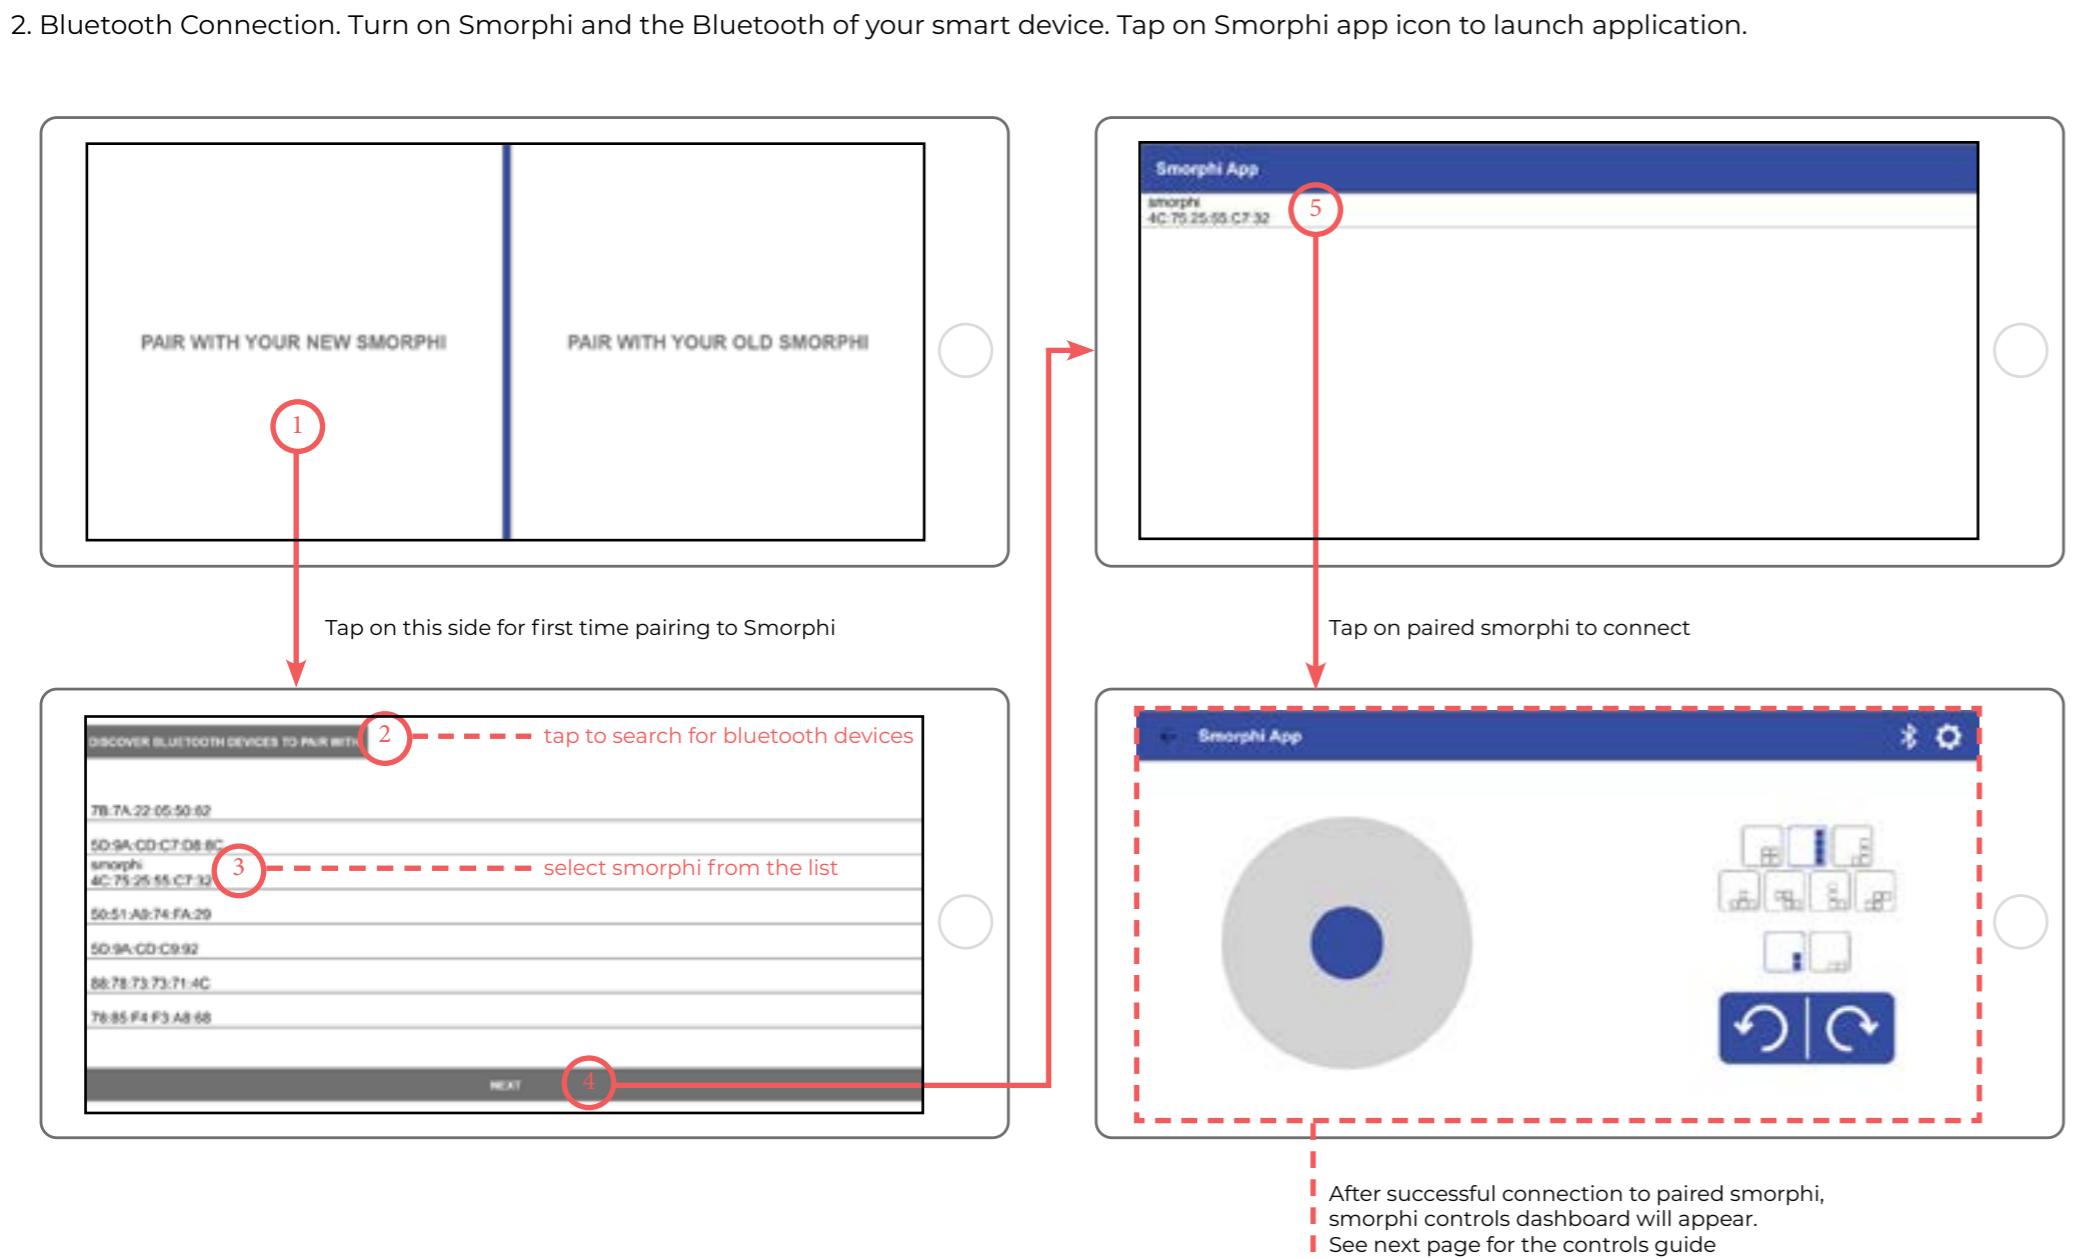

## ( sensors )



sound sensor (x2)

Sound sensor measures volume of sound. Onboard potentiometer\* can be used to tune the range of sensing. Possible applications: sound-triggered shape transformation or sound-triggered locomotion.



temperature sensor (x1)

Temperature sensor measures surrounding temperature, with a range of -55°C to 125°C.



IR sensor (x4)

IR sensors comes with 2 different modes, toggled by the switch onboard the sensor itself. One IR is front-facing and can be used to detect obstacles ahead. The other IR faces the ground and can be used for path tracking.






Pixy2 camera (x1)

Pixy2 Camera is able to colour code, detect and track lines and intersections, and learn to detect objects taught to it.

✖ For sensor related activities and implementation, please refer to the online class exercises by following the link below:  
<https://github.com/WefaaRobotics/Smorphi/wiki/Robot-Exercises>

✳ Tutorial on how to operate the potentiometer can be found by following the link below:  
<https://github.com/WefaaRobotics/Smorphi/wiki/Exercise-6>

## ( sound/IR sensor wiring )

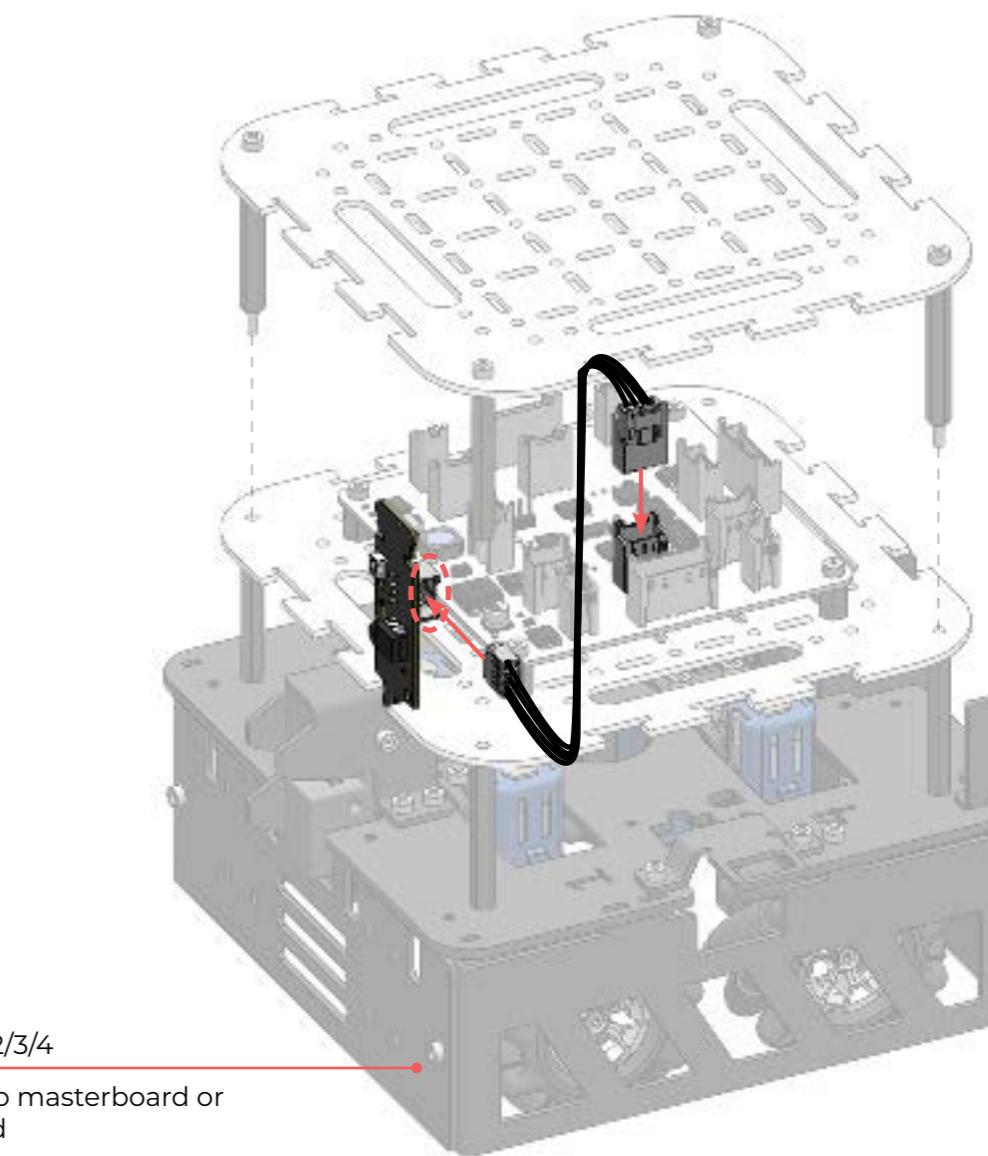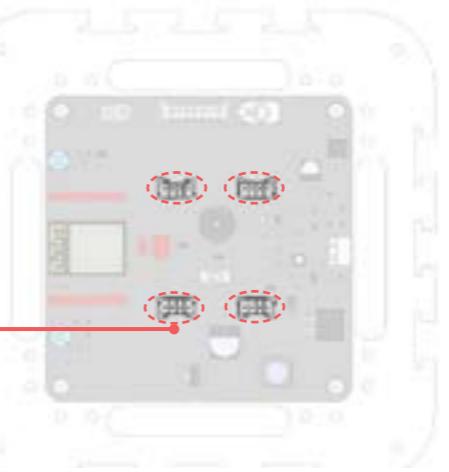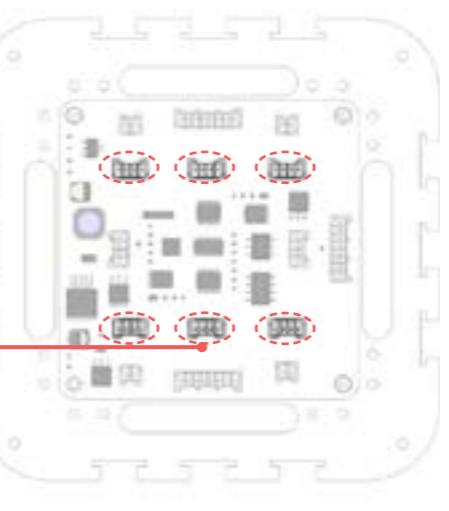


Module 1/2/3/4

Connect to masterboard or slaveboard

✖ Sound/IR sensor can be connected to any of the 6 sensor ports on the slaveboard (top) or any of the 4 sensor ports on the masterboard (bottom).


## ( temperature sensor wiring )

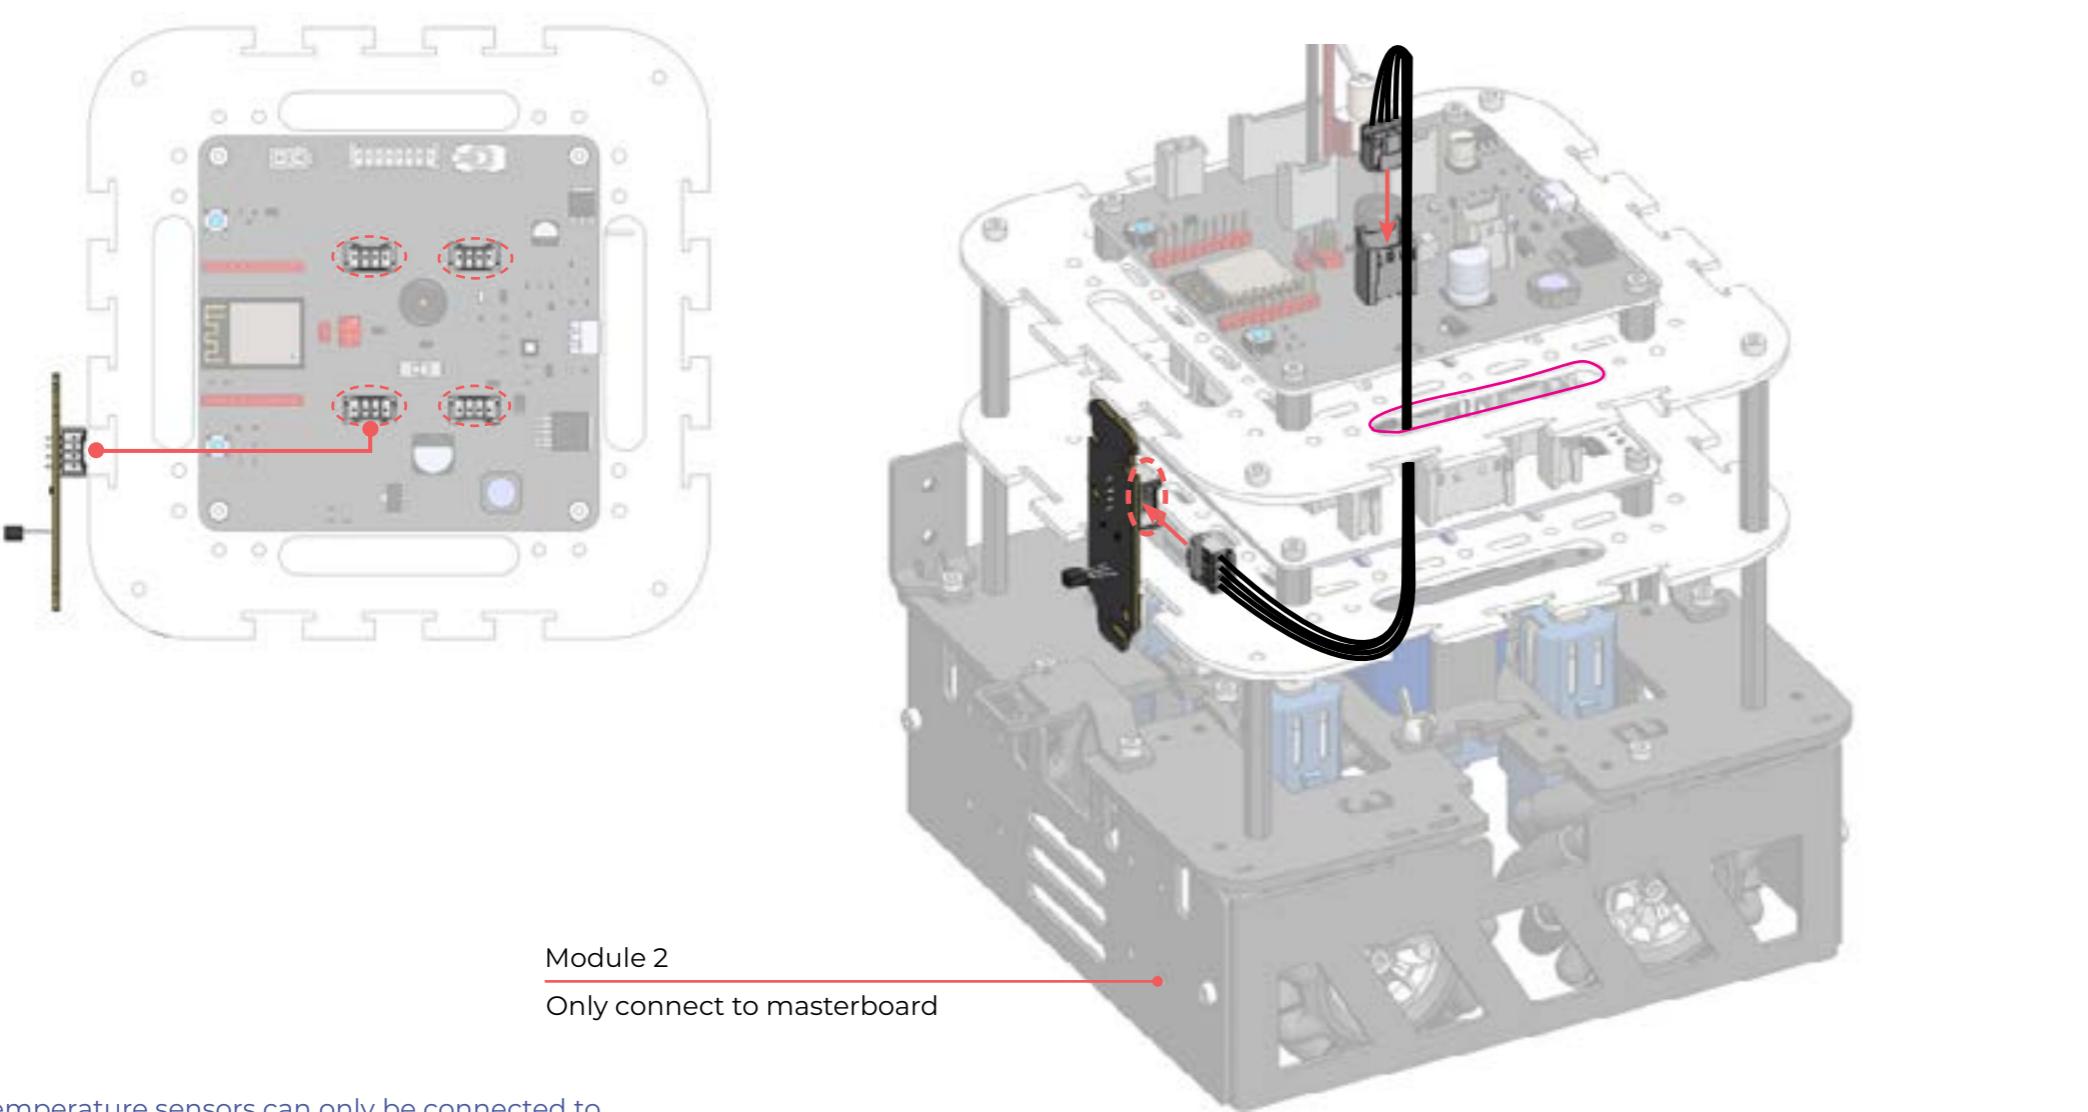

✖ Temperature sensors can only be connected to any of the 4 sensor ports on the masterboard.


✖ Opening to pass wire through

## ( sensor position 1 )

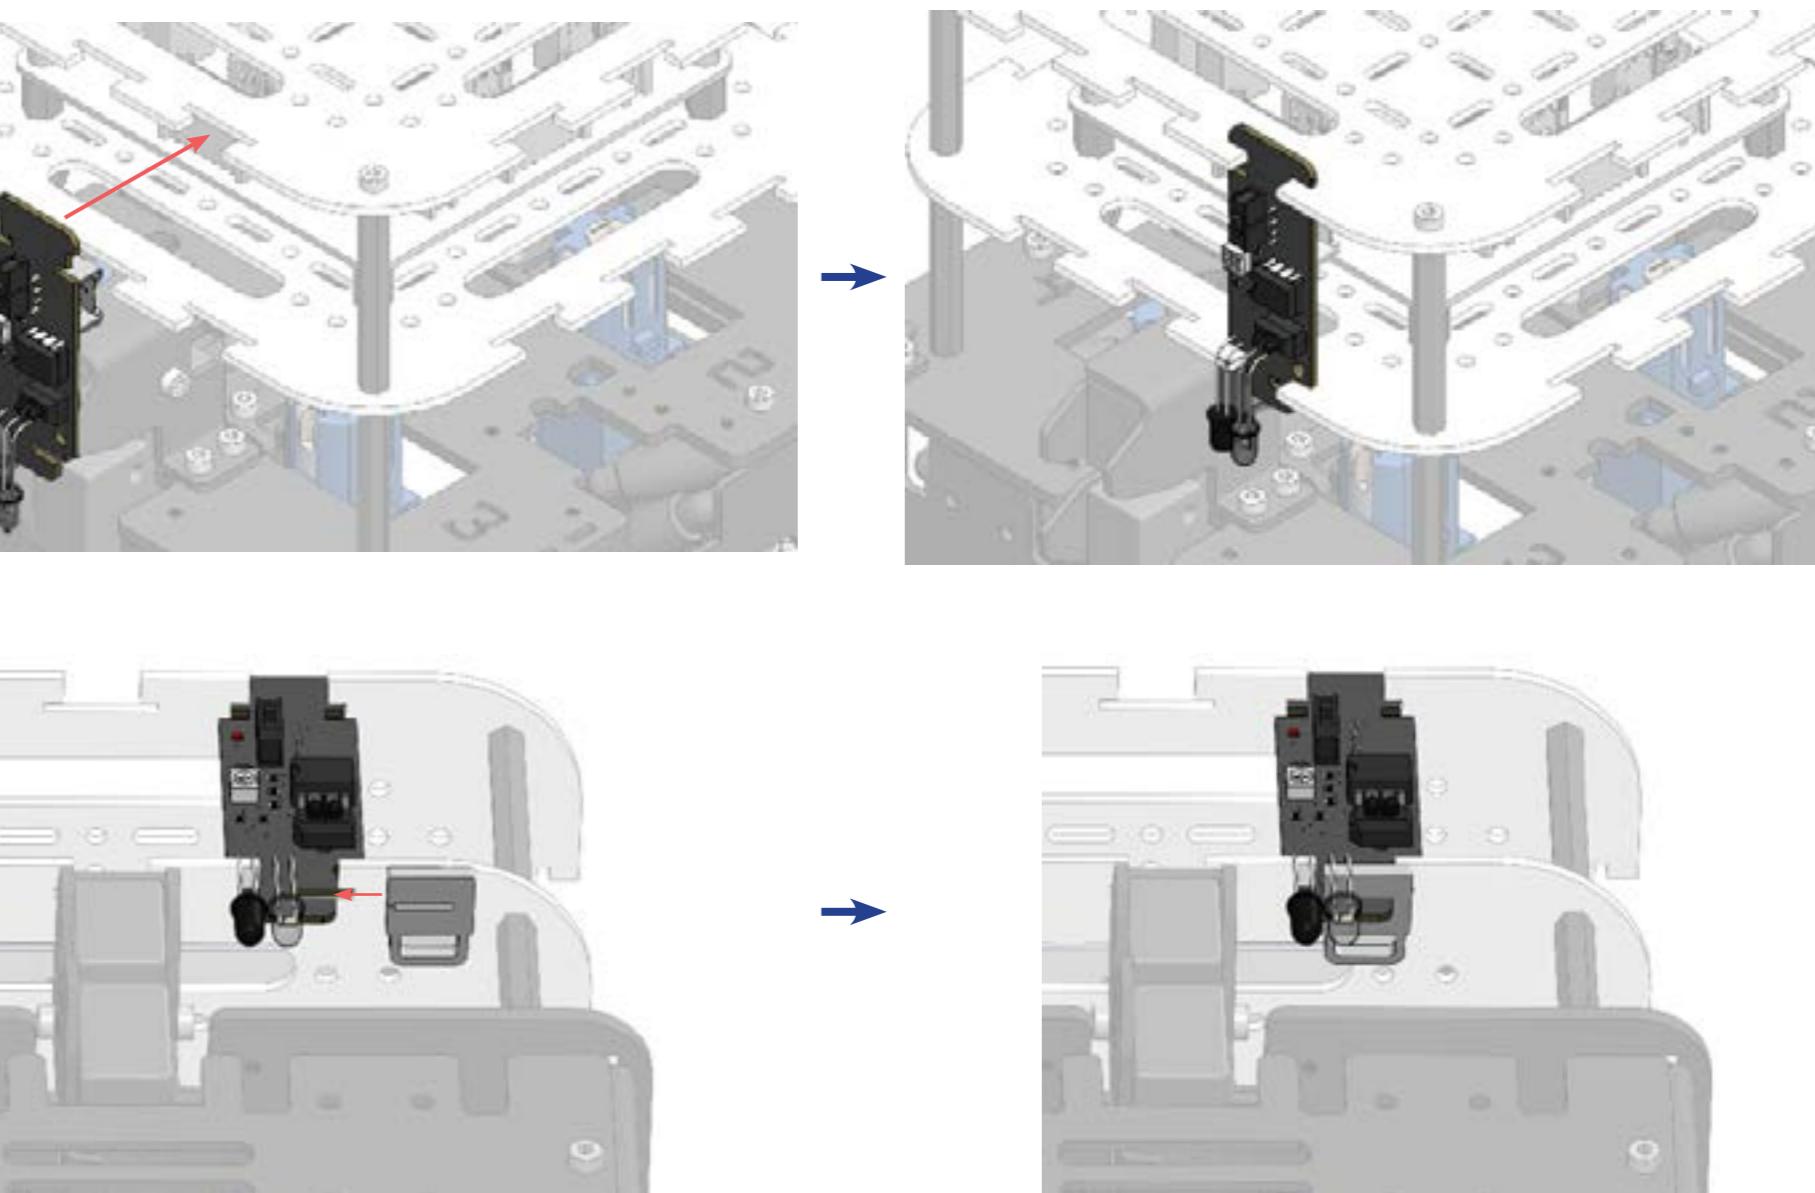


✖ Sensors can be secured to the robot using the sensor lock provided.

## ( sensor position 2 )

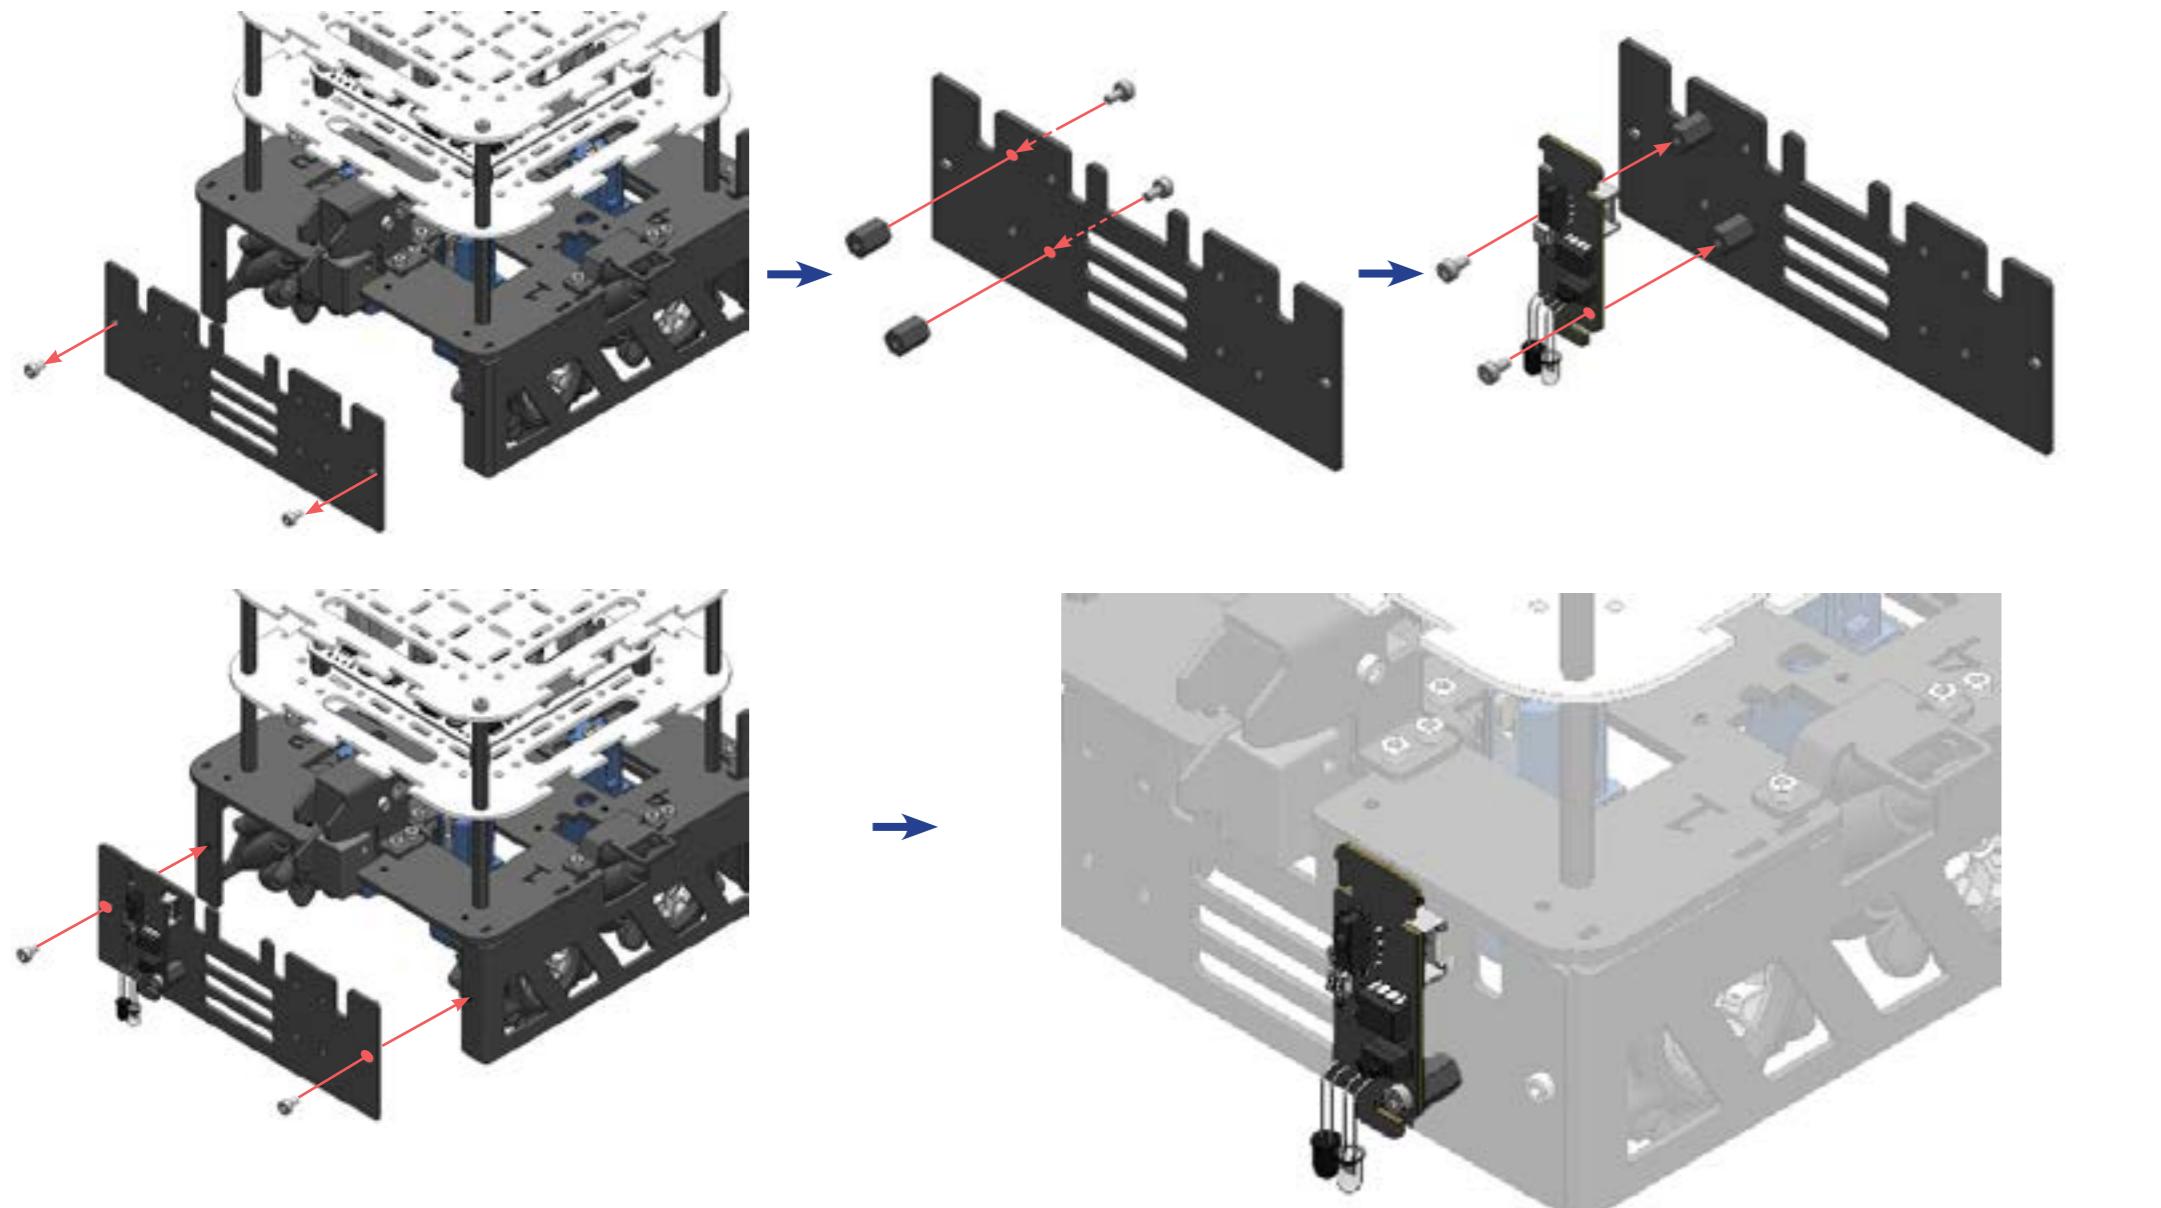


✖ Sensors can also be attached at the skirt panel of the robot.

## ( pixycam wiring )

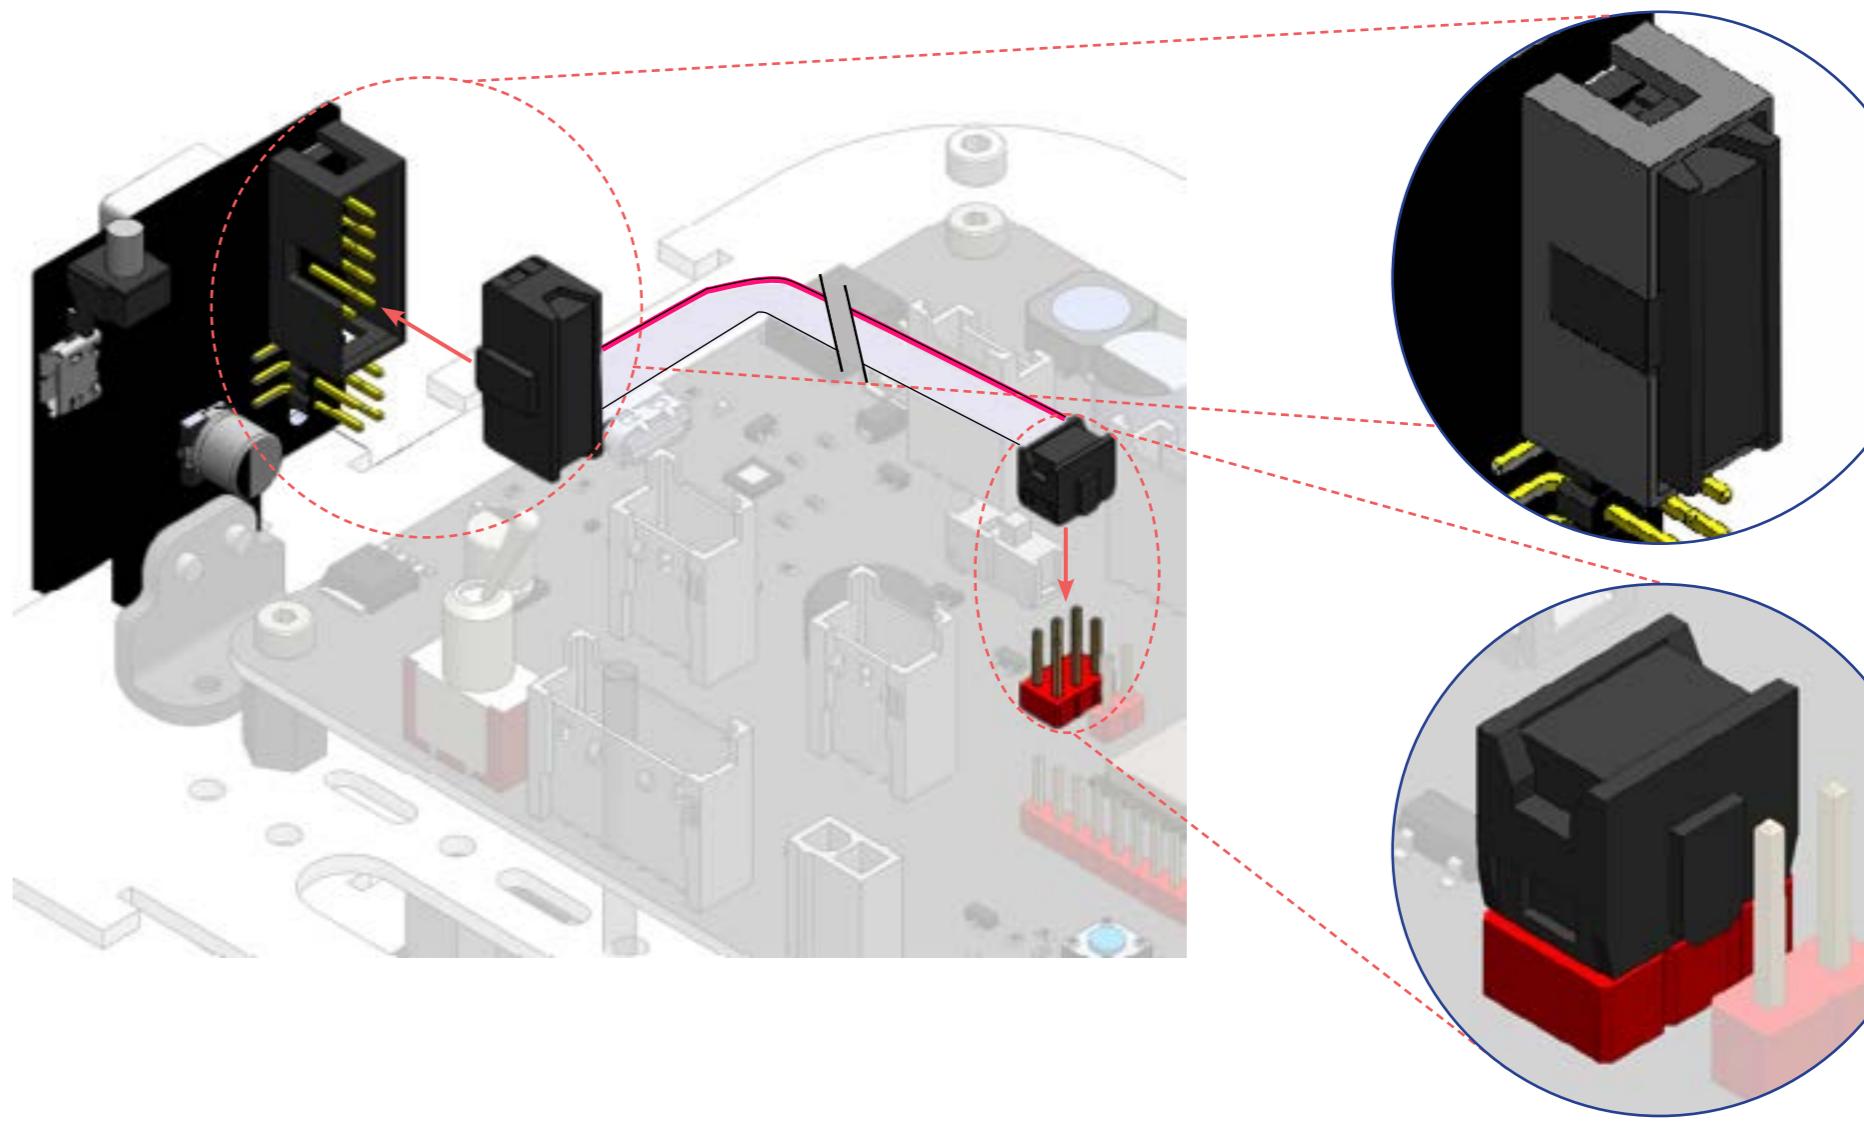

✖ Use the flat ribbon cable to connect the pixycam to the masterboard  
6 pin side to the masterboard  
10 pin side to the pixycam


## ( mounting the pixycam )

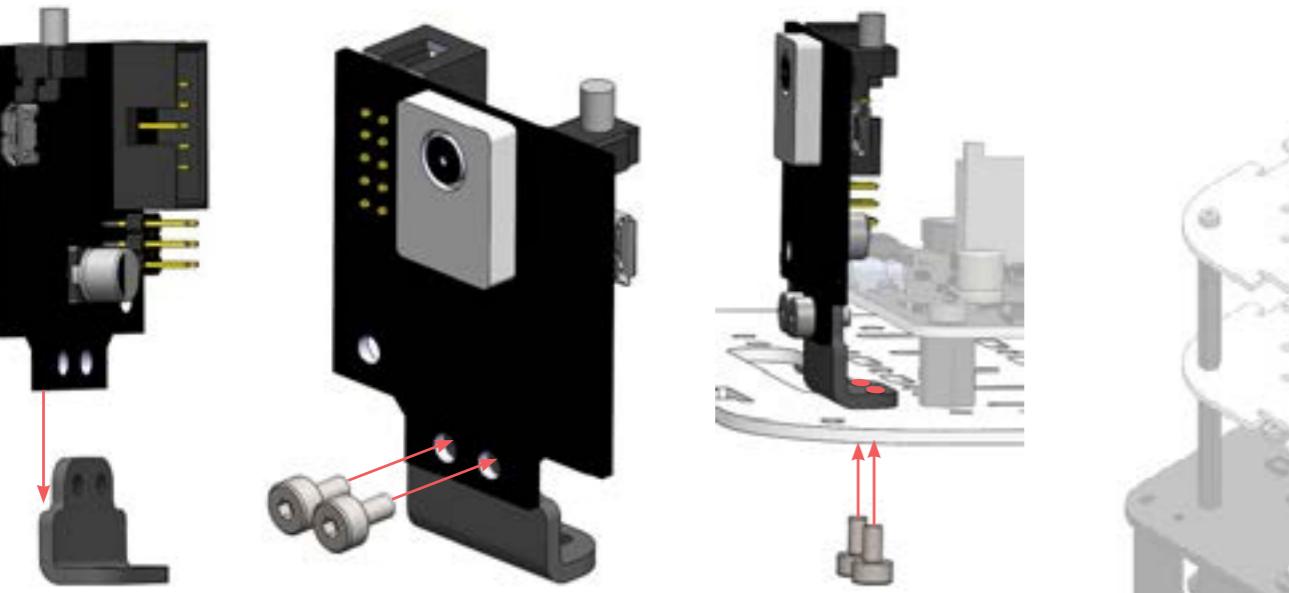


Module 2

Only connect to masterboard

Pixycam can be mounted on anywhere on the acrylic board.

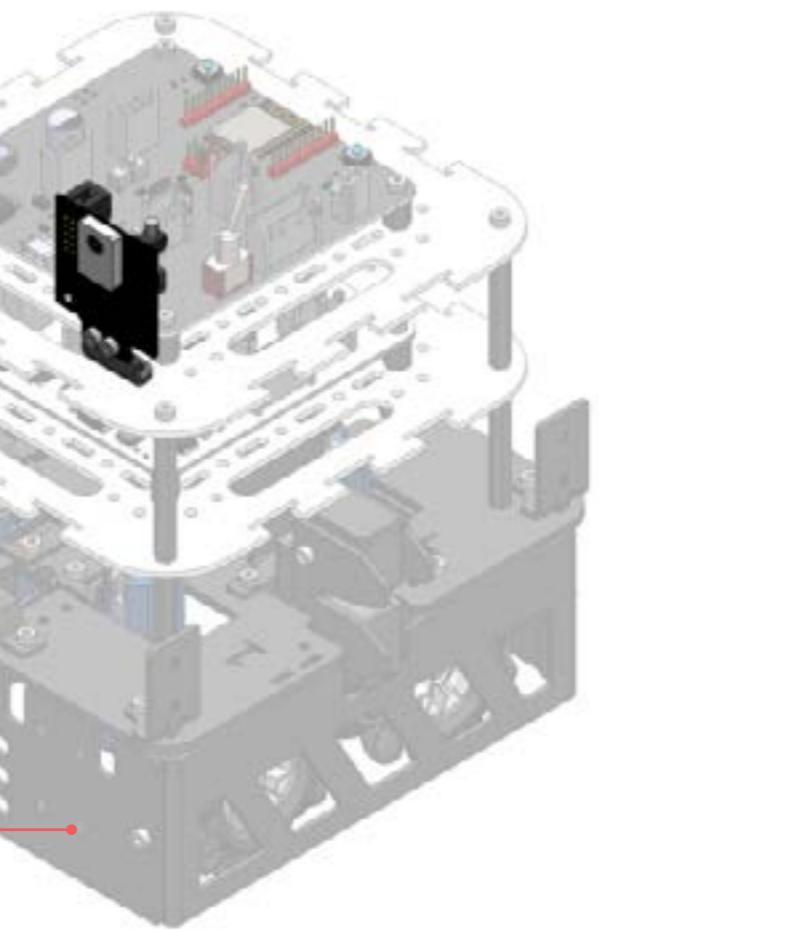


## ( connect to laptop )

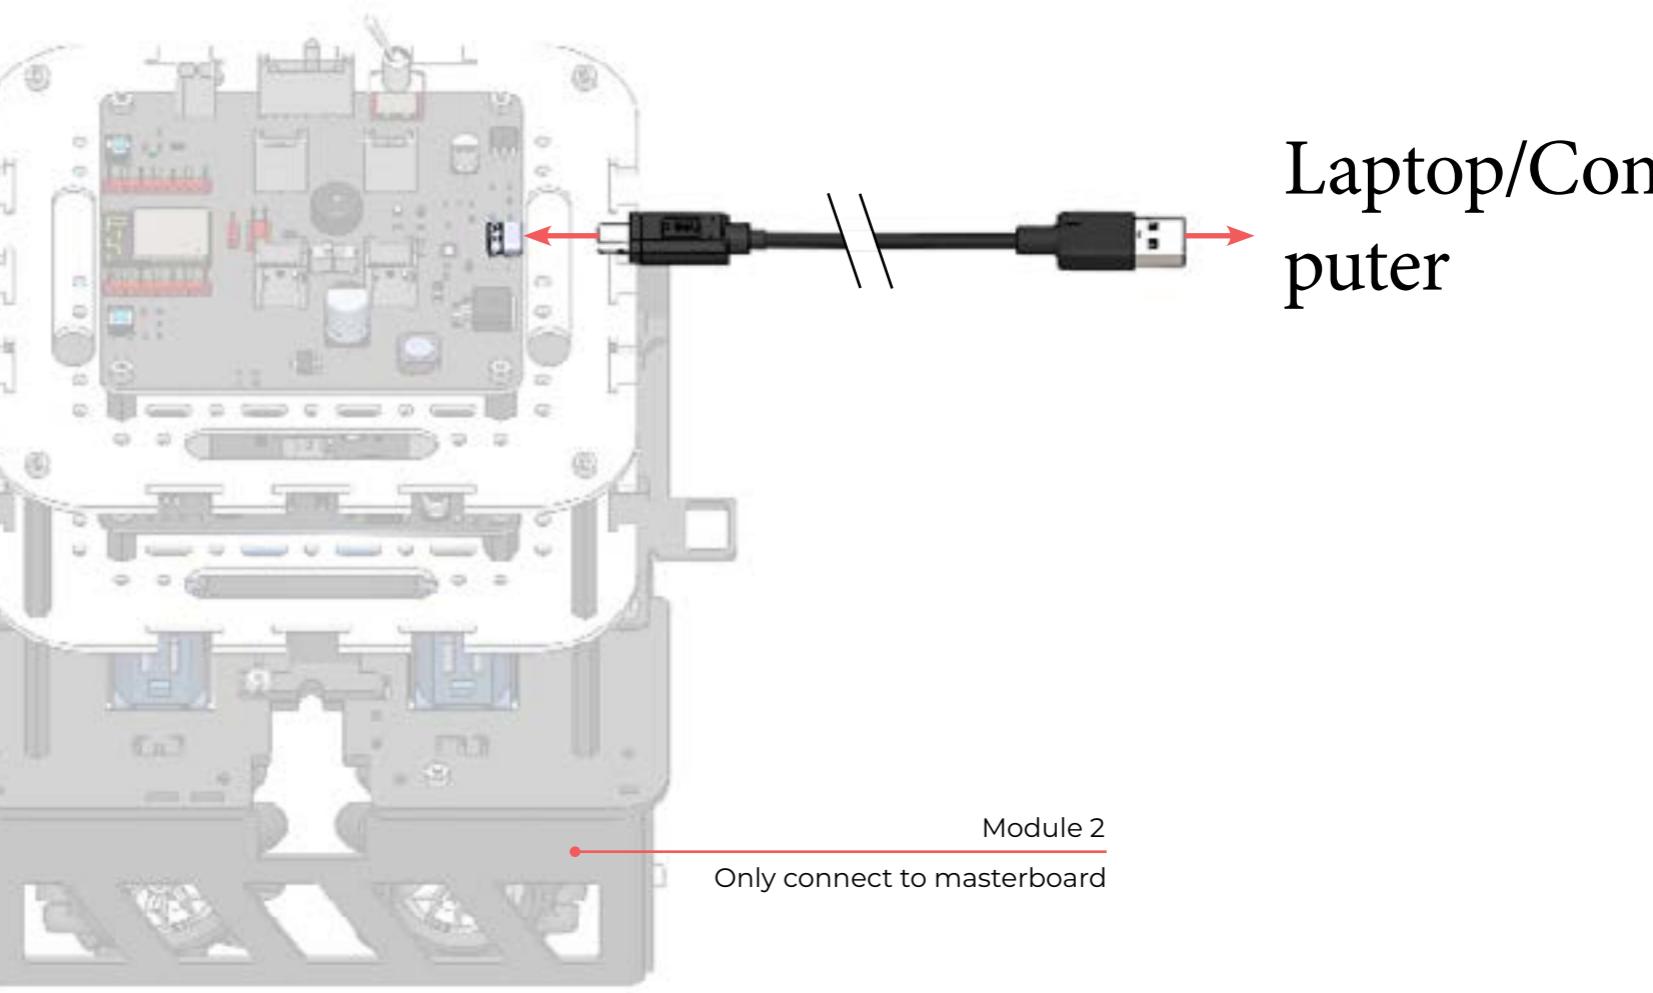

Plug in the USB-C cable as shown above to connect the masterboard to the computer. It allows us to upload our code from our computer onto the masterboard.

# ( charging )

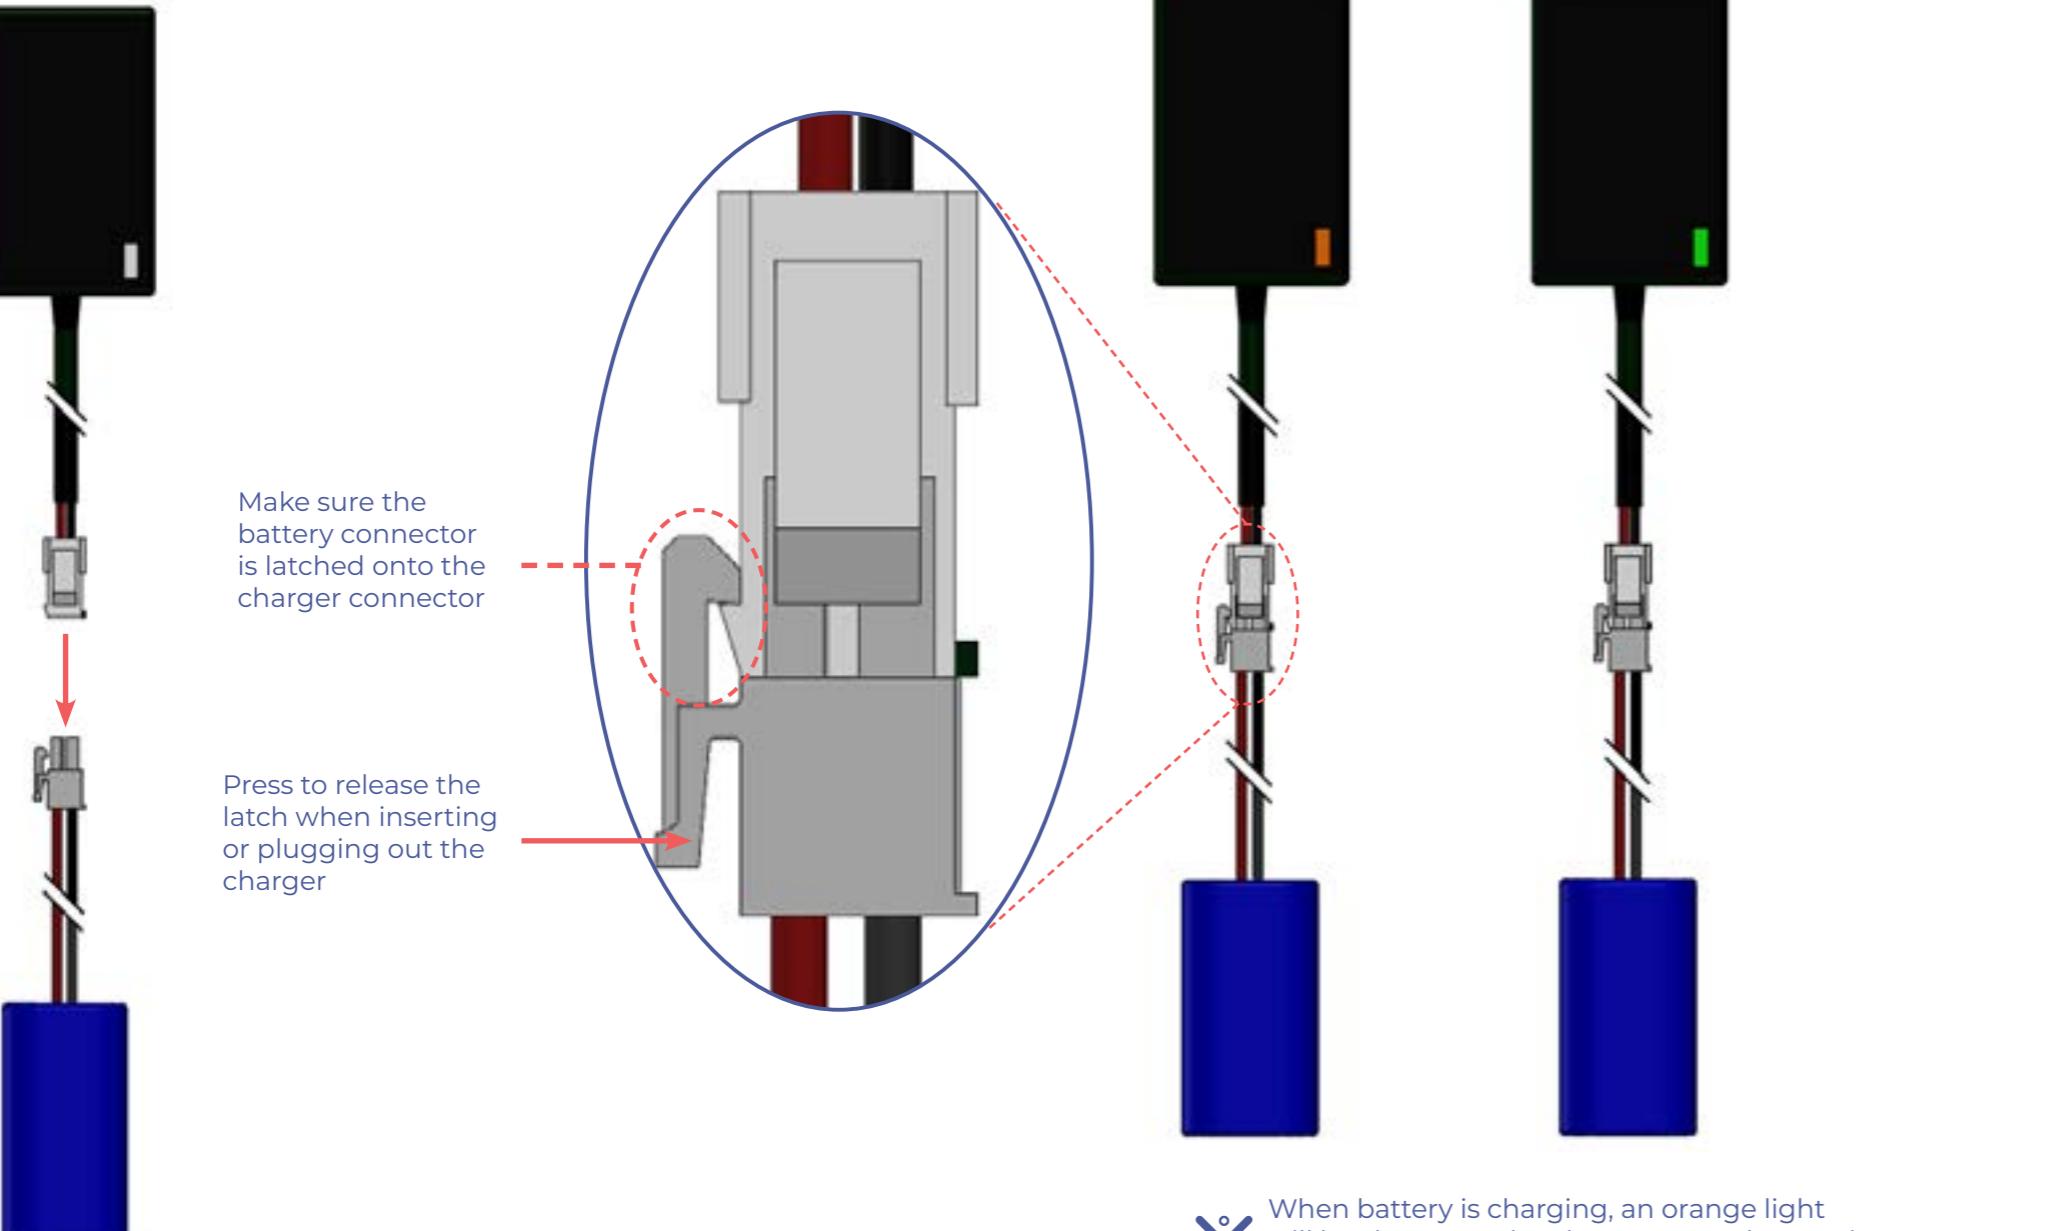

 When battery is charging, an orange light will be shown on the charger. Once battery is fully charged, a green light will be shown

